

Hustler® Parts Manual



200 South Ridge Road

Hesston, Kansas

67062



NOTICE OF REQUIREMENT OF SPARK ARRESTER MUFFLER

This equipment may create sparks that can start fires around dry vegetation. California Public Resources Code Section 4442.6 provides that it is unlawful to use or operate an internal combustion engine on any forest-covered, brush-covered, or grass-covered land unless the engine is equipped with a spark arrester maintained in effective working order. A spark arrester is a device constructed of nonflammable materials specifically for the purpose of removing and retaining carbon and other flammable particles over 0.0232 of an inch in size from the exhaust flow of an internal combustion engine that uses hydrocarbon fuels or which is qualified and rated by the United States Forest Service. Other states or federal areas may have similar laws. The Operator Should Contact Local Fire Agencies For Laws or Regulations Relating to Fire Prevention Requirements. THIS EQUIPMENT DOES NOT HAVE A SPARK ARRESTER AND YOU SHOULD CONTACT YOUR AUTHORIZED DEALER FOR THE PURCHASE OF A SPARK ARRESTER.

Inspect spark arrester daily; replace every 500 hours or as needed.

The Engine Owner's Manual provides information regarding the U.S. Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance and warranty.

Keep Engine Owner's Manual with your unit. Should the Engine Owner's Manual become damaged or illegible, replace immediately. Replacements may be ordered per the information found in the Product Information section of the owner's manual.

Federal law and California State law prohibit the following acts or the causing thereof:

1. The removal or rendering inoperative by any person other than for purposes of maintenance, repair, replacement, of any device or element of design incorporated into any equipment for the purposes of emissions control prior to or after its sales or delivery to the ultimate purchaser or while it is in use, or
2. The use of the equipment after such device or element of design has been removed or rendered inoperative by any person.

General Information	1
Frame & Handlebar Section	
Frame Rivet Nut Installation	3-1
Upper H-Bar Assembly	3-2
Lower H-Bar Assembly	3-3
H-Bar Installation	3-4
Console Assembly	3-5
Hydraulic Section	
Hydraulic Installation—37"	4-1
Hydraulic Installation—48"	4-2
Hydraulic Hose Routing	4-3
Pump Installation	4-4
Pump Drive Assembly	4-5
Engine & Fuel Section	
Engine Installation	5-1
Fuel System	5-2
Deck Section	
37" Deck Assembly	6-1
37" Deck Pulley Assembly	6-2
37" Deck Cover	6-3
48" Deck Assembly	6-4
48" Deck Pulley Assembly	6-5
48" Deck Covers	6-6
Deck Carrier Frame Installation	6-7
Deck Carrier Assembly	6-8
Spindle Housing Assembly	6-9
Decal Section	
37" Decal Group	7-1
48" Deck Decal Group	7-2
Mower Decal Group	7-3
Wheels Section	
Drive Wheel Assembly—37"	8-1
Drive Wheel Assembly—48"	8-2
Front Wheel Assembly	8-3

General Information

Note: When ordering parts, you must use the part number as shown for each part, not the index number. Always give the model and serial number to your parts and service representative.

Note: Items sold in bulk such as seals and hoses are sold by the foot.

Using This Manual

This manual is part of a service package for the Hustler® mowers. Use of this manual in conjunction with other Hustler® mower and component manuals will provide the information necessary to service and maintain Hustler® mowers.

This Parts Manual provides a complete parts listing for the unit. Use this manual when ordering parts. Illustrations used were current at the time of printing, but subsequent production changes may cause your machine to vary slightly in detail. Excel Industries, Inc. reserves the right to redesign and change the machine as deemed necessary, without notification. If a change has been made to your machine which is not reflected in this parts manual, see your authorized dealer for current information and parts.

The Service Manual is a service guide for use by Service Technicians. It provides the necessary information needed to perform normal maintenance requirements on these units.

The Operator's Manual provides fundamental operational information and operational safety that is needed when operating the mower.

The component manuals are furnished by the various manufacturers to be used for the troubleshooting and servicing of their products.

Hardware Description Codes & Abbreviations

The following codes are used throughout this parts manual. Refer to this list when ordering parts.

 
ABBREVIATION	DESCRIPTION	ABBREVIATION	DESCRIPTION
CB	CARRIAGE BOLT	MB	MACHINE BUSHING
CE	CLEVIS PIN	MS	MACHINE SCREW
CN	CLIP NUT	NT	NUT
CP	COTTER PIN	SC	SELF TAPPING CAP SCREW
CS	CAP SCREW	SH	SOCKET HEAD
CW	CUP WASHER	SB	SHOULDER BOLT
FDRW	FENDER WASHER	SS	SET SCREW
FW	FLAT WASHER	OD	OUTSIDE DIAMETER
HX	HEX HEAD	ID	INSIDE DIAMETER
LW	LOCK WASHER	WN	WELD NUT

Standard Torques


The following chart lists the standard torque values for the threaded fasteners found in this manual. Torque all cap screws, nuts and set screws to these values unless a different torque is shown in the Notes section next to the fastener.

SIZE	FT-LBS	N•M	SIZE	FT-LBS	N•M
.250	8.2	11.1	M3	1	1.3
.312	17	23	M4	2.2	3
.375	30	40	M5	4.5	6.1
.438	48	65	M6	7.7	10.4
.500	73	99	M8	18.5	25
.562	105	143	M10	37	50
.625	145	200	M12	64	87
.750	260	350	M14	80	108.5
.875	420	565	M16	160	215
1.00	625	850	M20	320	435
			M24	555	750

Cette page intentionnellement laissée vierge

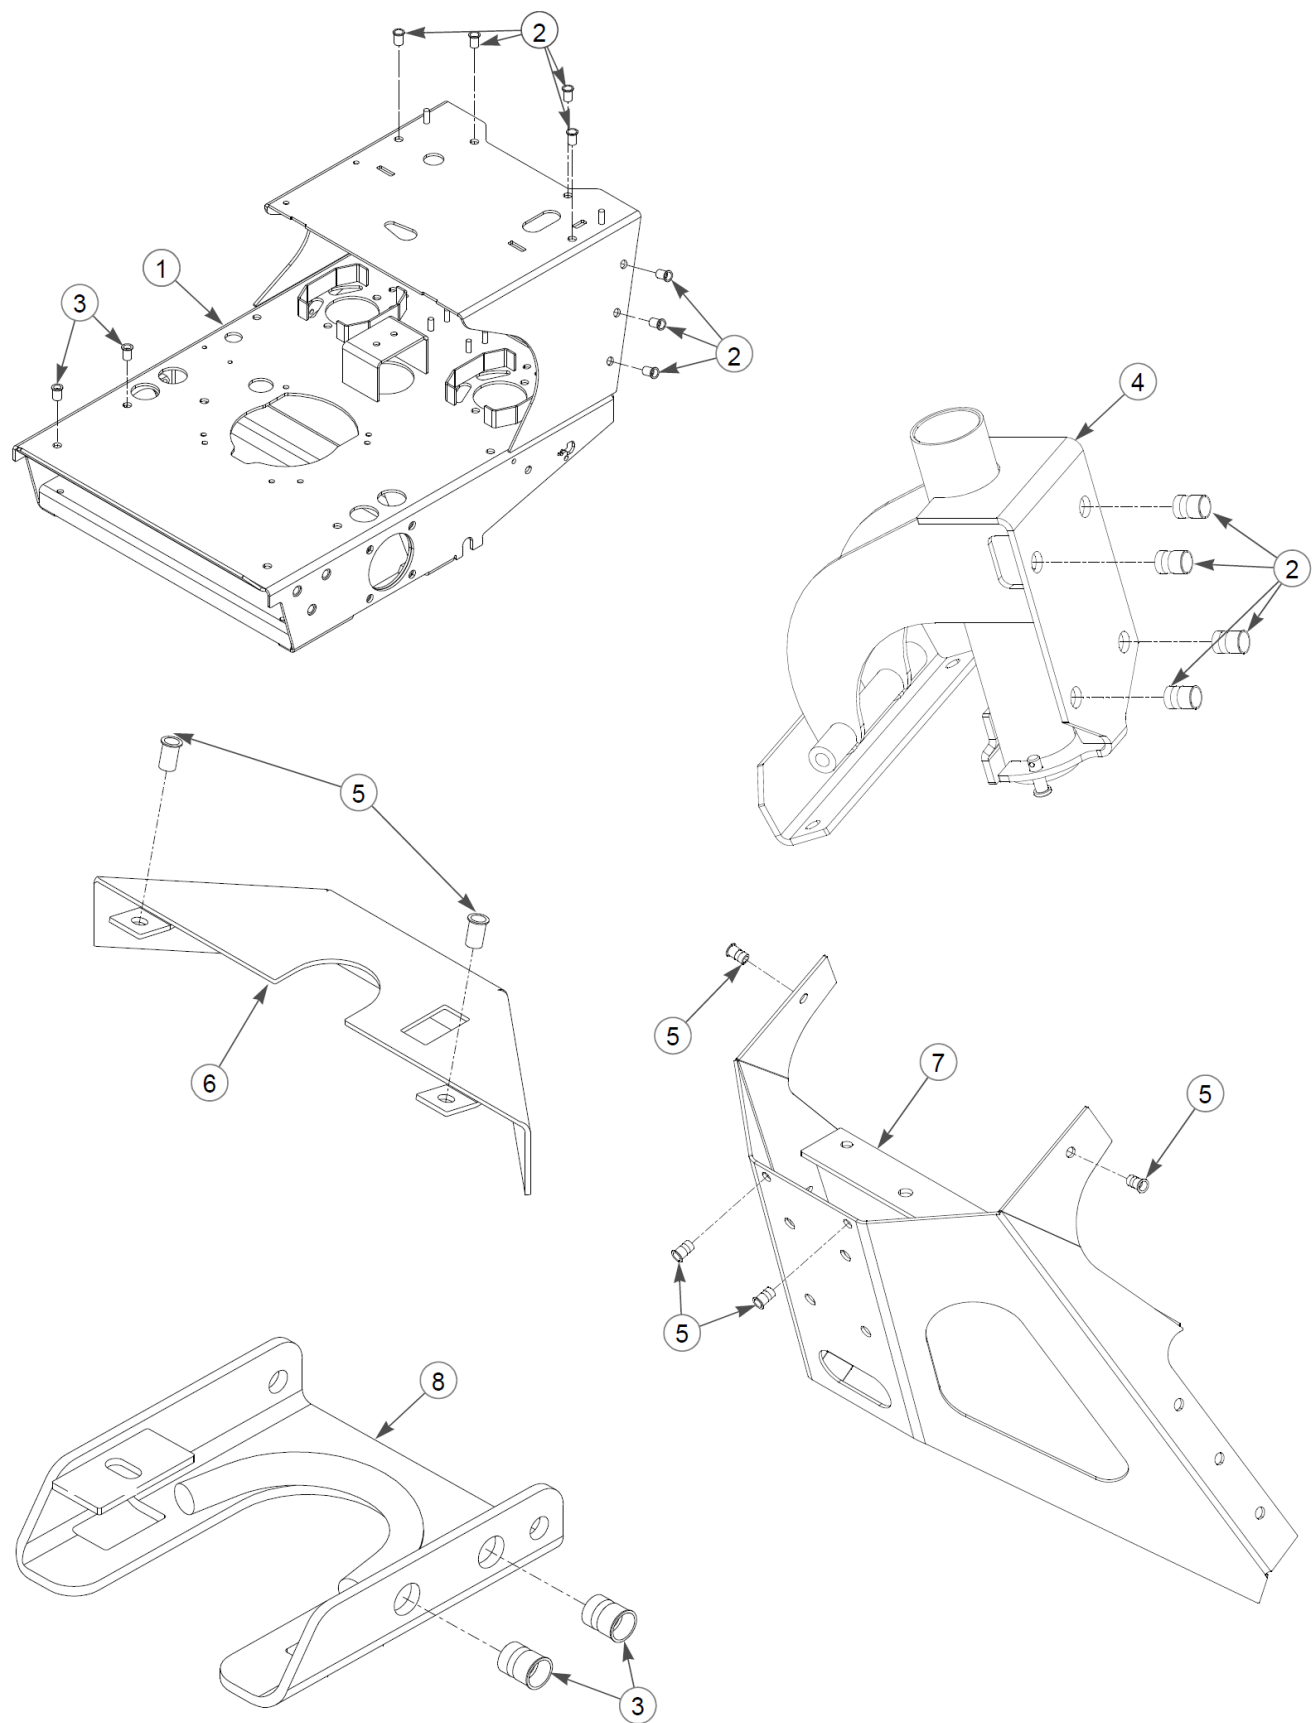


Élément	Numéro de pièce	Qté	Nom
1	335273	1	FRAME W/A, HYDRO WB
2	808493	14	RIVET NUT, 3/8-16 THREA
3	808485	6	RIVET NUT, 5/16-18 THRE
4	330498	1	STEERING PIVOT W/A
5	808477	6	RIVET NUT, 1/4-20 THREA
6	340182	1	PANEL W/A, LOWER CONSOLE
7	340174	1	CONSOLE SUPPORT W/A WB
8	341693	1	NEUTRAL LOCK W/A (PLATE

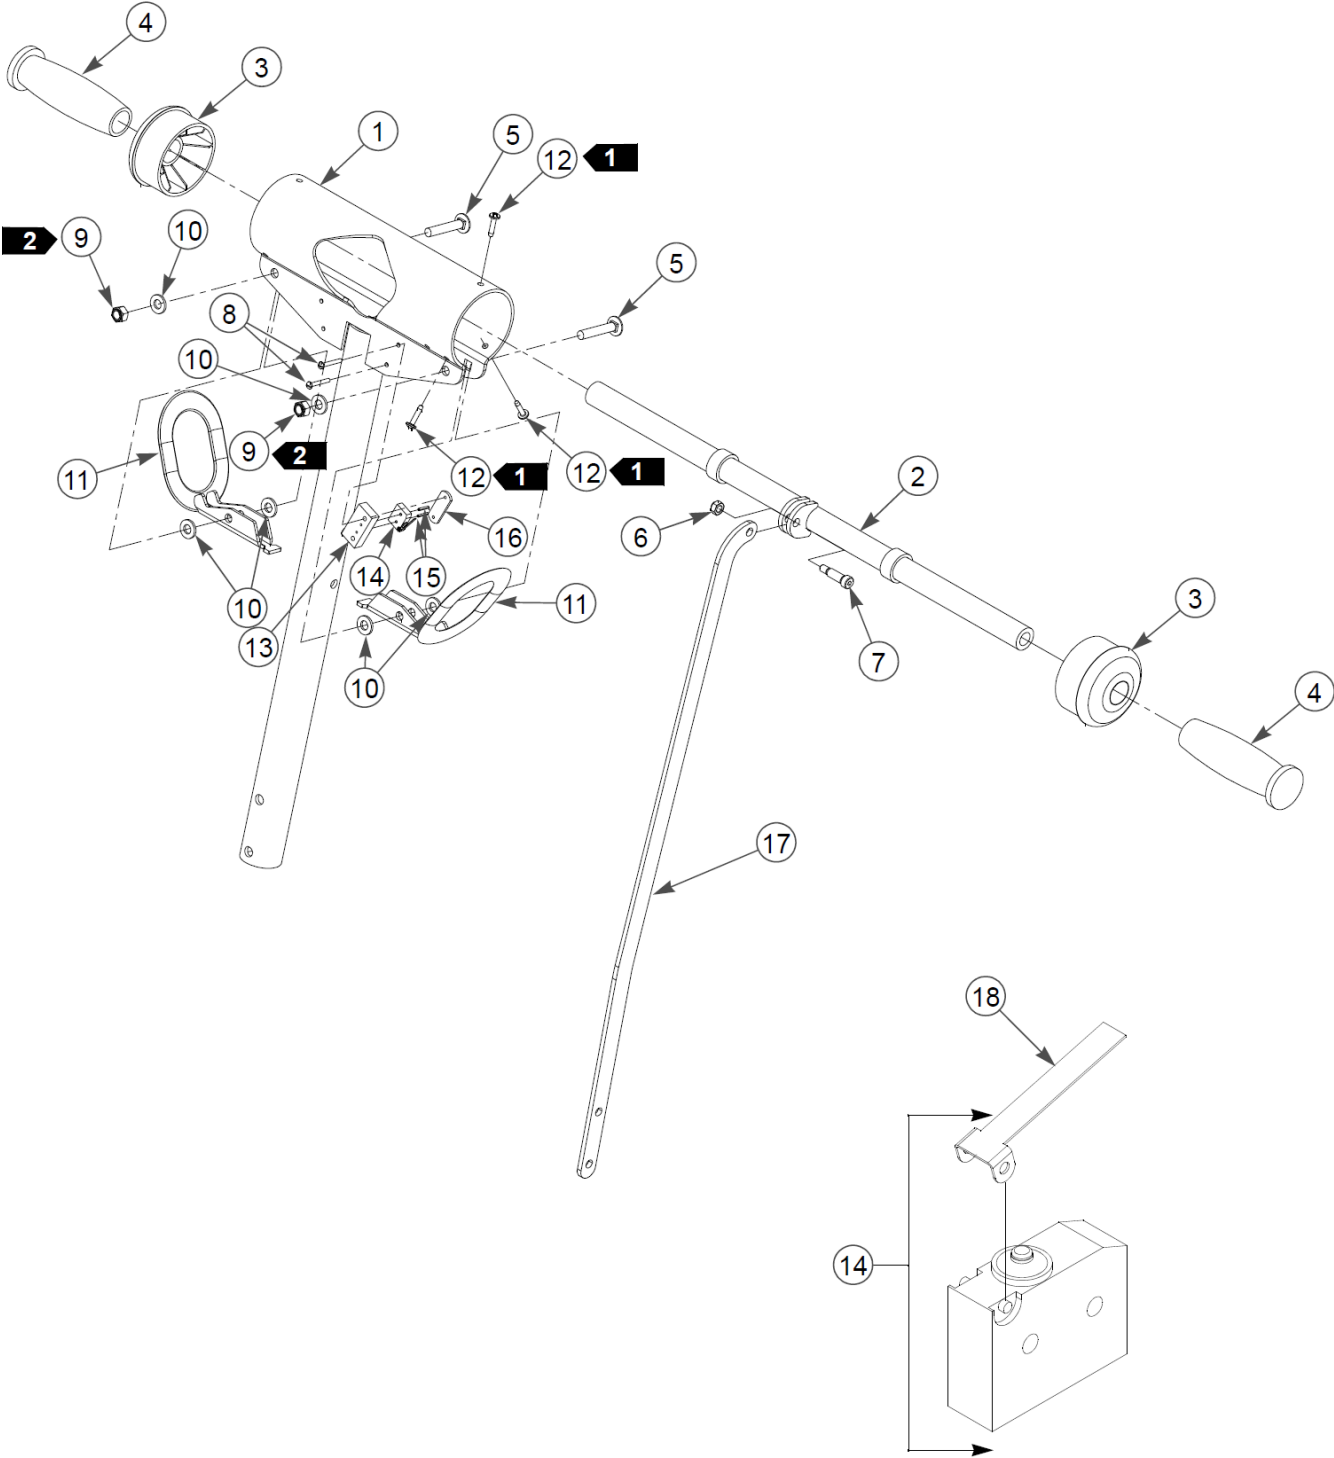 

Élément	Numéro de pièce	Qté	Nom
1	341446	1	STEERING PIVOT TUBE W/A
2	333047	1	STEERING BAR W/A, WB
3	773556	2	BEARING, STEERING
4	771139	2	GRIP, .834 - .4563 BLK
5	779157	2	CB .312-18X1.750
6	068551	1	NT .250-20 HXZY NL
7	772483	1	SB0.312X0.750SH0.250-20
8	077842	4	MS#6-32X1.000RDSL
9	058776	2	NT .312-18NLG5
10	768523	6	FW 0.343SAE
11	341826	2	ARM, OPC W/A WB
12	769299	6	SC #10-24x0.750BH
13	342378	2	SPACER, SWITCH WB
14	778506	1	WIRE HARNESS, OP NO SWI
15	779165	4	RP0.078X 0.50 ZN
16	039693	2	WN #6-32 X 1.00 TP 1116
17	341149	1	SPEED BAR WB
18	794412	1	SWITCH LEVER,HBAR MICRO

Comments for Page: Upper H-Bar Assembly

 
1. Screw will be self tapped into steering handle bearing.
2. Must be tight but must not be so tight as to cause binding of item 2 (333047 Steering Bar) within item 3 (773556 Steering Bearing). Items 11 (341826 OPC Arm) must move freely.

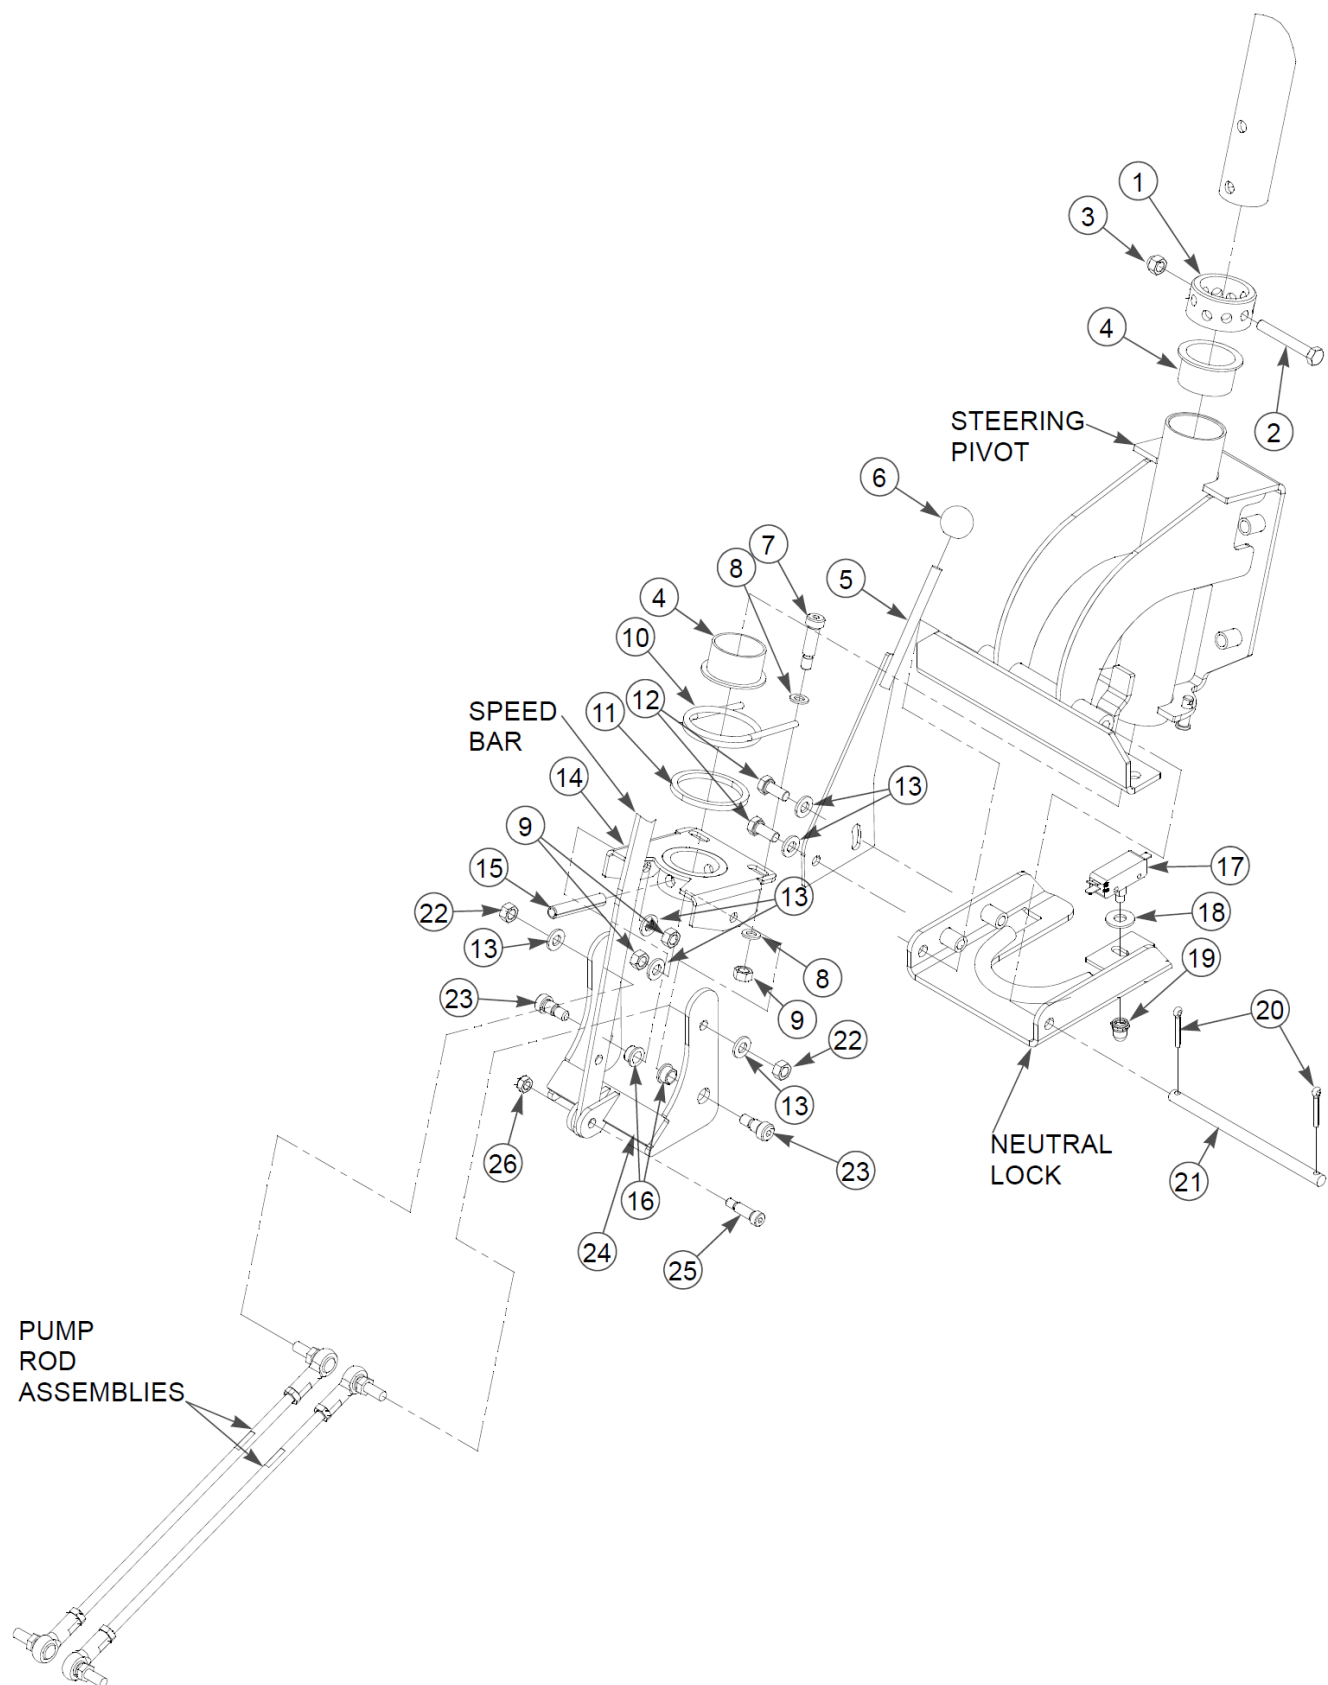


Élément	Numéro de pièce	Qté	Nom
1	332072	1	LOCK COLLAR
2	038828	1	CS .312-18X2.250HXG5
3	754317	1	NT .312-18 LOW CROWN AC
4	728584	2	PIVOT TUBE BUSHING
5	341651	1	NEUTRAL LOCK HANDLE W/A
6	768499	1	KNOB, 1.00 RDx.312-18 F
7	778522	2	SB .375X1.000 SH.312-18
8	779173	4	FW .312X .562X .06 SPL
9	034272	4	NT .312-18HXG5
10	778530	1	TORSION SPRING
11	342857	1	SPACER, STEERING WB (PL
12	034280	2	CS .312-18X0.750HXG5
13	768523	6	FW 0.343SAE
14	341743	1	STEERING SUPPORT W/A (P
15	004416	1	RP .375 X 2.25 ZN
16	765339	2	BUSHING,IGUS#0608 (FS)
17	726711	1	SWITCH
Not Shown	023002	1	DOUBLE POLE SWITCH
18	049346	1	FW 0.375X0.870X0.078
19	726778	1	SWITCH BOOT
20	017251	2	CP .156DX1.000 LG HML Z
21	341503	1	ROD, NEUTRAL LOCK (PLAT
22	041152	2	NT 0.312-24 HX G8
23	754358	2	SB0.375X0.375SH0.312-18
24	341156	1	YOKE, SPEED CONTROL W/A
25	772483	1	SB0.312X0.750SH0.250-20
26	068551	1	NT .250-20 HXZY NL

Comments for Page: Lower H-Bar Assembly

 1. For H-Bar in lower position, install Item 1 (Lock Collar) and item 14 (Steering Support) in upper holes in (Upper H-Bar Assembly). Install Speed Bar using upper hole of the two lower holes in Speed Bar).
2. 726711 is used on pull start models only.
3. 023002 is used on US models only.

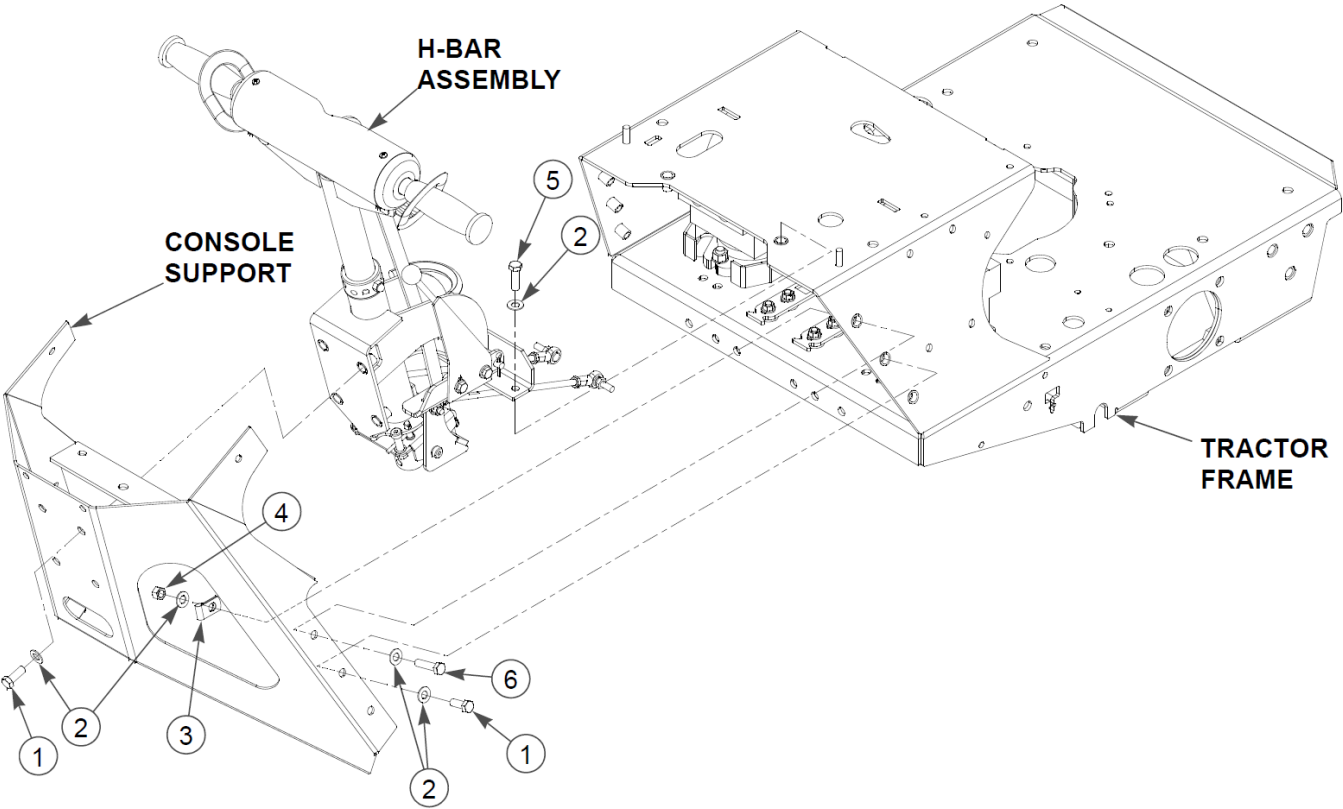


Élément	Numéro de pièce	Qté	Nom
1	036244	9	CS .375-16X1.00 HX G5 ZN
2	767954	13	FW 0.379X.82X.06 HD ZN
3	778738	1	CLAMP, WIRING .312 (FS)
4	054502	1	NT .375-16HXG5
5	052860	2	CS .375-16X1.25 HX G5 ZN
6	080655	1	CS .375-16X1.500HXG5

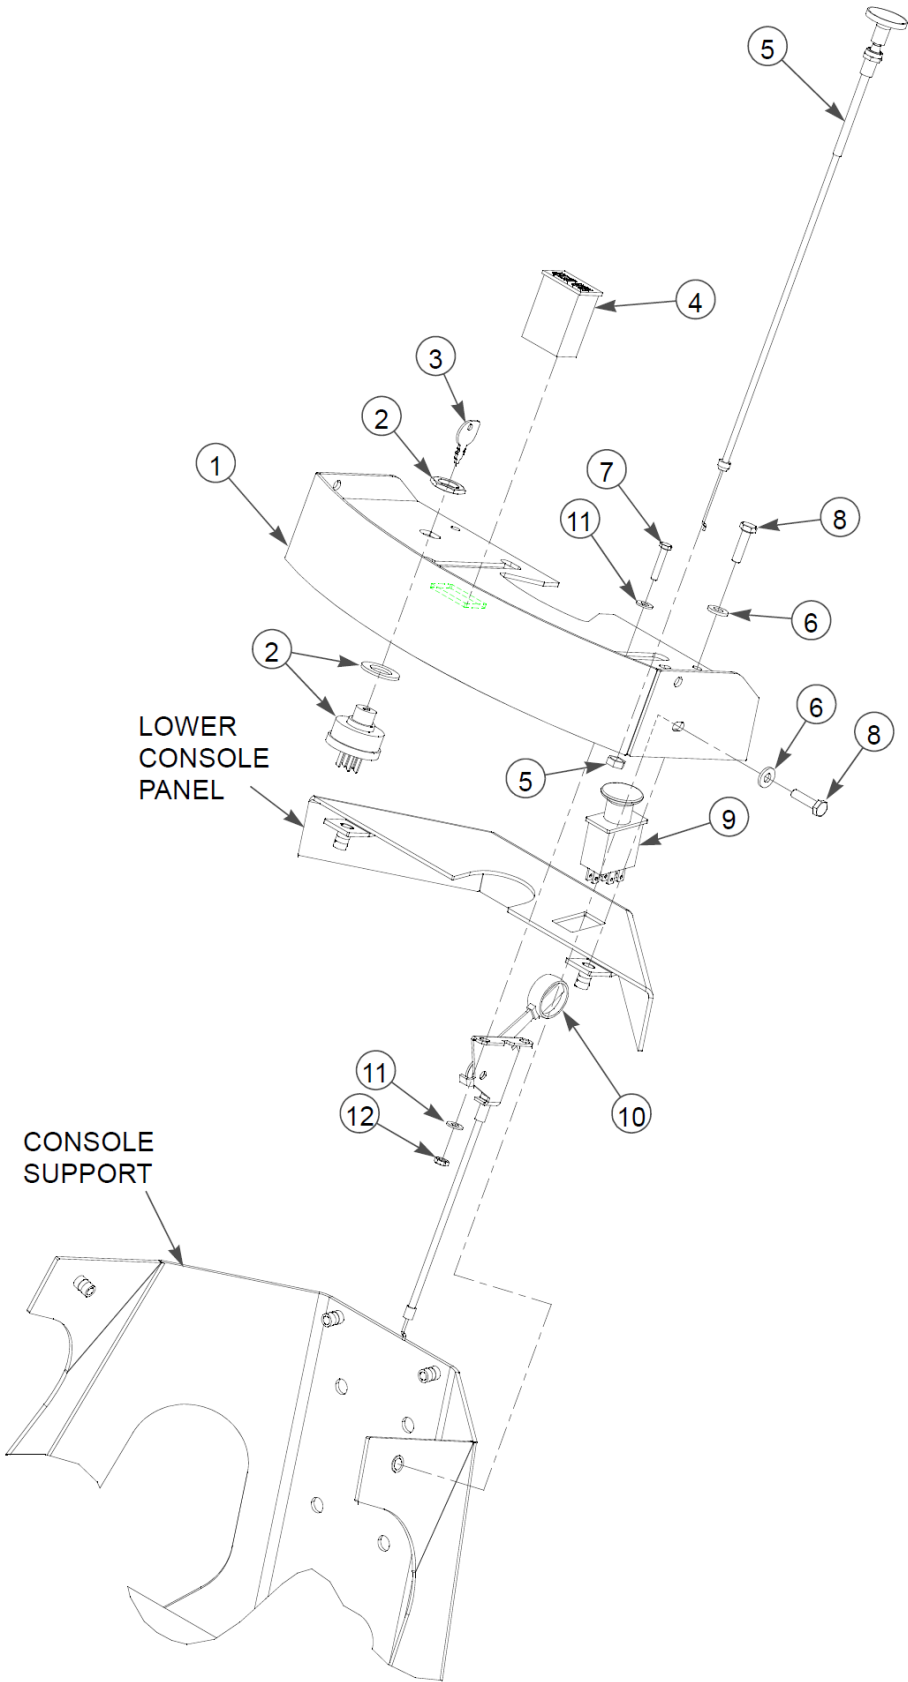 

Élément	Numéro de pièce	Qté	Nom
1	340208	1	PANEL W/A, UPPER CONSOLE
2	776518	1	IGN SWITCH INDAK D431
2	045898	1	IGNITION SWITCH
3	785808	1	KEY ASSEMBLY
4	769166	1	HOUR METER
5	786657	1	CABLE, CHOKE
6	768515	6	FW 0.281SAE
7	073122	2	CS 10-24X1.000 HXWH ZNY
8	056077	6	CS .250-20X1.000HXG5
9	776476	1	SWITCH, PTO 6201-321
10	778365	1	CABLE, THROTTLE
11	704932	4	FW 0.219X.50X.05 ZN
12	035626	2	NT #10-24 HX ZN

Comments for Page: Console Assembly

 
1. 776518 is used on pull start models only.
2. 045898 is used on electric start models only.
3. 786657 is used on US version mowers only.

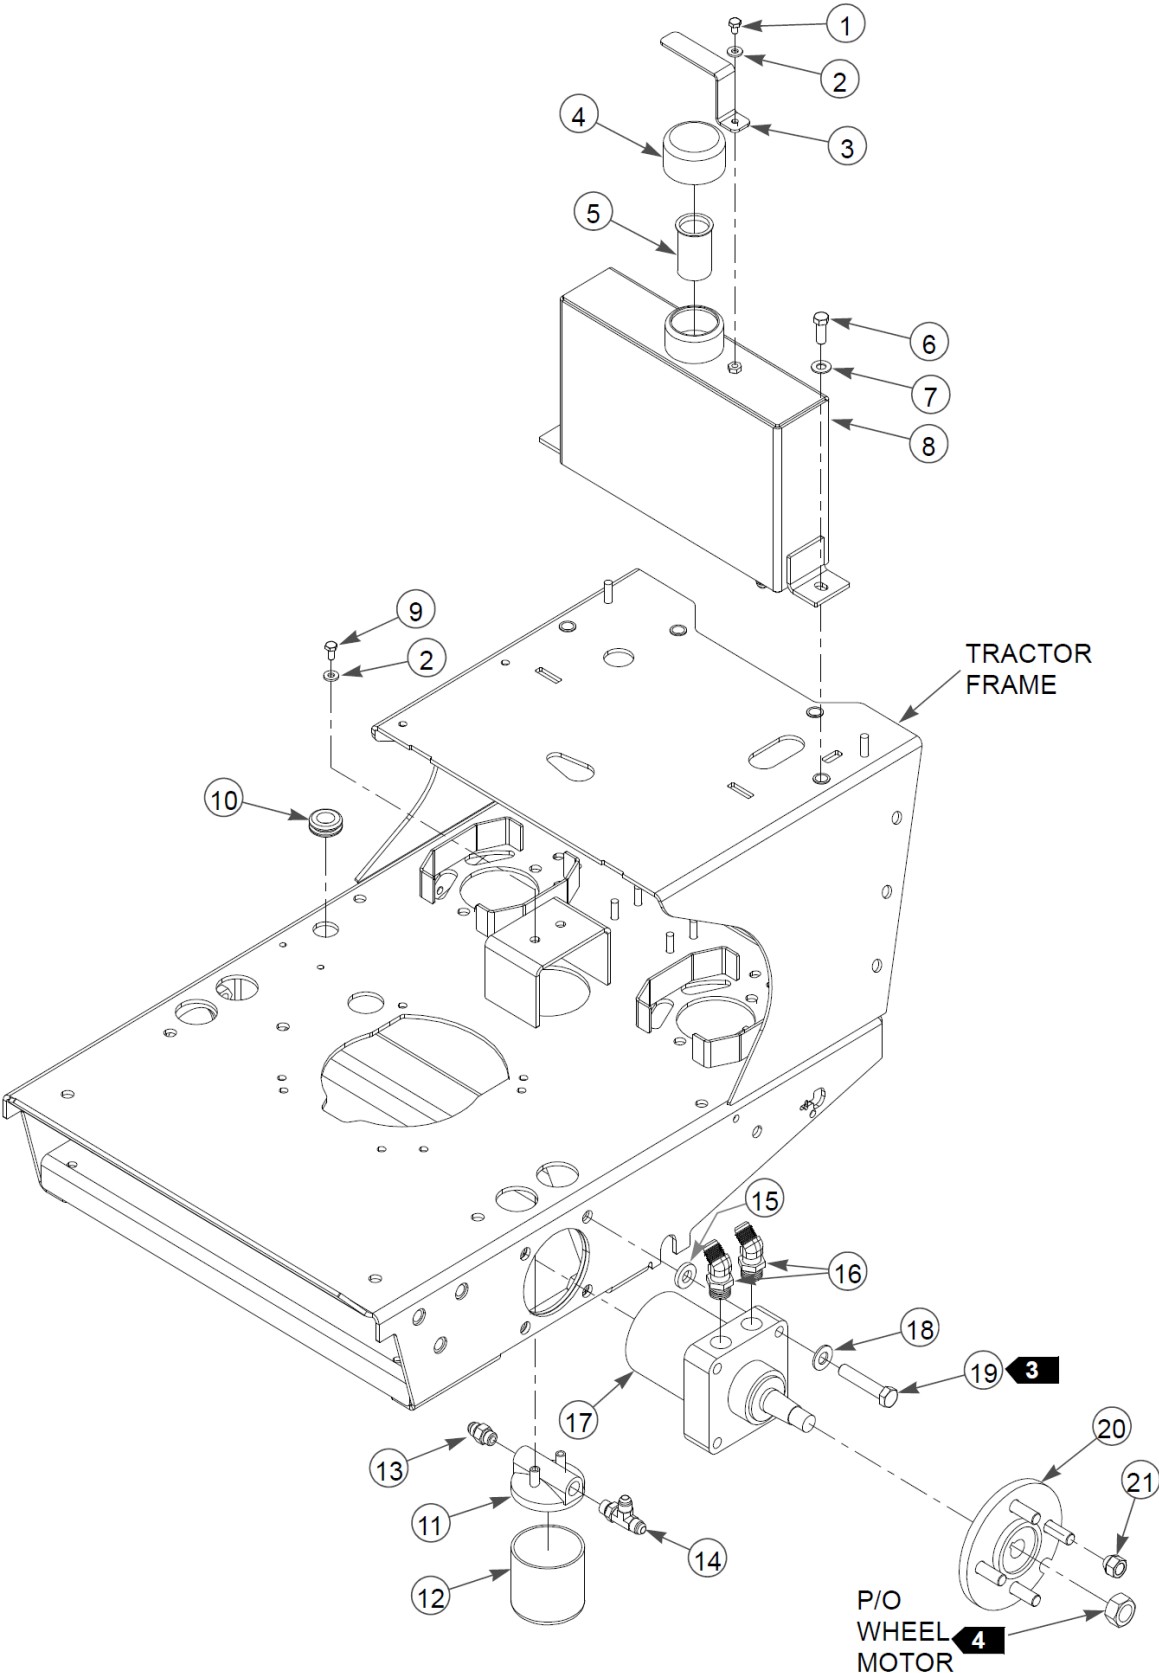

Élément	Numéro de pièce	Qté	Nom
1	079178	1	CS .250-20X0.375HXG5
2	768515	3	FW 0.281SAE
3	342055	1	ANGLE, OIL CAP LOCK WB
4	032763	1	CAP, BREATHER
5	032771	1	STRAINER
6	036244	2	CS .375-16X1.00 HX G5 ZN
7	767954	2	FW 0.379X.82X.06 HD ZN
8	340026	1	HYD OIL RESERVOIR W/A W
9	055947	2	CS .250-20X0.50 HX G5 ZN
10	748681	1	GM .75X1.35X1.06X.18-GR
11	768333	1	FILTER HEAD ZINGA BF SE
12	768341	1	HYDRAULIC OIL FILTER
13	779132	1	FTG, -6MORB/-6MJIC STR
14	763953	1	FTG T,-6 O-RING/-6J
15	070037	8	FW .530X 1.06X.19 HRD Z
16	779959	4	FITTING, -10MORB/-8MJIC
17	779926	2	WHEEL MOTOR, MF 12
Not Shown	772764	1	SEAL KIT, VITON MG-MF
18	767962	8	FW .531 x 1.063 x .175
19	008573	8	CS .500-13X2.500HXG5
20	782276	2	HUB, 4-on-4
21	061077	8	WHEEL NUT

Comments for Page: Hydraulic Installation—37"

 
1. 779132 and 763953 are included in WB Hydraulic Hose and Fitting Kit (778480).
2. 779959 is included in WB Hydraulic Unique Fittings Kit for Narrow Tractor (779934).
3. Torque to 94.9-101.7 N•m.
4. Torque to 271.2-305.1 N•m.

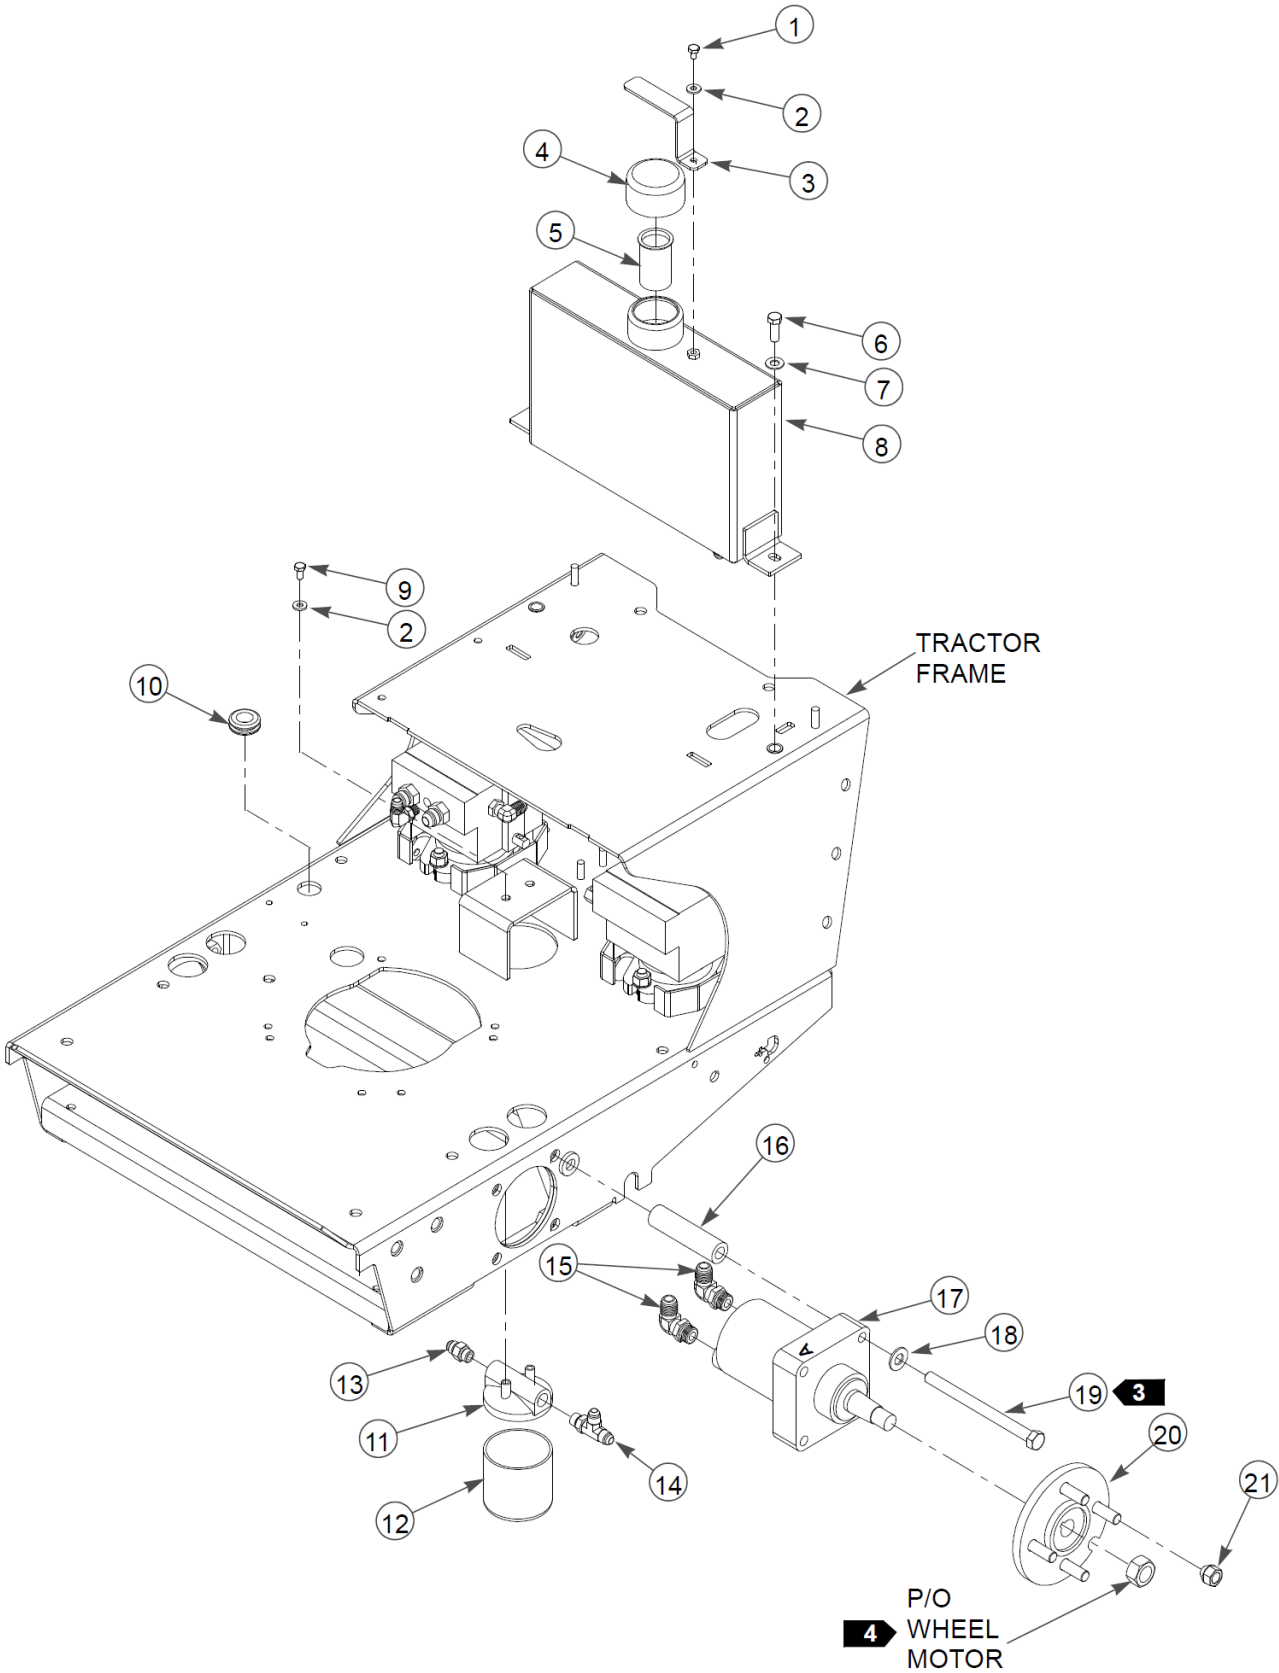

Élément	Numéro de pièce	Qté	Nom
1	079178	1	CS .250-20X0.375HXG5
2	768515	3	FW 0.281SAE
3	342055	1	ANGLE, OIL CAP LOCK WB
4	032763	1	CAP, BREATHER
5	032771	1	STRAINER
6	036244	2	CS .375-16X1.00 HX G5 ZN
7	767954	2	FW 0.379X.82X.06 HD ZN
8	340026	1	HYD OIL RESERVOIR W/A W
9	055947	2	CS .250-20X0.50 HX G5 ZN
10	748681	1	GM .75X1.35X1.06X.18-GR
11	768333	1	FILTER HEAD ZINGA BF SE
12	768341	1	HYDRAULIC OIL FILTER
13	779132	1	FTG, -6MORB/-6MJIC STR
14	763953	1	FTG T,-6 O-RING/-6J
15	771311	4	FTG, -8MORB/-8MJIC, 90°
16	314674	8	MOTOR MOUNT BUSHING
17	768234	2	WHEEL MOTOR,
Not Shown	772764	1	SEAL KIT, VITON MG-MF
18	767962	8	FW .531 x 1.063 x .175
19	042630	8	CS .500-13X6.500HXG5
20	782276	2	HUB, 4-on-4
21	061077	8	WHEEL NUT

Comments for Page: Hydraulic Installation—48"

 
1. 779132 and 763953 are included in WB Hydraulic Hose and Fitting Kit (778480).
2. 771311 is included in WB Hydraulic Unique Fittings Kit for Narrow Tractor (779942).
3. Torque to 94.9-101.7 N•m.
4. Torque to 271.2-305.1 N•m.

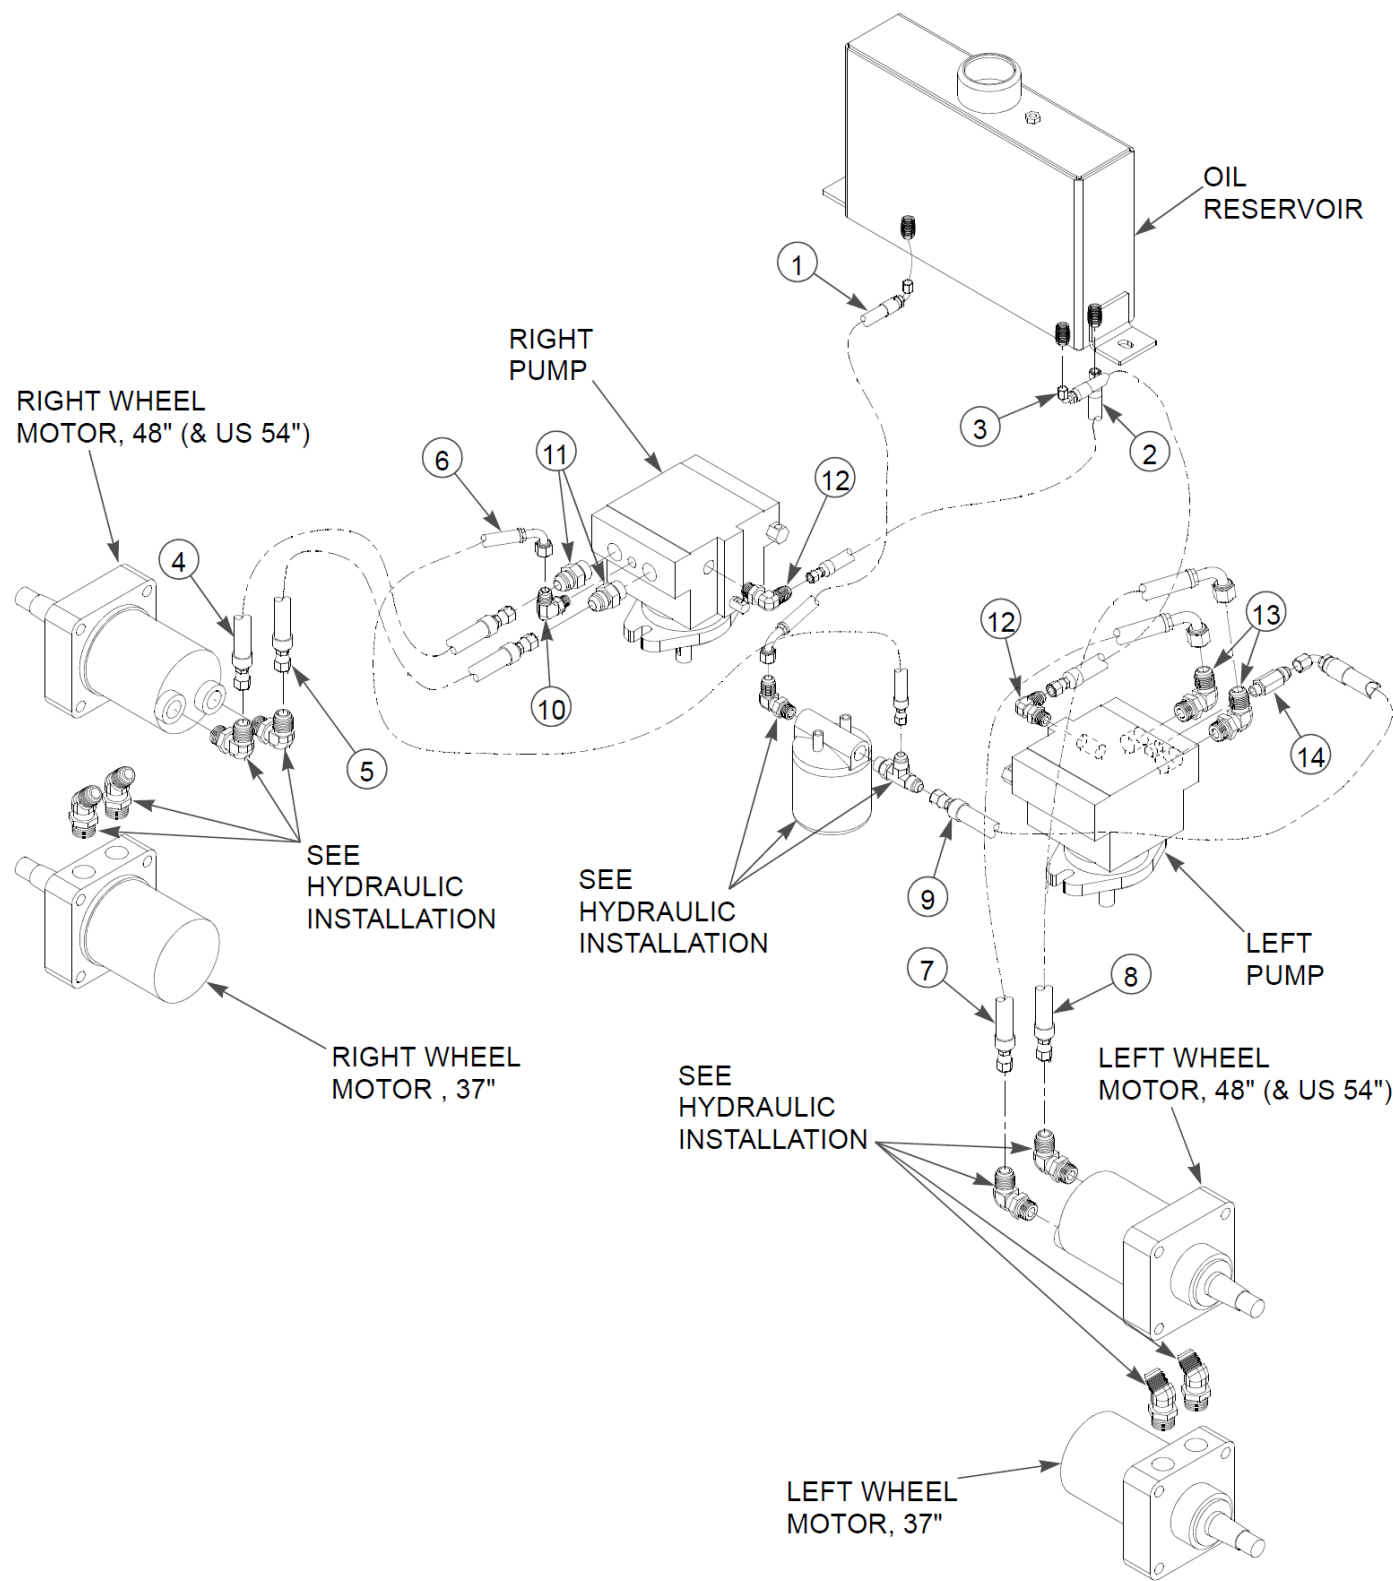


Élément	Numéro de pièce	Qté	Nom
1	778977	1	HOSE, -6 90 -6 90, PL 1
2	779108	1	HOSE, -6STR-6STR , PL 1
3	779116	1	HOSE, -6STR -6 90, PL 1
4	778936	1	HOSE, -8STR-8STR 17.00
5	778944	1	HOSE, -8STR-8STR 15.00
6	778985	1	HOSE, -6STR -6 90, PL 1
7	778951	1	HOSE, -8STR-8 90 24.75
8	778969	1	HOSE, -8STR-8 90 22.75
9	778993	1	HOSE, -6STR -6 90, PL 1
10	779124	1	FTG, 90-4MORB/-6MJI
11	771337	2	FTG,STR-8MORB/-8MJIC
12	763946	2	FTG 90, -6 O-RING/-
13	771311	2	FTG, -8MORB/-8MJIC, 90°
14	771303	1	FTG, STR-4MORB/-6MJ

Comments for Page: Hydraulic Hose Routing

 1. All items are included in WB Hydraulic Hose and Fitting Kit (778480).
2. Hydraulic system oil capacity 5.0 L(10W40).
3. Add 88.7 ml. of Lubrizol® (027912) to oil reservoir when hydraulic oil is changed.

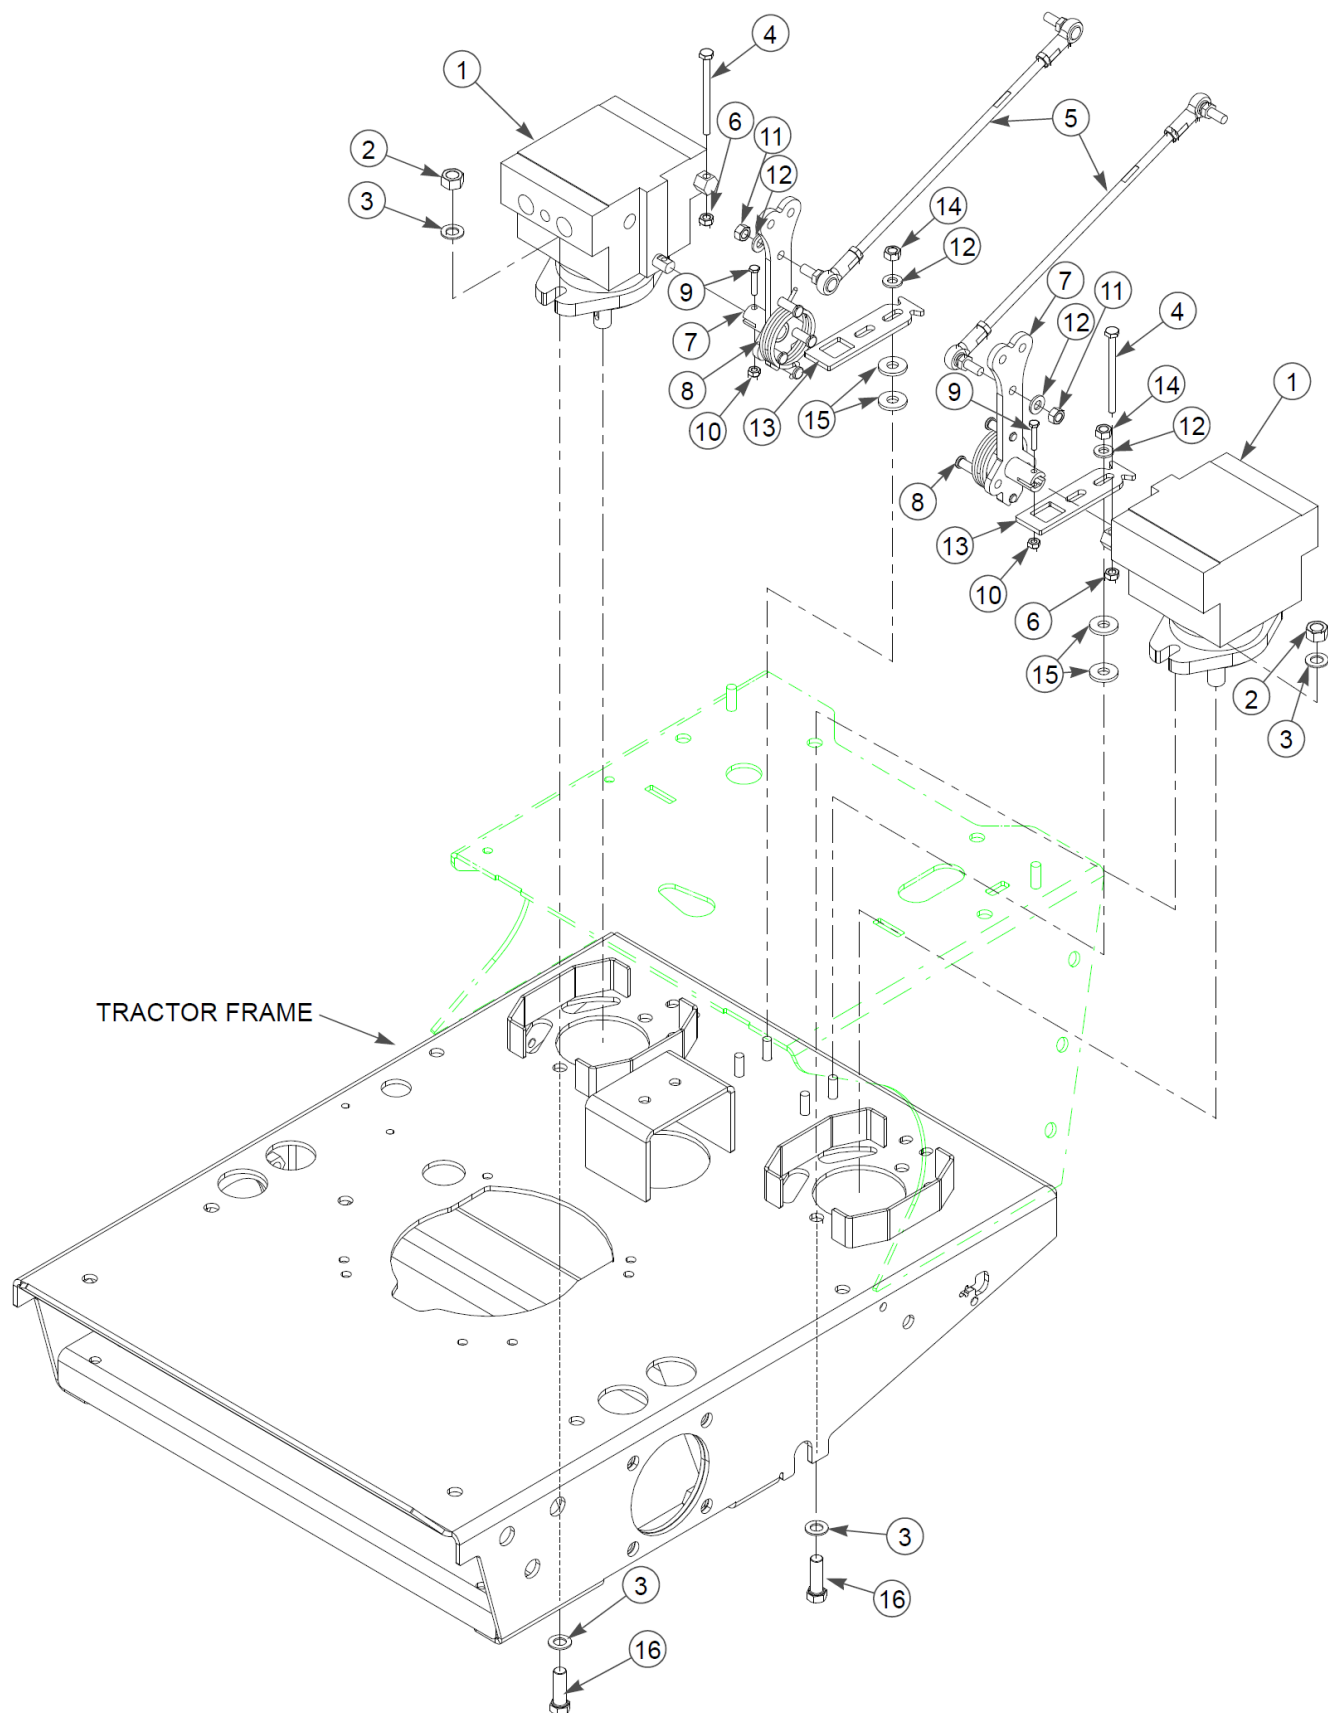

Élément	Numéro de pièce	Qté	Nom
1	768226	2	PUMP, HYDRO-GEAR
Not Shown	772756		SEAL KIT, OVERHALL BDP1
2	041707	4	NT .437-14HXG5
3	704742	8	FW 0.453X.81X.06 ZN
4	075994	2	CS .250-20X3.250HXG5
5	778514	2	PUMP ROD ASSEMBLY
6	068551	2	NT .250-20 HXZY NL
7	341289	2	PUMP ARM W/A (PLATED)
8	778621	2	PUMP SPRING, TORSION (W
9	715599	2	CS 10-24X1.000 HX G5 ZN
10	059832	2	NT #10-24 HX NL ZN
11	041152	2	NT 0.312-24 HX G8
12	768523	6	FW 0.343SAE
13	341487	2	PLATE, NEUTRAL ADJUSTER
14	034272	4	NT .312-18HXG5
15	712919	8	FW 0.406X1.00X.12 HD ZN
16	705186	4	CS .437-14X1.375HXG5

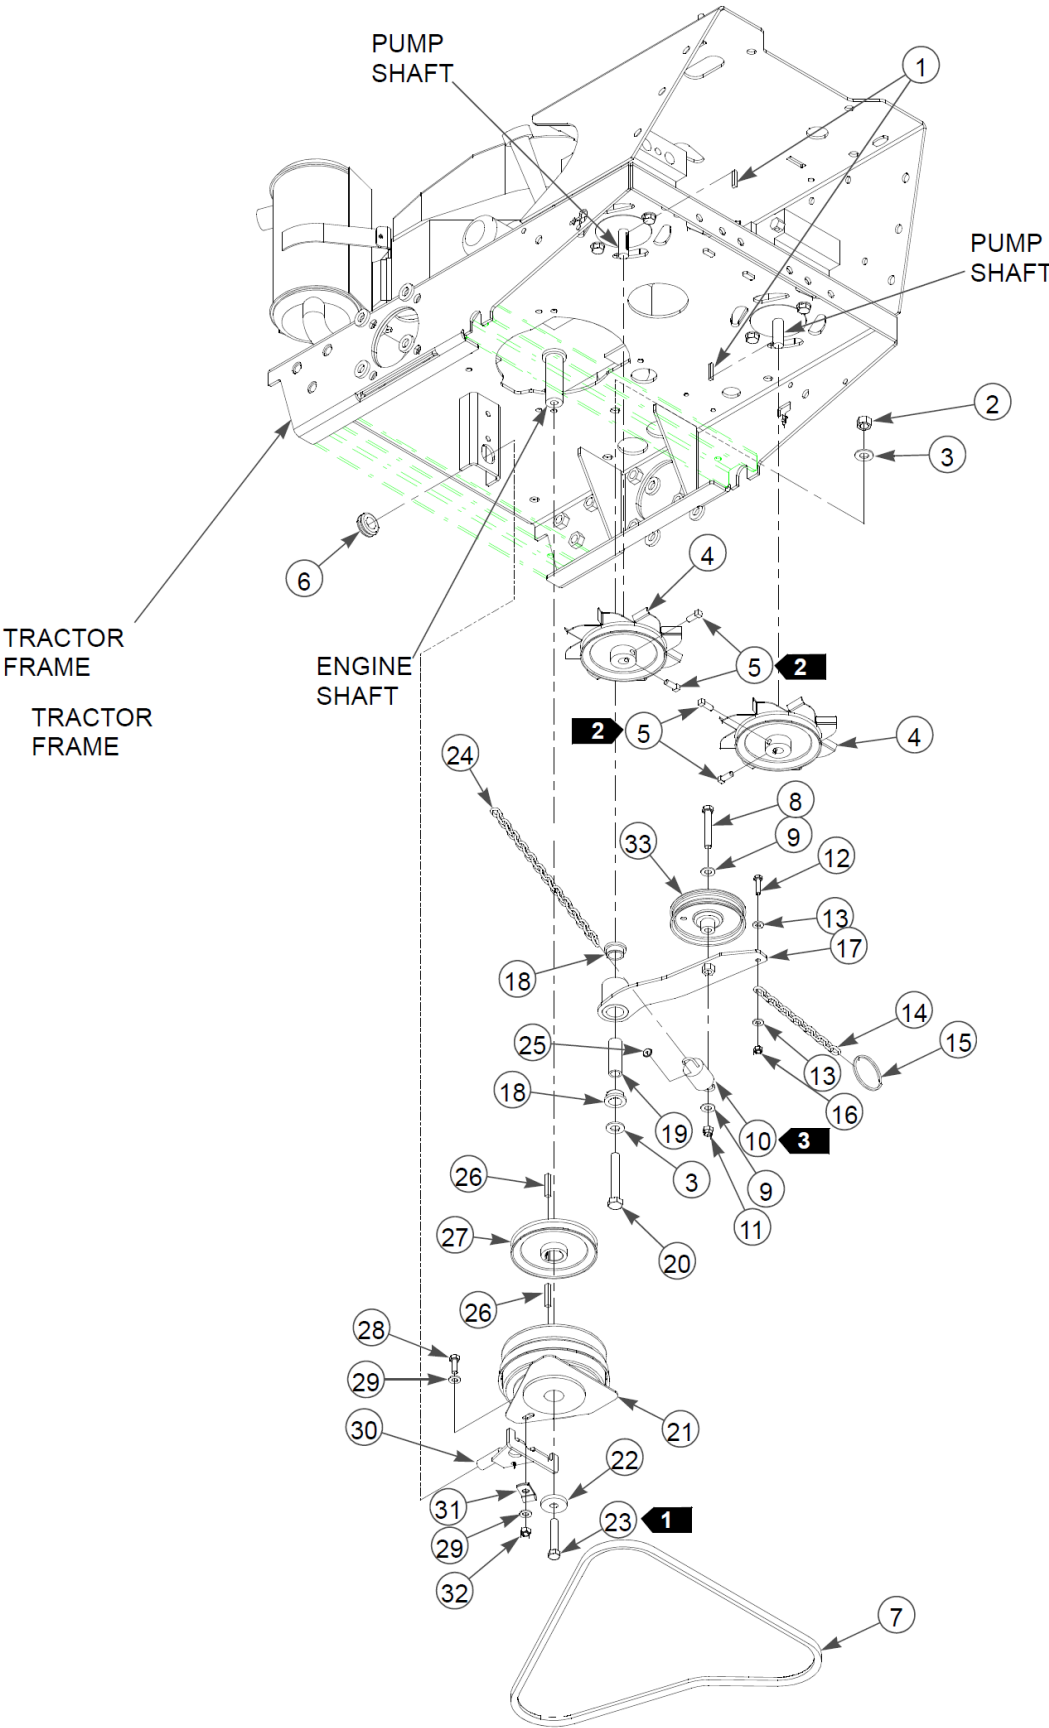 


Élément	Numéro de pièce	Qté	Nom
1	768127	2	KEY 5mm x30mm RADIUS EN
2	008193	1	NT .500-13HXG5
3	767962	2	FW .531 x 1.063 x .175
4	325308	2	PULLEY & FAN W/A
5	083196	4	SS .312-18X0.750SQ
Not Shown	030601	4	SS .312-18X0.500SH
6	748681	1	GM .75X1.35X1.06X.18-GR
7	776435	1	DRIVE BELT
8	016428	1	CS .375-16X2.500HXG5
9	767954	2	FW 0.379X.82X.06 HD ZN
10	036384	1	SPRING 1/4 COIL PL 1.23
11	046763	1	NT .375-16 FLEX-LOK ZN
12	056077	1	CS .250-20X1.000HXG5
13	768515	2	FW 0.281SAE
14	259812	1	CHAIN, 13 LINK
15	778746	1	RING, 2" ID SPLIT
16	068551	1	NT .250-20 HXZY NL
17	340042	1	IDLER ARM W/A, HYD PUMP
18	770867	2	BUSHING, PLAS .750x1(FS)
19	340158	1	BUSHING, IDLER PIVOT (P
20	077859	1	CS .500-13X3.250HXG5
21	776484K	1	CLUTCH KIT
22	763417	1	FW 0.454X1.50X.25 NF
23	778217	1	CS .437-20X2.250 HXG5P85
24	340885	1	CHAIN, 24 LINK
25	779272	1	CLIP, TINNEMAN
26	212076	2	KEY 1/4 SQ X 1.50 LG(FS)
27	778357	1	PULLEY, 5" PUMPDRIVE (P
28	064014	1	CS .312-18X0.875HXG5
29	768523	2	FW 0.343SAE
30	349738	1	CLUTCH MOUNT W/A
31	778738	1	CLAMP, WIRING .312 (FS)
32	058776	1	NT .312-18NLG5
33	768689	1	PULLEY, IDLER FH-6512-4

Comments for Page: Pump Drive Assembly

1. Torque to 61.0-65.1 N•m.
2. Torque to 16.3-20.3 N•m.
3. Tension Idler Arm Spring to length = 114.3-127 mm.
4. 083196 is used on mowers with serial number 01082125 and higher. 030601 is used on mowers with serial number prior to 01082125.

 
Cette page intentionnellement laissée vierge

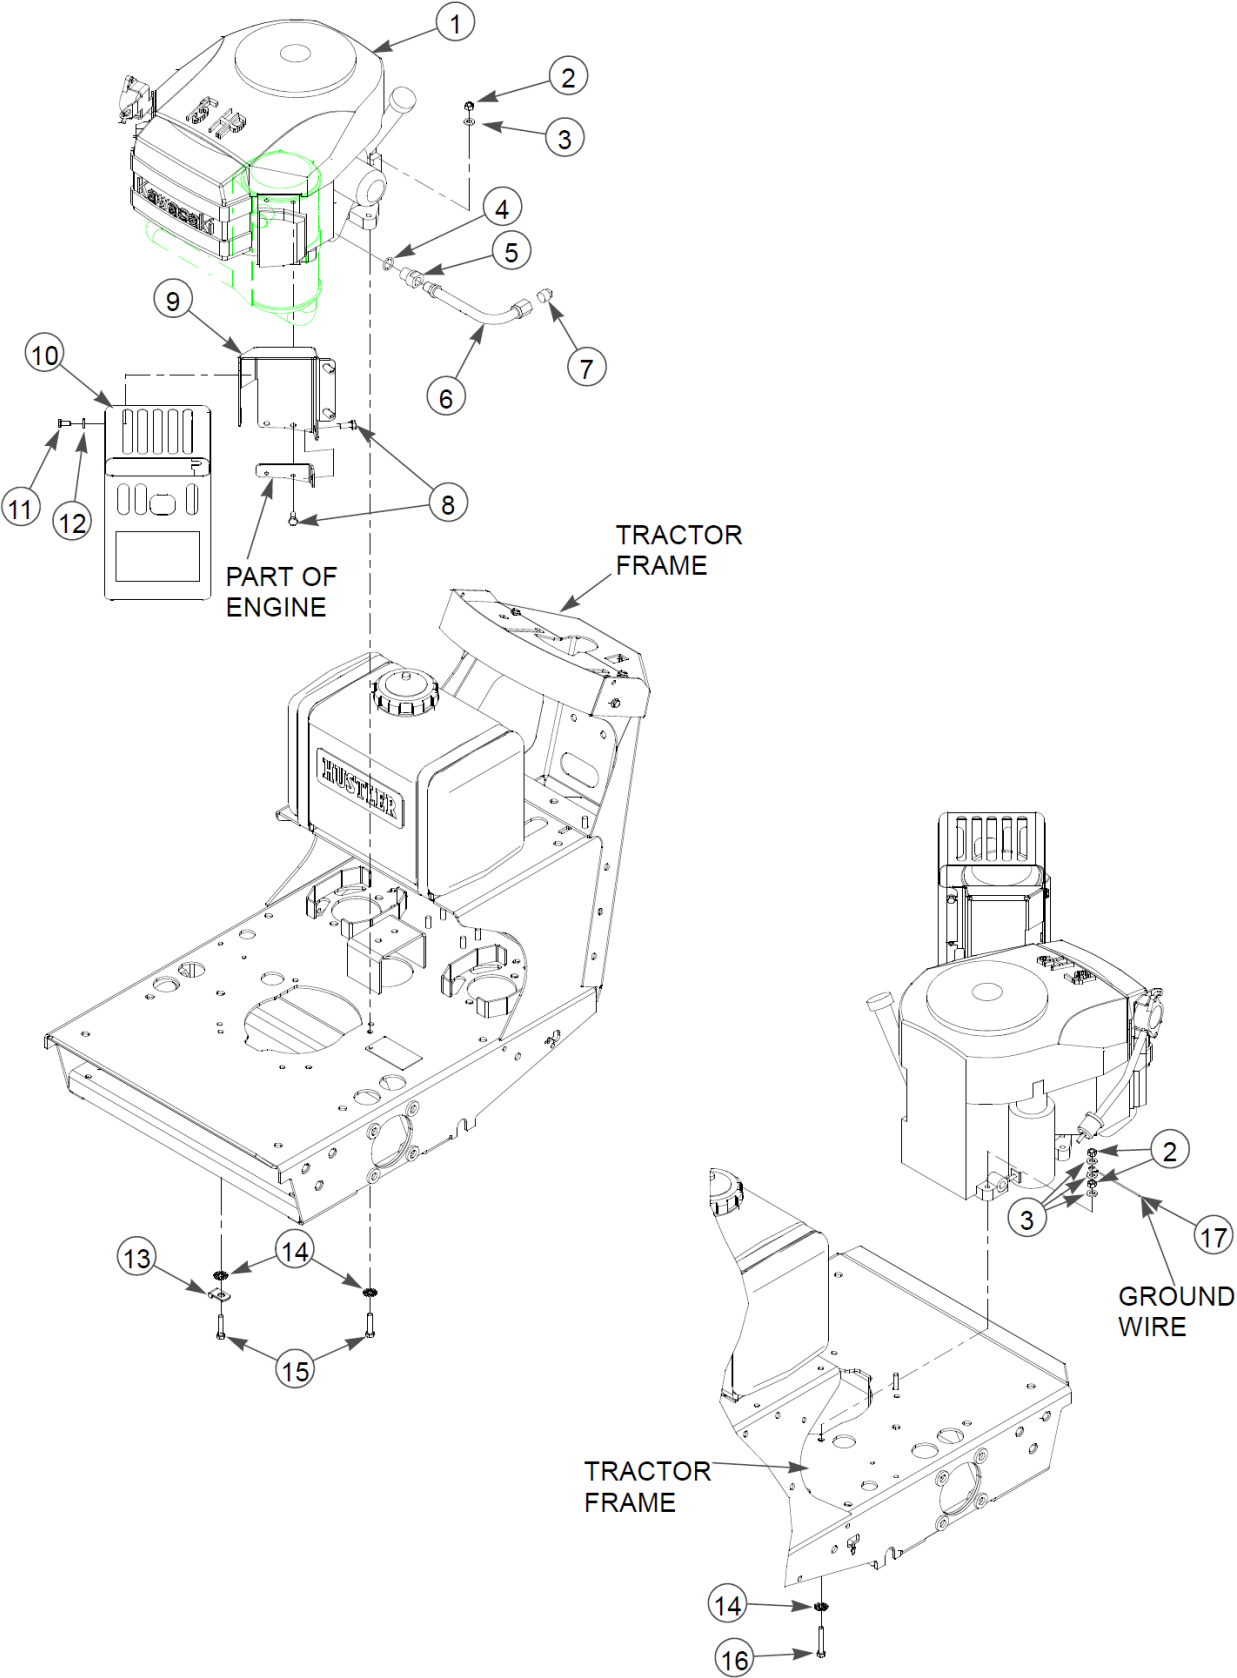

Élément	Numéro de pièce	Qté	Nom
1		1	ENGINE, KAW 15HP RECOIL
Not Shown		1	ENGINE, KAW 17HP RECOIL
2	034272	5	NT .312-18HXG5
3	768523	6	FW 0.343SAE
4	780775	1	KAWASAKI O-RING,OIL DRA
5	780767	1	KAWASAKI OIL DRAIN ADAP
6	771378	1	HYDRO HOSE, PUSHLOC 16.
7	035329	1	PIPE PLUG 3/8 NPT
8	720177	3	CS M8-1.25X20FLG10.9
9	346726	1	MUFFLER MOUNT W/A, CE W
10	346692	1	MUFFLER GUARD W/A, CE W
11	064329	4	CS .250-20X0.625HXG5
12	768515	4	FW 0.281SAE
13	778738	1	CLAMP, WIRING .312 (FS)
14	029876	4	LW .312 INTEXT ZN
15	052837	3	CS .312-18X1.500HXG5
16	064345	1	CS .312-18X2.000HXG5
17	778498	1	WIRE HARNESS, WALKBEHIN

Comments for Page: Engine Installation

 
1. Engine oil capacity .946 L.
2. Engine speed 2550±50 RPM for 15 HP, 2950±50 for 17 HP engines.

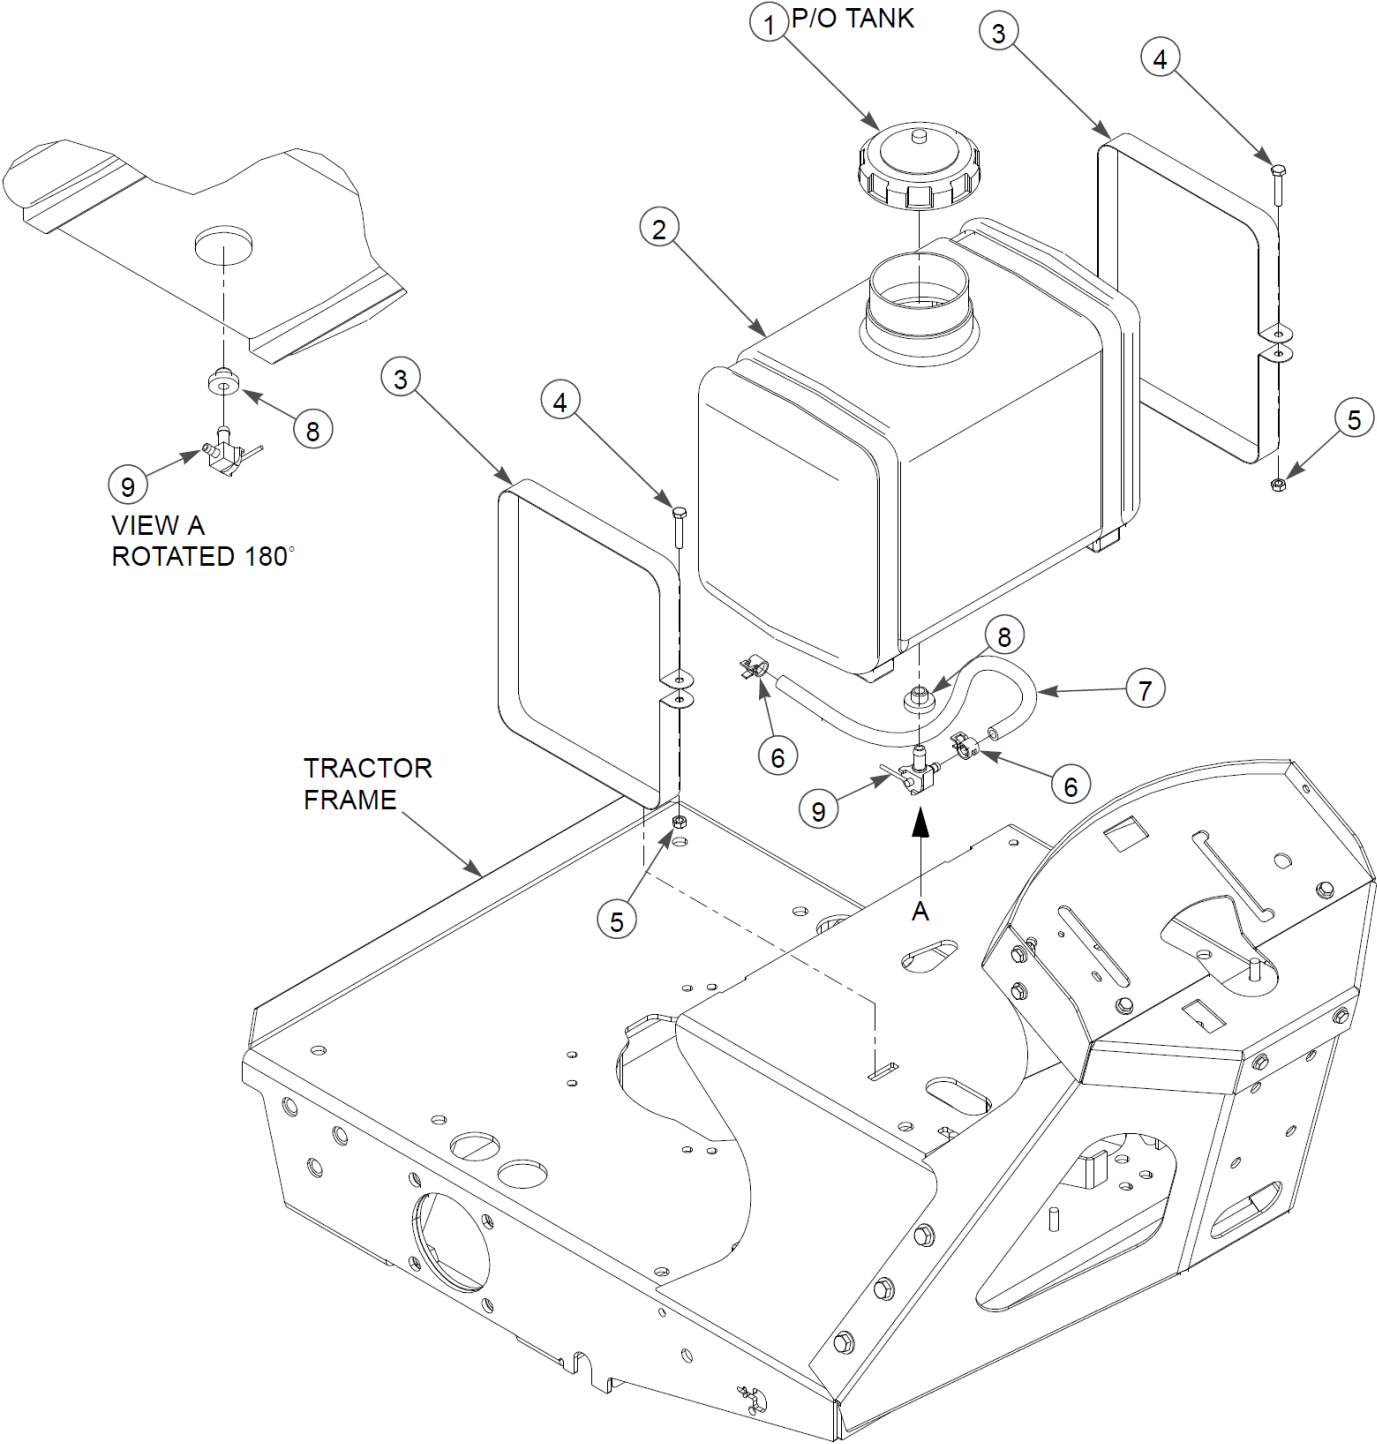

Élément	Numéro de pièce	Qté	Nom
1	779306	1	FUEL CAP,3.5"
2	775825K	1	KIT GAS TANK
3	339838	2	STRAP, FUEL TANK MOUNT
4	704924	2	CS .250-20X1.375HXG5
5	068551	2	NT .250-20 HXZY NL
6	000323	2	CLIP, HOSE CLAMP
7	015818	16"	FUEL LINE, 1/4"
Commentaires pour le numéro de pièce 015818 Sold by the foot.			
8	785295K	1	TANK GROMMET SVC KIT
9	785287	1	VALVE, FUEL SHUTOFF

Comments for Page: Fuel System

 
1. Order quantity of 2 ft. of 015818 as service part.

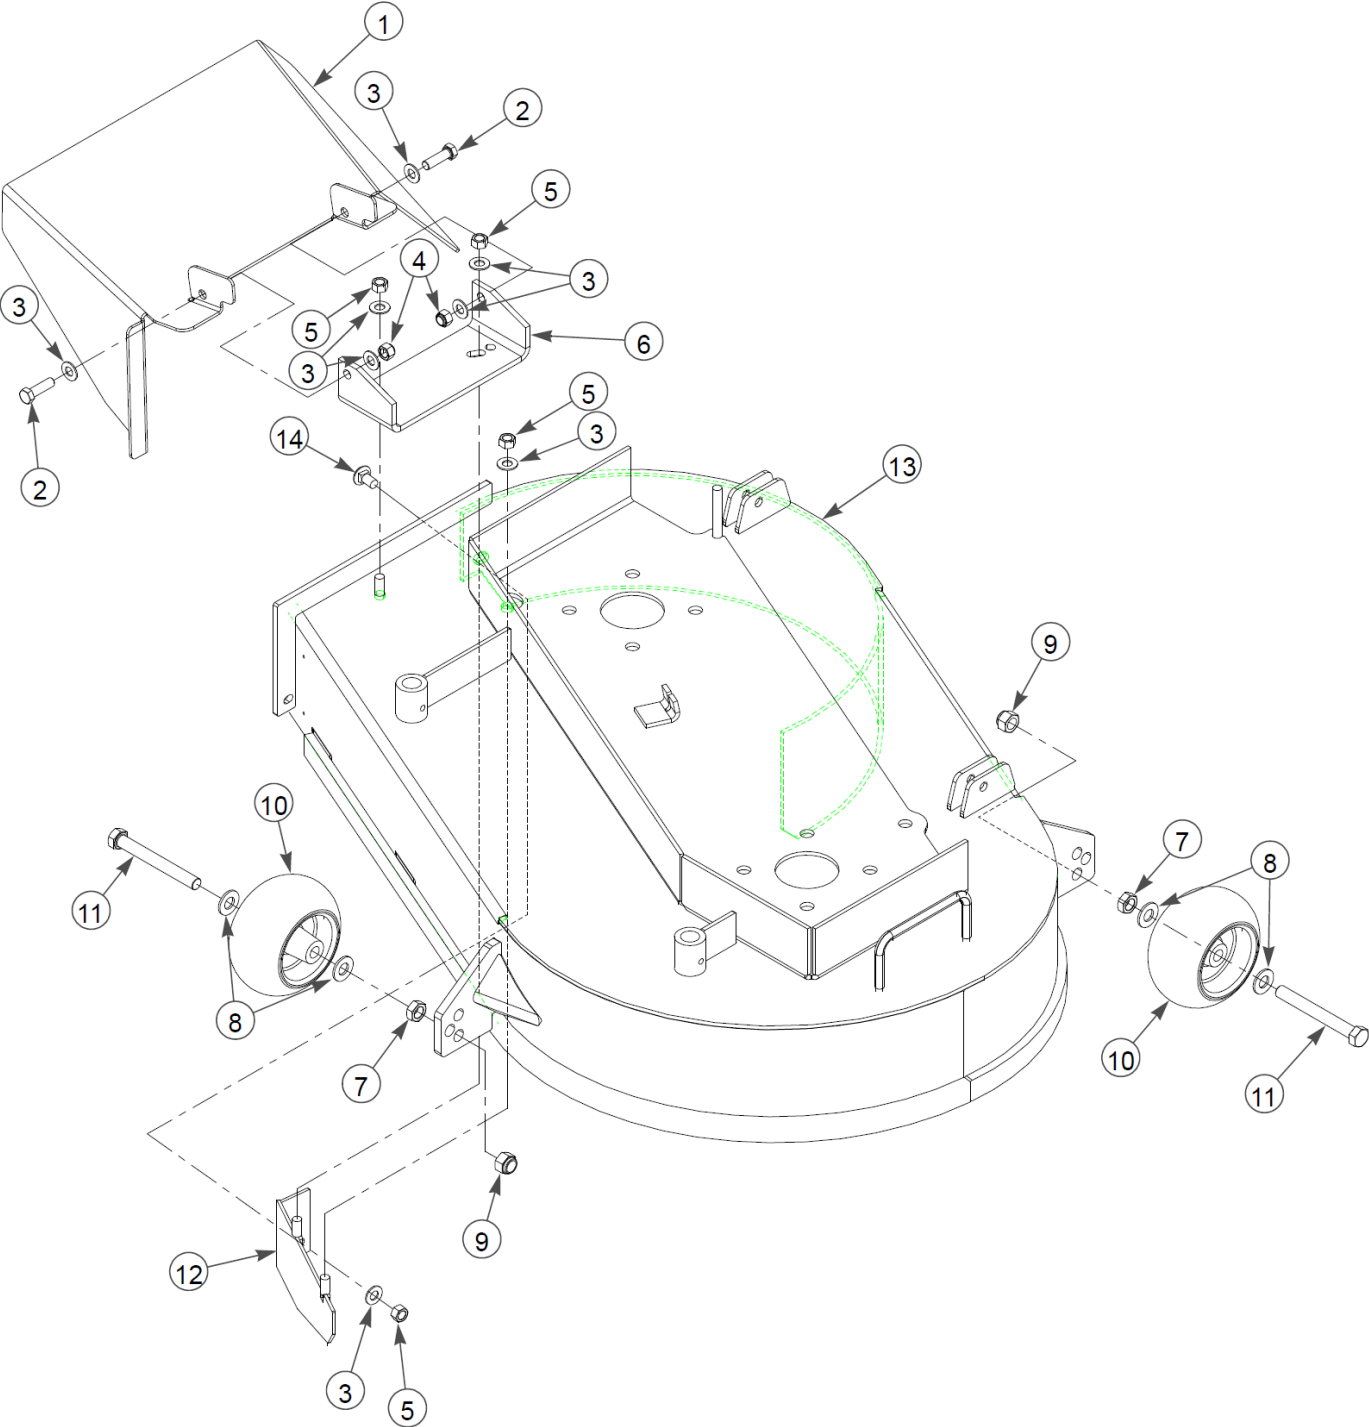

Élément	Numéro de pièce	Qté	Nom
1	347971	1	CHUTE, DISCHARGE 52" MM
2	005116	2	CS .375-16X1.38 HX G5 ZN
3	767954	8	FW 0.379X.82X.06 HD ZN
4	086660	2	NT .375-16NLG8
5	054502	4	NT .375-16HXG5
6	317073	1	BRACKET, DISCH CHUTE MT
7	053199	2	NT .500-13JAMG5
8	767962	4	FW .531 x 1.063 x .175
9	781567	2	NT .500-13NLG5
10	031997	2	ANTI-SCALP WHEEL
11	781708	2	CS .500-13X4.25 HX G5 ZN
12	316992	1	BAFFLE W/A
13	332536	1	DECK W/A, 37"
14	011320	1	CB .375-16X .750 STD ZN
Not Shown	788166	1	WHEEL ASSY, ANTI SCALP

Comments for Page: 37" Deck Assembly

 
1. 788166 includes items 7, 8, 10, and 11.

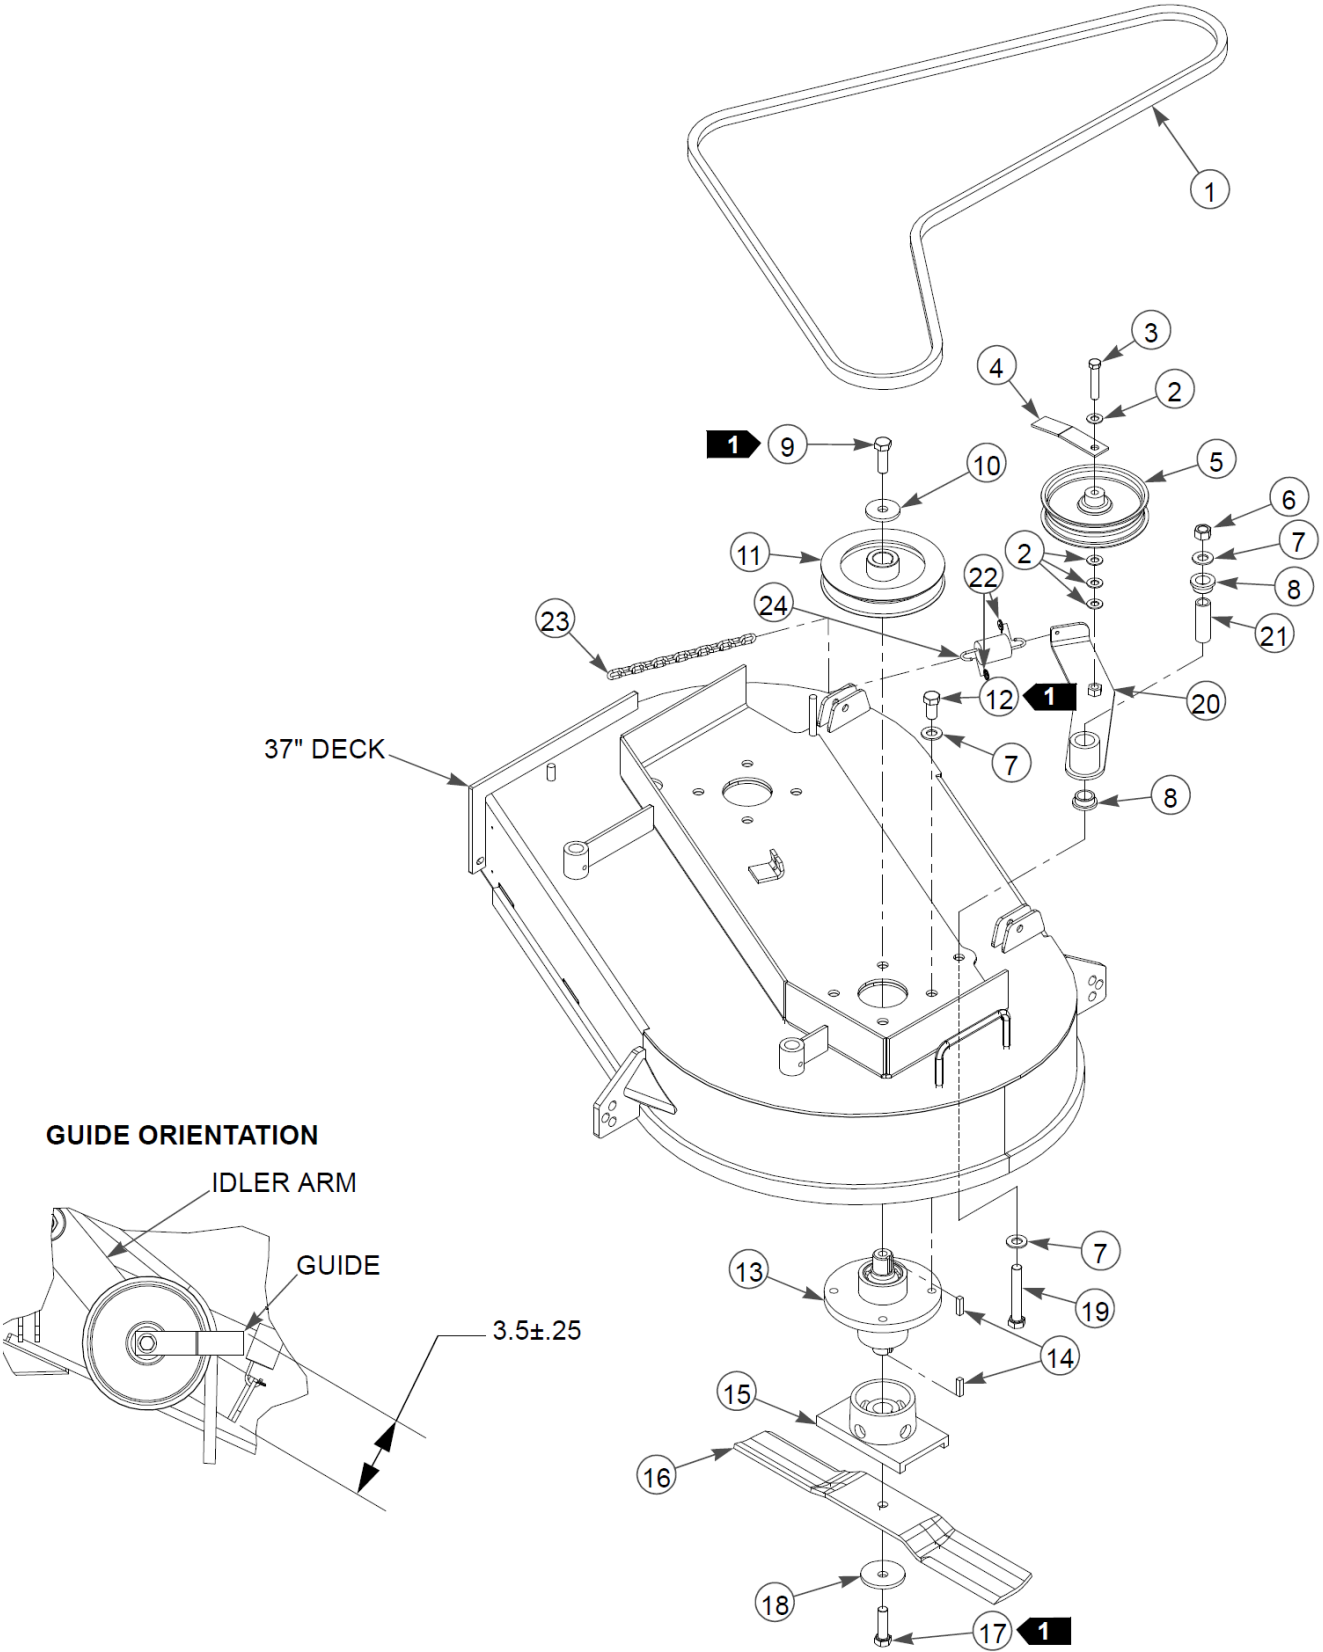

Élément	Numéro de pièce	Qté	Nom
1	779694	1	DRIVE BELT
2	767954	4	FW 0.379X.82X.06 HD ZN
3	016410	1	CS .375-16X2.000HXG5
4	345355	1	GUIDE, DECK IDLER WB
5	504480	1	PULLEY, FLAT IDLER 5.00
6	008193	1	NT .500-13HXG5
7	767962	10	FW .531 x 1.063 x .175
8	770867	2	BUSHING, PLAS .750x1(FS)
9	078378	2	CS .500-20X1.500HXG5
10	078386	2	FW 0.510X1.75X.18 ZN
11	770842	2	PULLEY, DECK DRIVE
12	016527	8	CS .500-13X1.000HXG5
13	520627	2	SPINDLE ASSY (426296)
14	212472	4	KEY 1/4 SQ X 1.00 LG(FS)
15	035808	2	BLADE SADDLE
16	770339	2	BLADE, 19" CLOCKWISE RO
17	753798	2	CS .500-20X1.75 HX G5 ZN
18	752386	2	CW .505 X 1.625 X .140
19	077859	1	CS .500-13X3.250HXG5
20	335380	1	IDLER ARM W/A, 48" WB D
21	340158	1	BUSHING, IDLER PIVOT (P
22	779272	2	CLIP, TINNEMAN
23	259812	1	CHAIN, 13 LINK
24	036384	1	SPRING 1/4 COIL PL 1.23

Comments for Page: 37" Deck Pulley Assembly

 
1. Torque to 88.1–101.7 N•m.

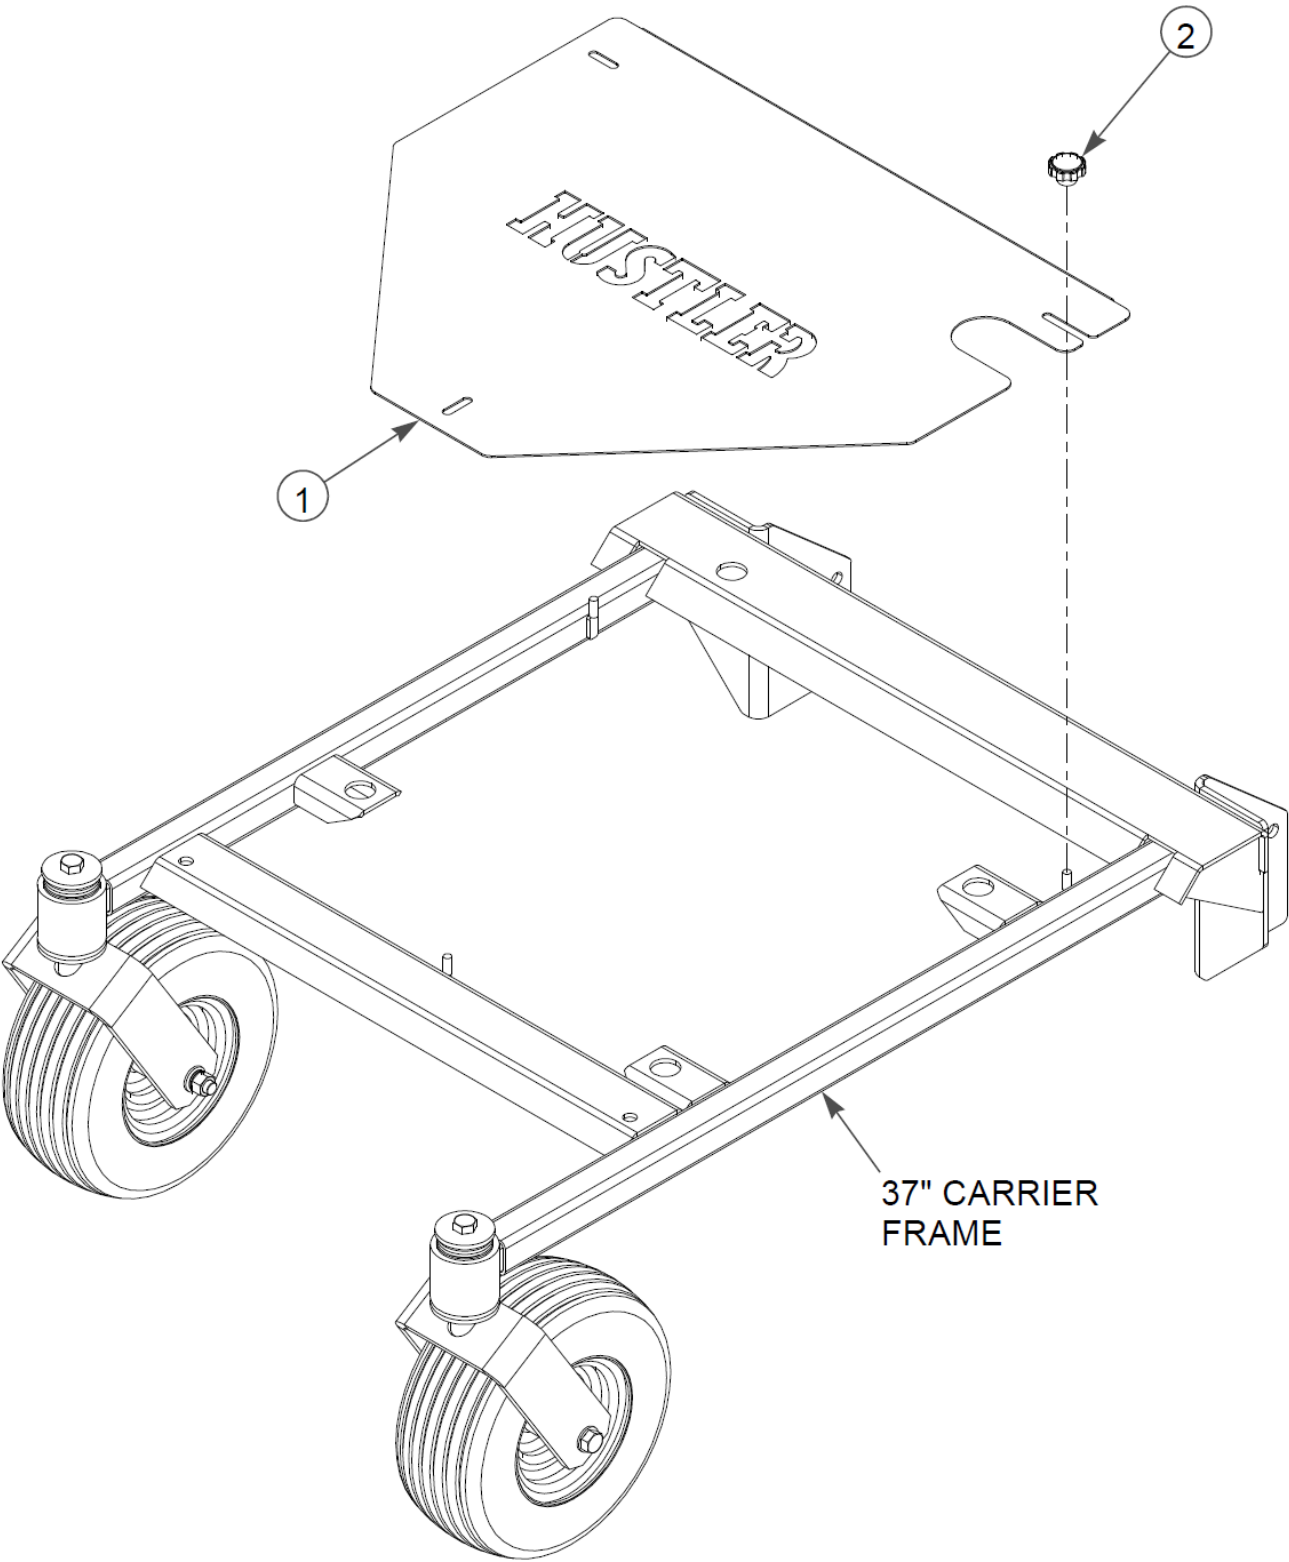

37" Deck Cover

Hustler Hydro WalkBehind CE Parts Manual


Élément	Numéro de pièce	Qté	Nom
1	346148	1	COVER, 37" WB DECK
2	774497	3	KNOB, FLUTED.312-18x.87

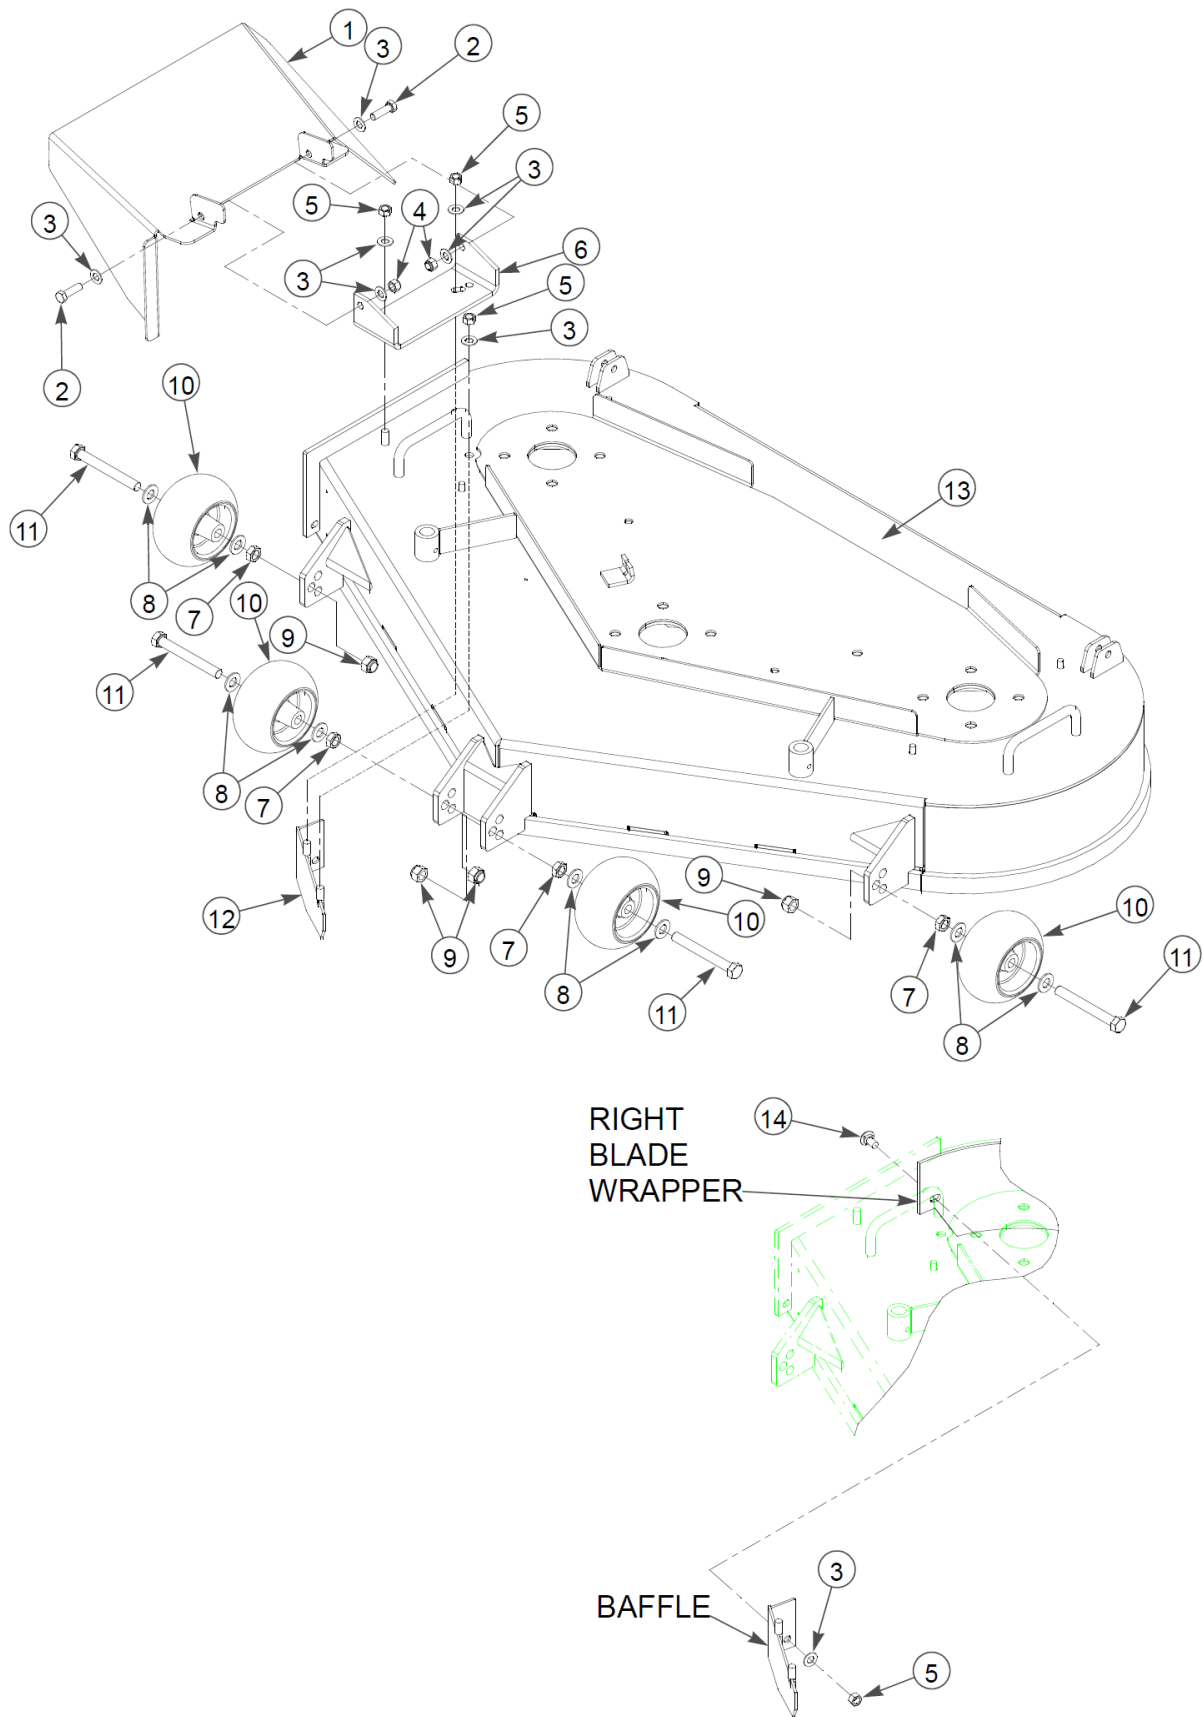 

Élément	Numéro de pièce	Qté	Nom
1	347971	1	CHUTE, DISCHARGE 52" MM
2	005116	2	CS .375-16X1.38 HX G5 ZN
3	767954	8	FW 0.379X.82X.06 HD ZN
4	086660	2	NT .375-16NLG8
5	054502	4	NT .375-16HXG5
6	317073	1	BRACKET, DISCH CHUTE MT
7	053199	4	NT .500-13JAMG5
8	767962	8	FW .531 x 1.063 x .175
9	781567	4	NT .500-13NLG5
10	031997	4	ANTI-SCALP WHEEL
11	781708	4	CS .500-13X4.25 HX G5 ZN
12	316992	1	BAFFLE W/A
13	335745	1	DECK W/A, 48" WB TRACTO
14	011320	1	CB .375-16X .750 STD ZN
Not Shown	788166	4	WHEEL ASSY, ANTI SCALP

Comments for Page: 48" Deck Assembly

 
1. 788166 includes items 7, 8, 10, and 11.

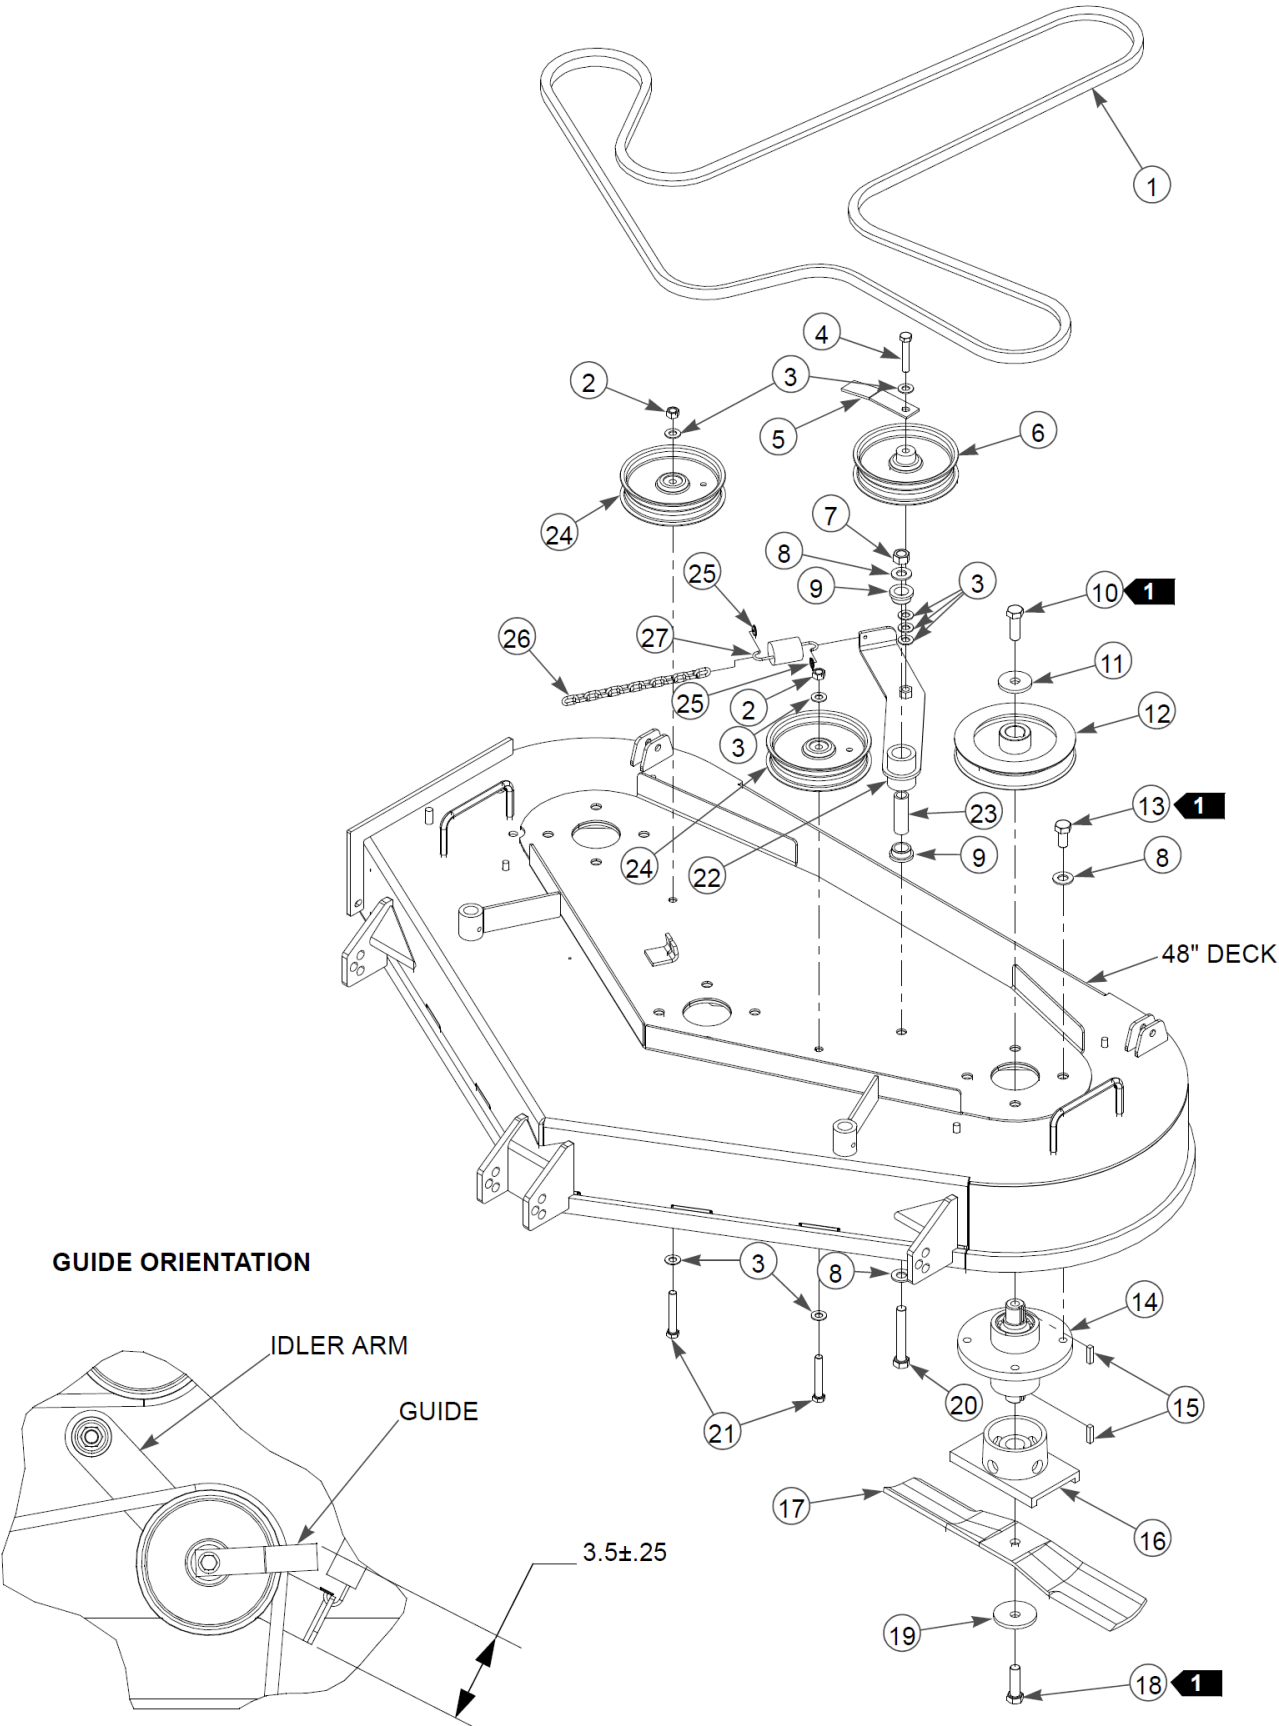

Élément	Numéro de pièce	Qté	Nom
1	776724	1	DECK BELT
2	054502	2	NT .375-16HXG5
3	767954	8	FW 0.379X.82X.06 HD ZN
4	016410	1	CS .375-16X2.000HXG5
5	345355	1	GUIDE, DECK IDLER WB
6	504480	1	PULLEY, FLAT IDLER 5.00
7	008193	1	NT .500-13HXG5
8	767962	14	FW .531 x 1.063 x .175
9	770867	2	BUSHING, PLAS .750x1(FS)
10	078378	3	CS .500-20X1.500HXG5
11	078386	3	FW 0.510X1.75X.18 ZN
12	770842	3	PULLEY, DECK DRIVE
13	016527	12	CS .500-13X1.000HXG5
14	520627	3	SPINDLE ASSY (426296)
15	212472	6	KEY 1/4 SQ X 1.00 LG(FS)
16	035808	3	BLADE SADDLE
17	767111	3	BLADE, 17" CLOCKWISE RO
18	753798	3	CS .500-20X1.75 HX G5 ZN
19	752386	3	CW .505 X 1.625 X .140
20	077859	1	CS .500-13X3.250HXG5
21	016428	2	CS .375-16X2.500HXG5
22	335380	1	IDLER ARM W/A, 48" WB D
23	340158	1	BUSHING, IDLER PIVOT (P
24	770826	2	IDLER PULLEY NHI 5"
25	779272	2	CLIP, TINNEMAN
26	259812	1	CHAIN, 13 LINK
27	036384	1	SPRING 1/4 COIL PL 1.23

Comments for Page: 48" Deck Pulley Assembly

 
1. Torque to 88.1–101.7 N•m.

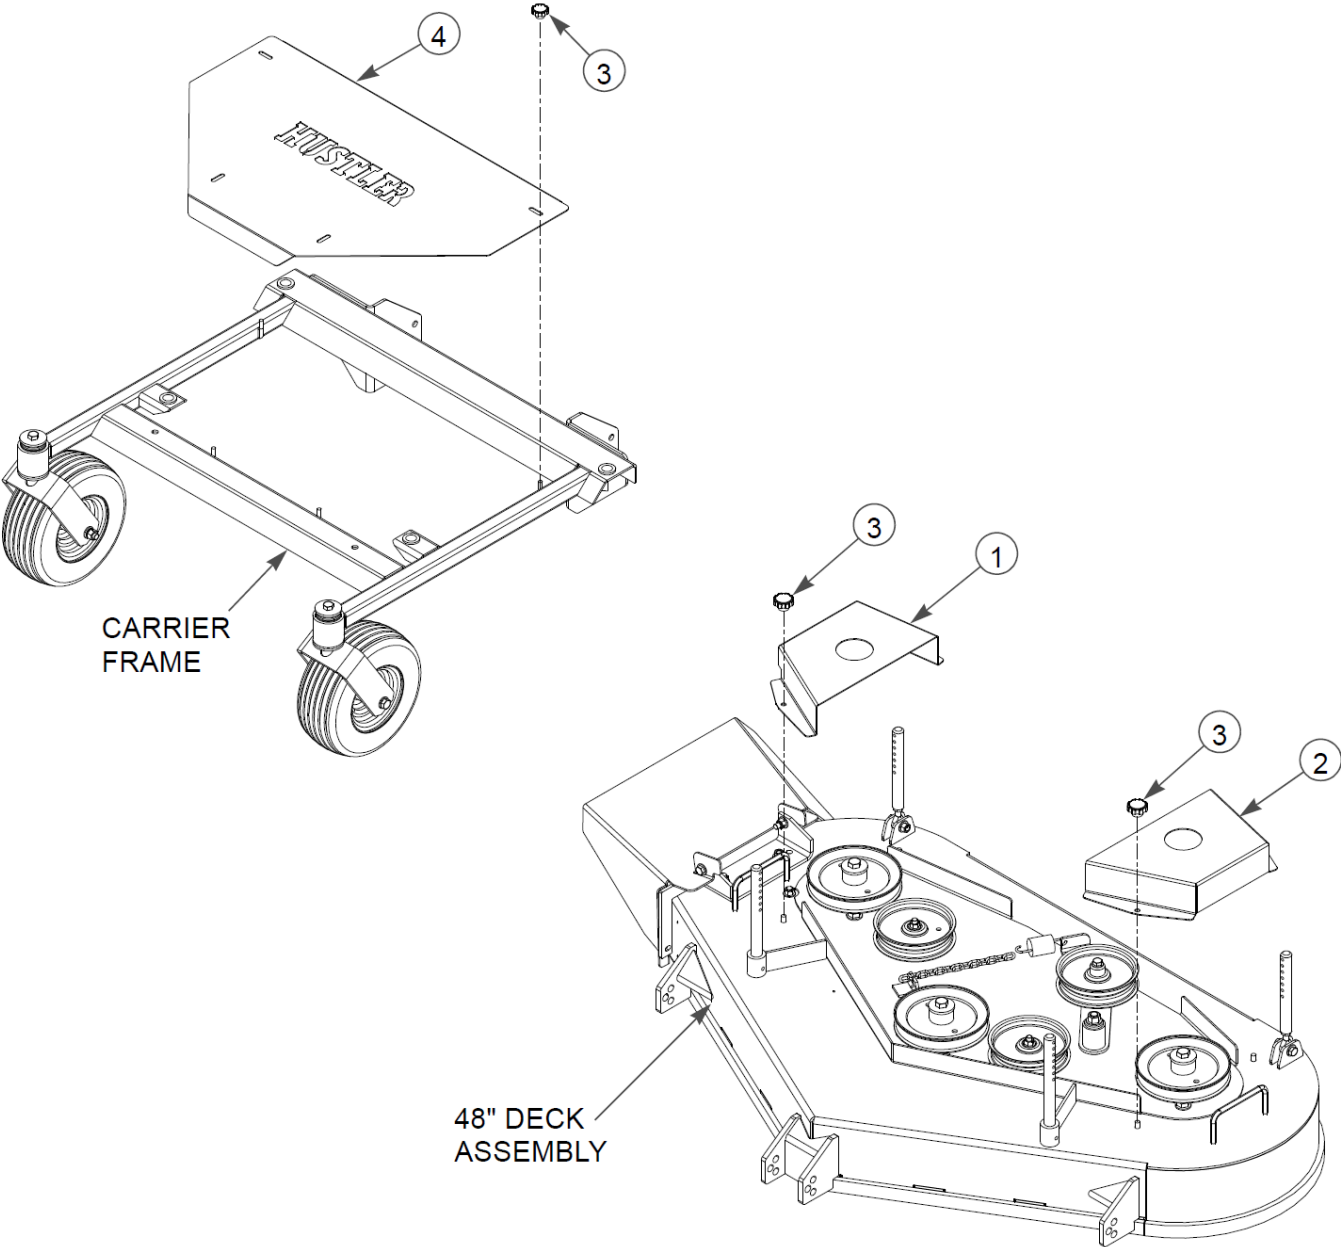

48" Deck Covers

Hustler Hydro WalkBehind CE Parts Manual


Élément	Numéro de pièce	Qté	Nom
1	343285	1	COVER W/A, 48" RIGHT WB
2	343319	1	COVER W/A, 48" LEFT WB
3	774497	8	KNOB, FLUTED.312-18x.87
4	343152	1	COVER, 48" CENTER

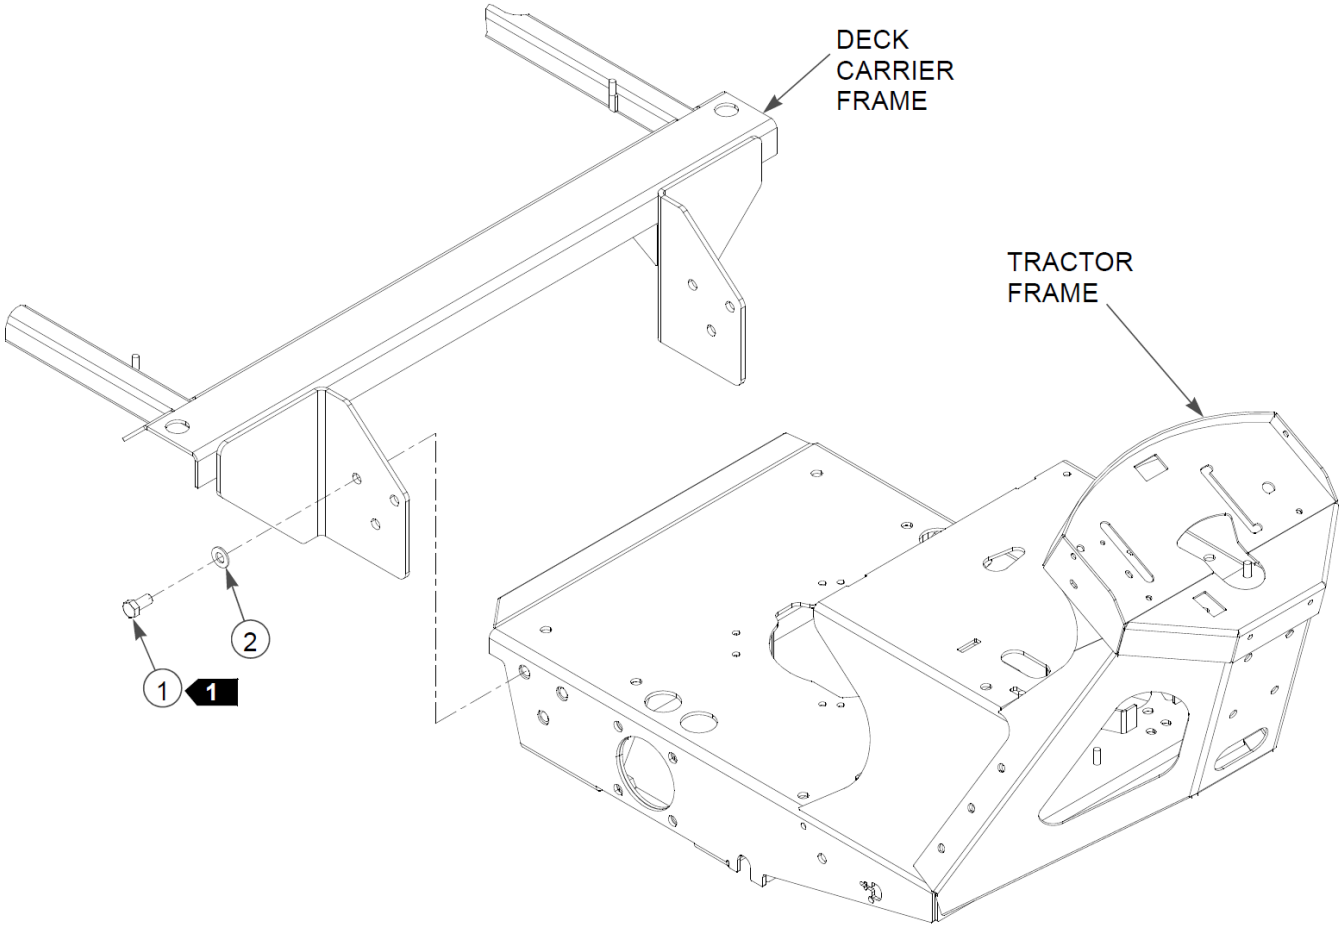 

Élément	Numéro de pièce	Qté	Nom
1	016527	6	CS .500-13X1.000HXG5
2	767962	6	FW .531 x 1.063 x .175

Comments for Page: Deck Carrier Frame Installation

 
1. Torque to 101.7 N•m.

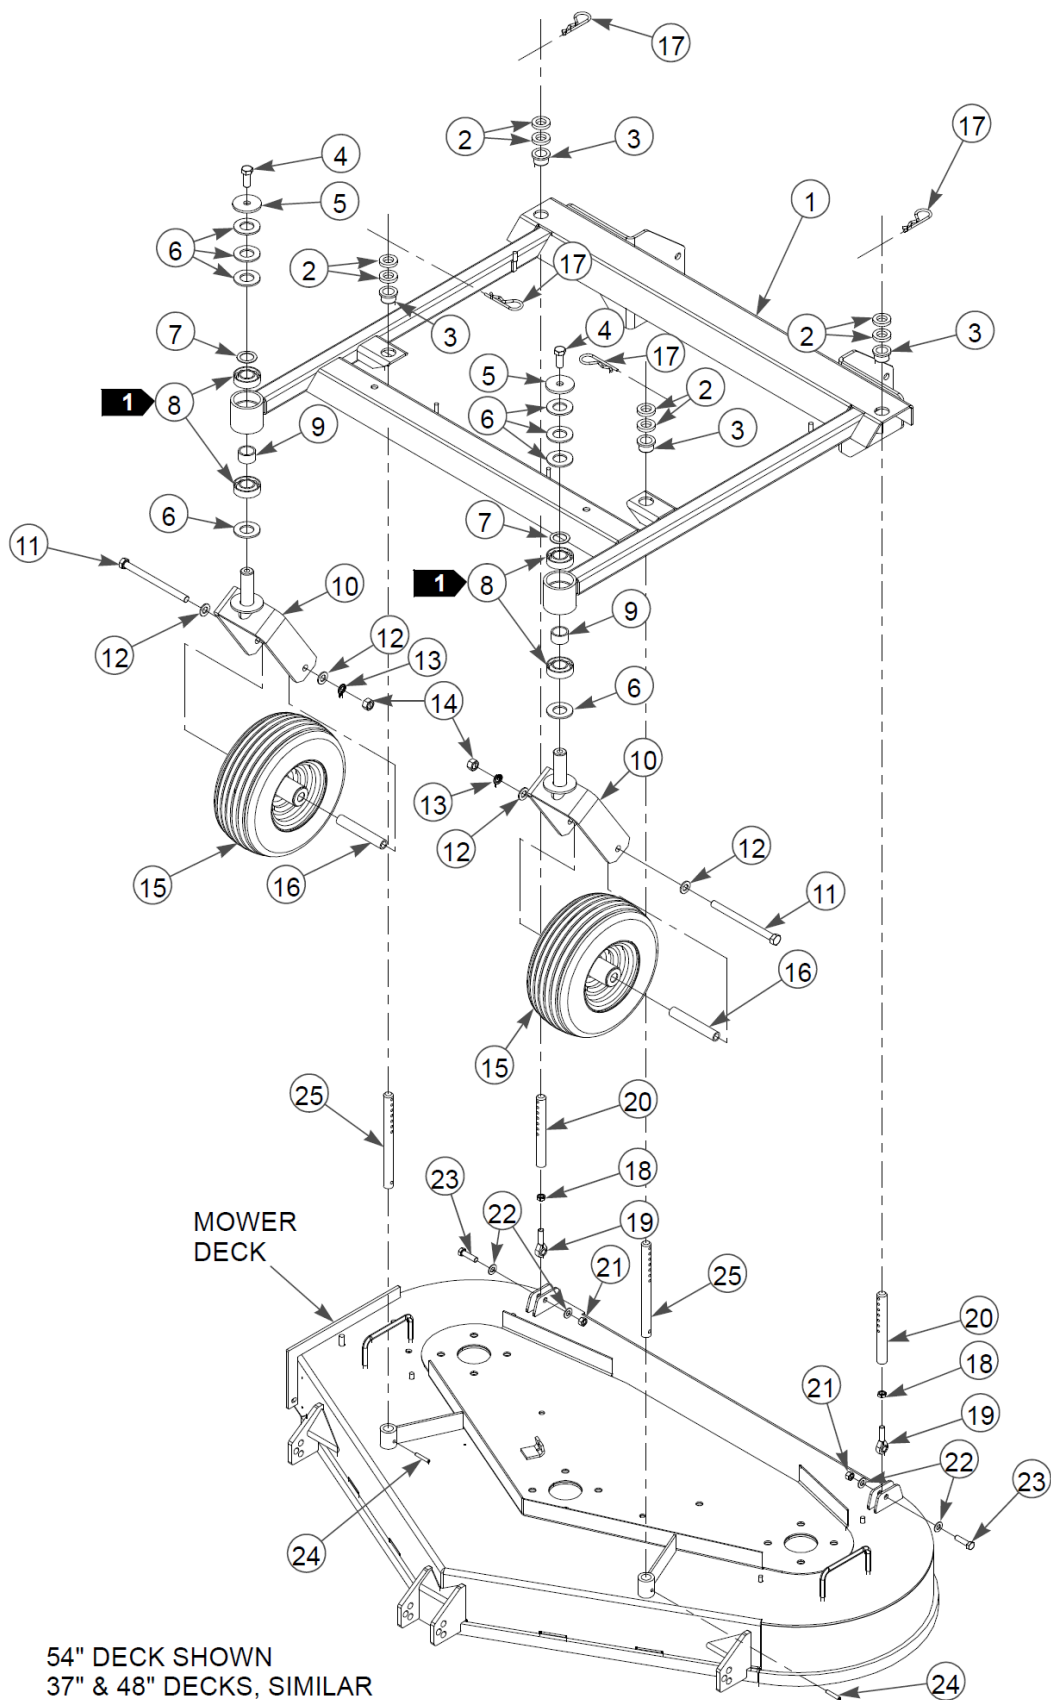


Élément	Numéro de pièce	Qté	Nom
1	346130	1	CARRIER FRAME W/A 37" W
Not Shown	339671	1	CARRIER FRAME W/A, 48"W
Not Shown	343335	1	CARRIER FRAME W/A, 54"
2	778399	8	FW .781X1.38X.25 ZN
3	778373	4	BUSHING, PLASTIC .875x1
4	705954	2	CS .500-13X1.25 HX G5 ZN
5	344267	2	FW .510X2.15X.19 ZN
6	072272	8	FW 1.060 SAE ZY
7	082180	2	MB 1.000X1.500X.049 PN
8	077123	4	BEARING W/O COLLAR
9	778449	2	BEARING SPACER
10	339689	2	CASTER FORK W/A, WB/FAS
11	042630	2	CS .500-13X6.500HXG5
12	004168	4	FW .531x1.00x.090 ZN
13	017046	2	LW0.500SPLIT
14	067918	2	NT .500-13HXG8
15	768044	2	T/W 11X4.00-5 RIBBED
16	306969	2	GAGE WHEEL SPACER
17	025593	4	HP .177x3.25 WW#206 ZN
18	706176	2	NT .375-24JAMG5
19	778431	2	ROD END, SPHERICAL.375-
20	335398	2	ROD, REAR DECK HEIGHT(P
21	054502	2	NT .375-16HXG5
22	767954	4	FW 0.379X.82X.06 HD ZN
23	005116	2	CS .375-16X1.38 HX G5 ZN
24	758631	2	RP .250X 1.375 HEAVY SP
25	335364	2	ROD, FRONT DECK HEIGHT(

Comments for Page: Deck Carrier Assembly

 1. Assemble with extended inner race down.

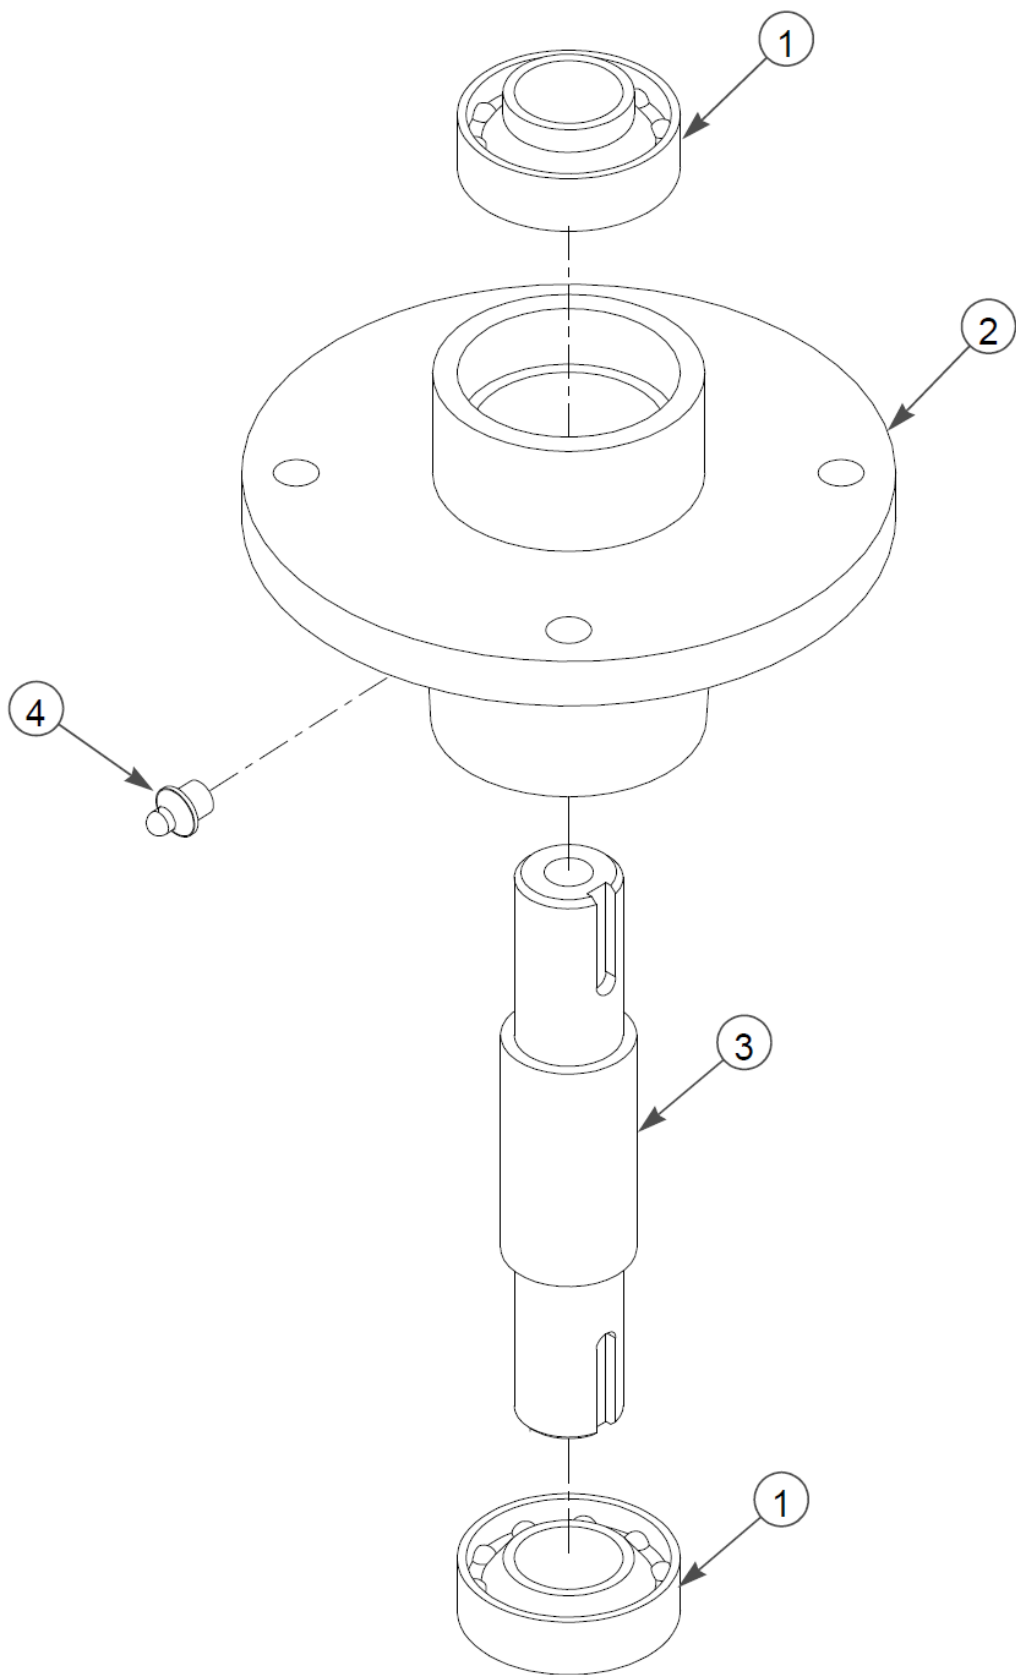


Élément	Numéro de pièce	Qté	Nom
1	077123	2	BEARING W/O COLLAR
2	034843	1	CAST SPINDLE HOUSING
3	008805	1	SPINDLE SHAFT
4	012005	1	GREASE FITTING

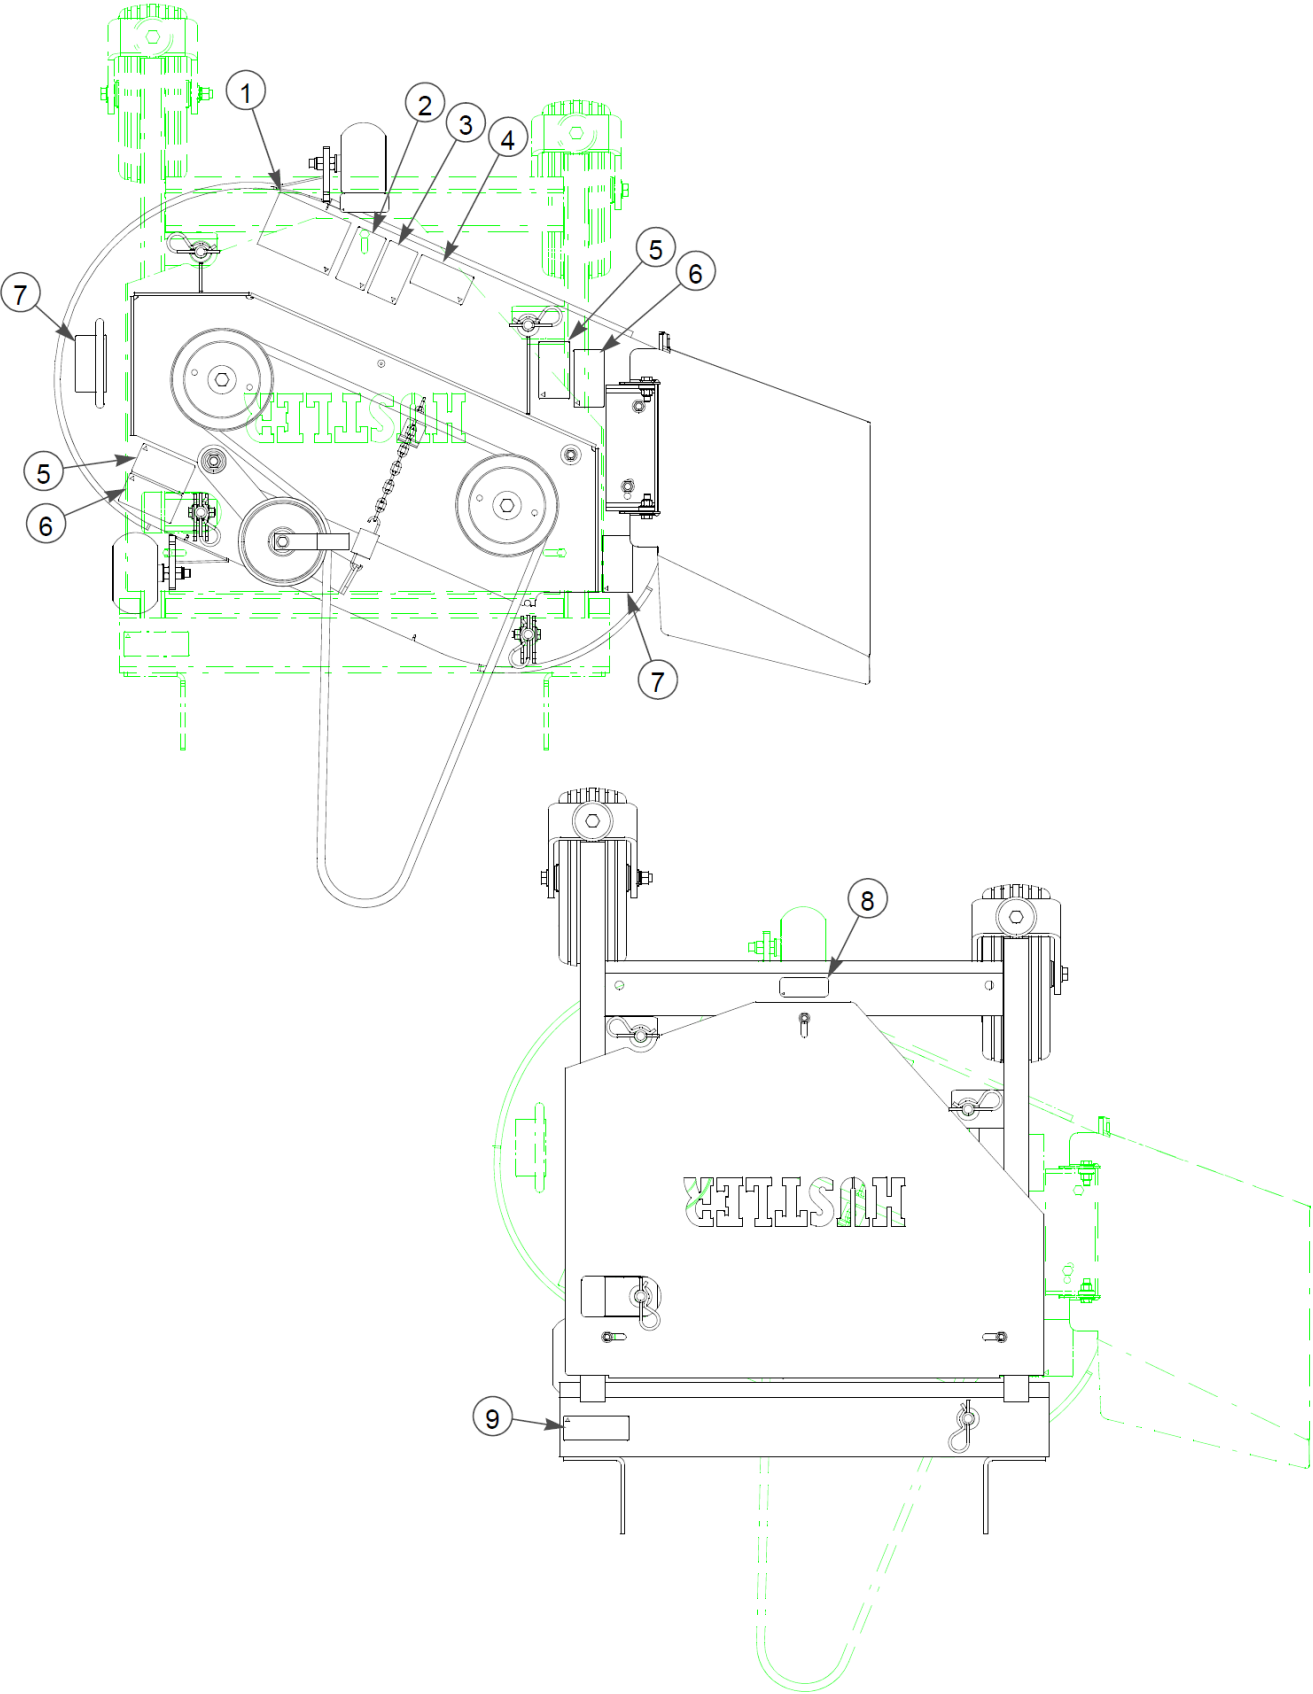 




37" Decal Group

Hustler Hydro WalkBehind CE Parts Manual

Élément	Numéro de pièce	Qté	Nom
1	779835	1	DECAL, 37" DECK, ID
2	789719CE	1	DECAL, READ SERVICE MANUAL
3	789701CE	1	DECAL, READ OWNER'S MANUAL
4	727420CE	1	DECAL, DISCHARGE CHUTE
5	727438CE	2	DECAL, FINGERS AND TOES
6	789685CE	2	DECAL, THROWN OBJECT
7	727453CE	2	DECK COVER CE DECAL
8	793588	1	HUSTLER NAME PLATE
9	778670CE	1	DECAL, WB DECK HEIGHT CE

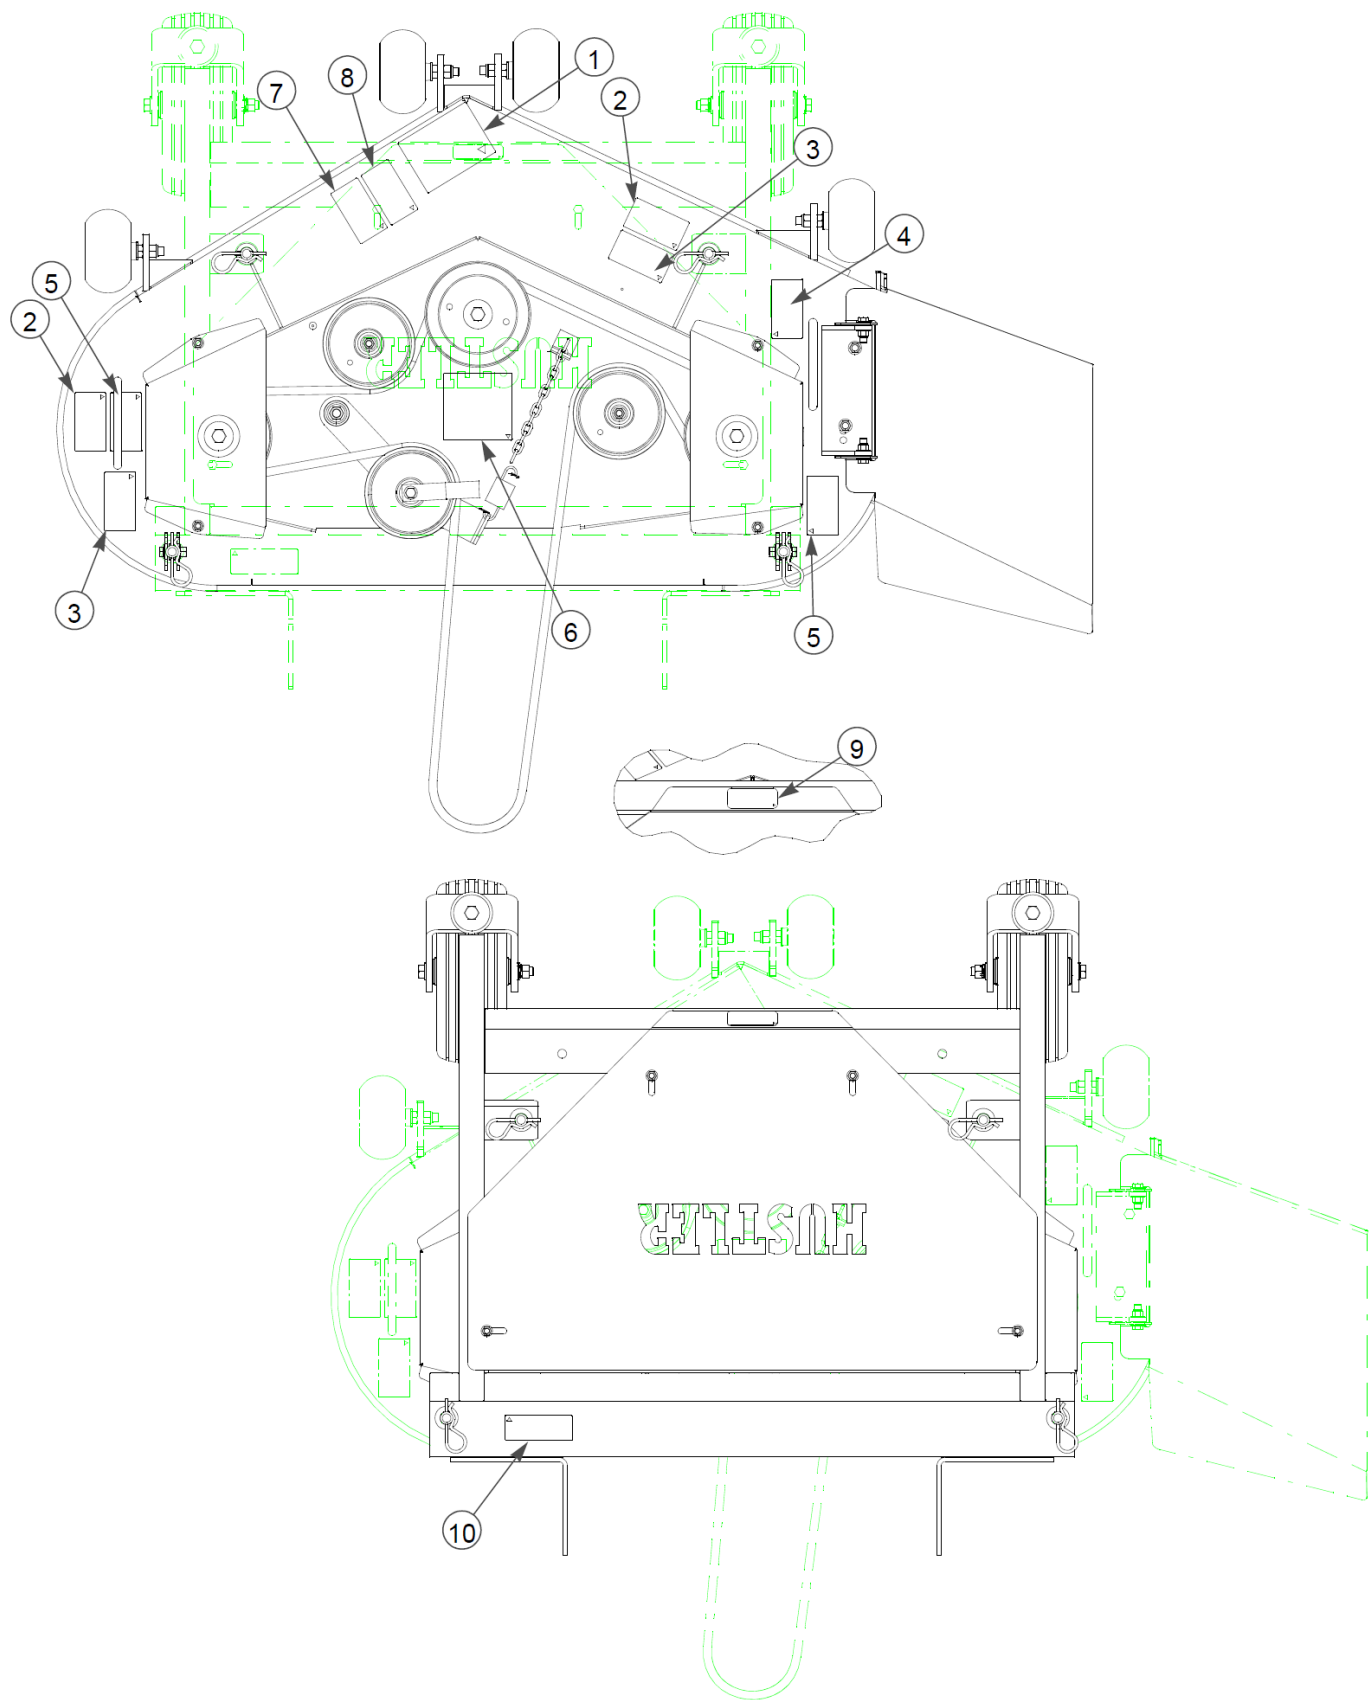 


Élément	Numéro de pièce	Qté	Nom
1	771006	1	DECAL, 48" DECK ID
2	789685CE	2	DECAL, THROWN OBJECT
3	727438CE	2	DECAL, FINGERS AND TOES
4	727420CE	1	DECAL, DISCHARGE CHUTE
5	727453CE	2	DECK COVER CE DECAL
6	778688CE	1	DECAL, WB BELT RTG CE
7	789701CE	1	DECAL, READ OWNER'S MANUAL
8	789719CE	1	DECAL, READ SERVICE MANUAL
9	793588	1	HUSTLER NAME PLATE
10	778670CE	1	DECAL, WB DECK HEIGHT CE

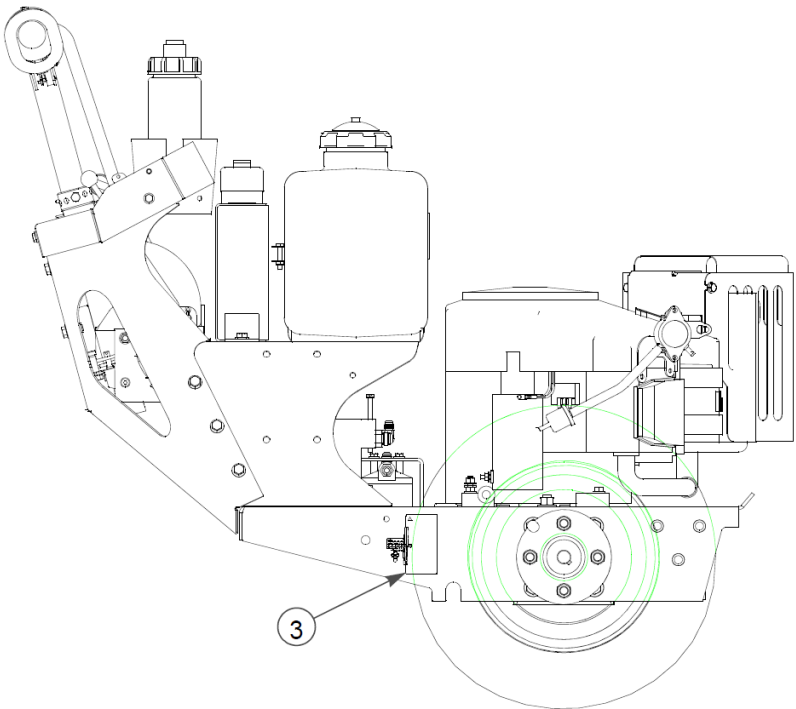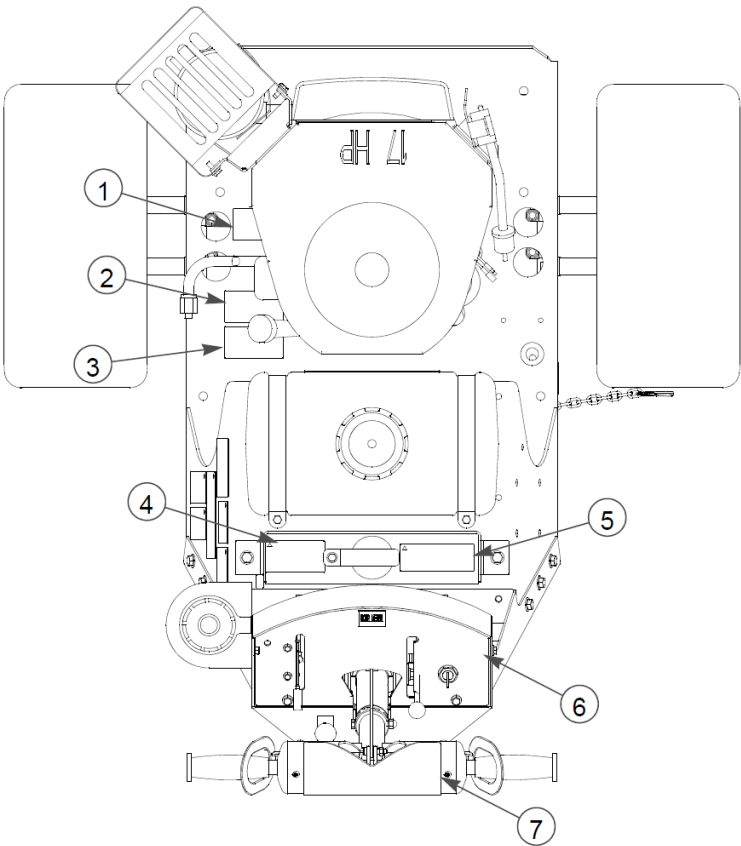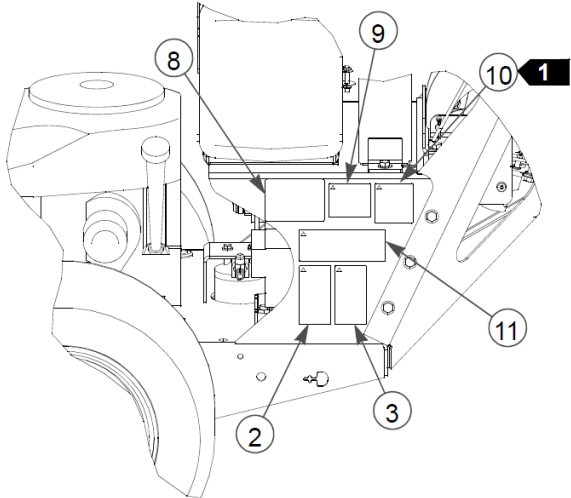   

Élément	Numéro de pièce	Qté	Nom
1	727008CE	1	DECAL, HYDRO FLUID
2	789719CE	2	DECAL, READ SERVICE MANUAL
3	789701CE	3	DECAL, READ OWNER'S MANUAL
4	779280CE	1	DECAL, HOT CE
5	779363CE	1	DECAL, WB REFUELING CE
6	778704CE	1	DECAL, WB DASH PANEL CE
7	778696	1	DECAL, WB H-BAR STEERIN
8	083279	1	SERIAL NUMBER / SPEC. DECAL
9	776310	1	DECAL, CE MARK
10	789776CE	1	DBA LIMIT DECAL
Not Shown	794834CE	1	CE 100 DBA LIMIT DECAL
11	789727CE	1	DECAL, EYE/EAR/FOOT

Comments for Page: Mower Decal Group

 
1. Use 789776CE on 925651CE mowers; use 794834CE on 925677CE mowers.

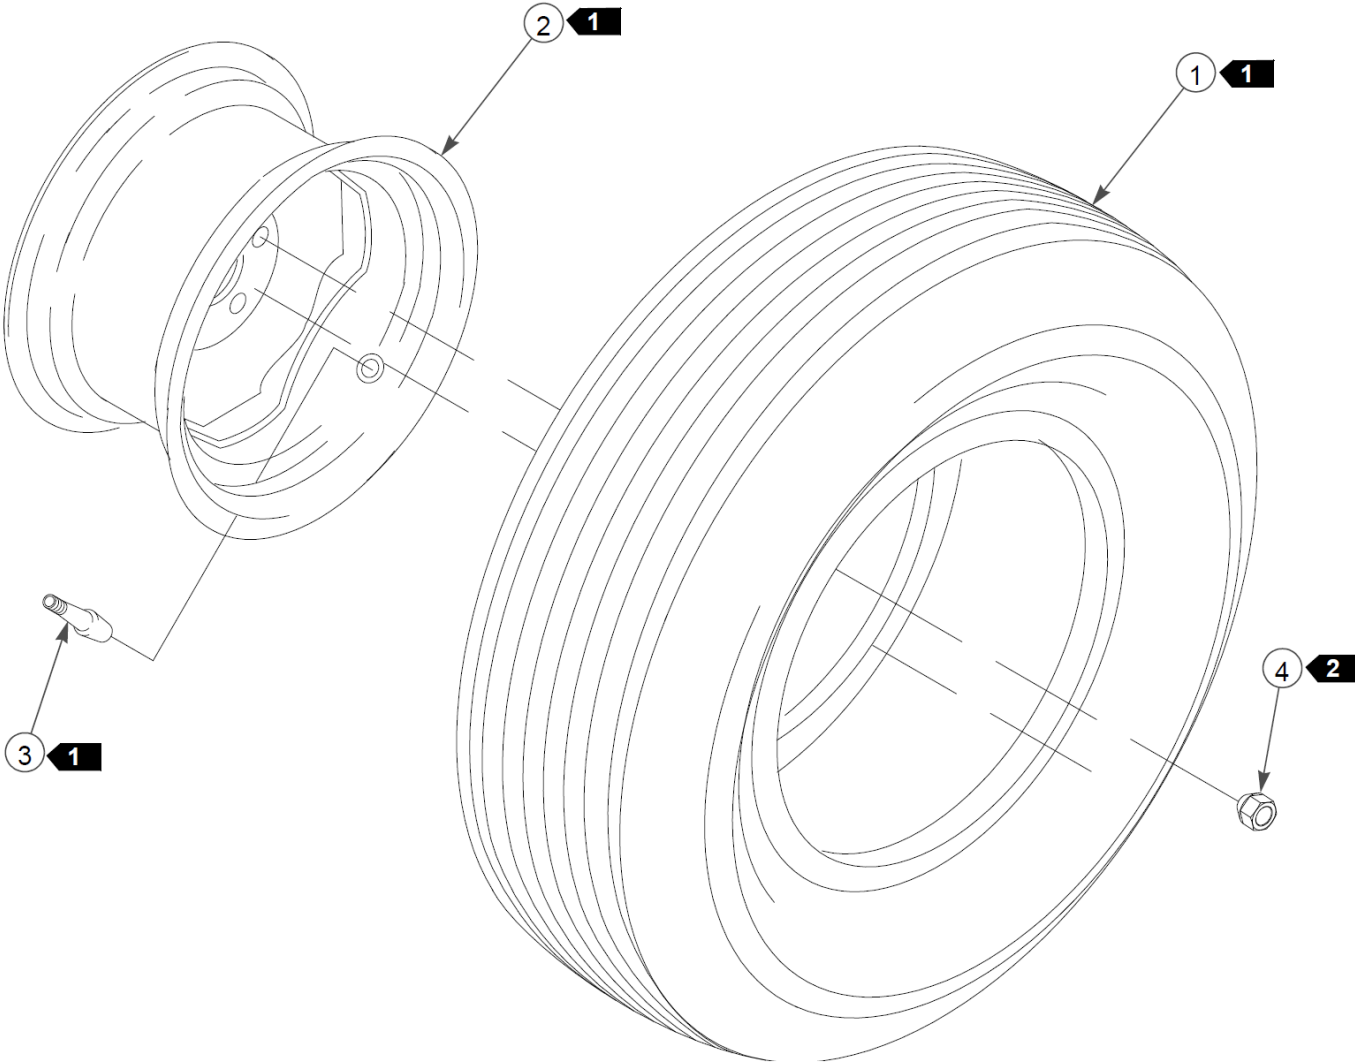

Élément	Numéro de pièce	Qté	Nom
1	779702	2	TIRE/WHL 18 X 6.50-8
Not Shown	779710	1	TIRE 18 X 6.50-8
2	779702	1	TIRE/WHL 18 X 6.50-8
3	019521	1	TIRE VALVE TR-412 GOODY
4	061077	8	WHEEL NUT

Comments for Page: Drive Wheel Assembly—37"

 
1. Quantities are per Tire/Wheel Assembly. Inflate to 55.16–68.95 kPa
2. Torque Item 4 (Lug Nuts) to 88.1–101.7N•m.
3. 779728 includes Item 3 (019521 Valve Stem).

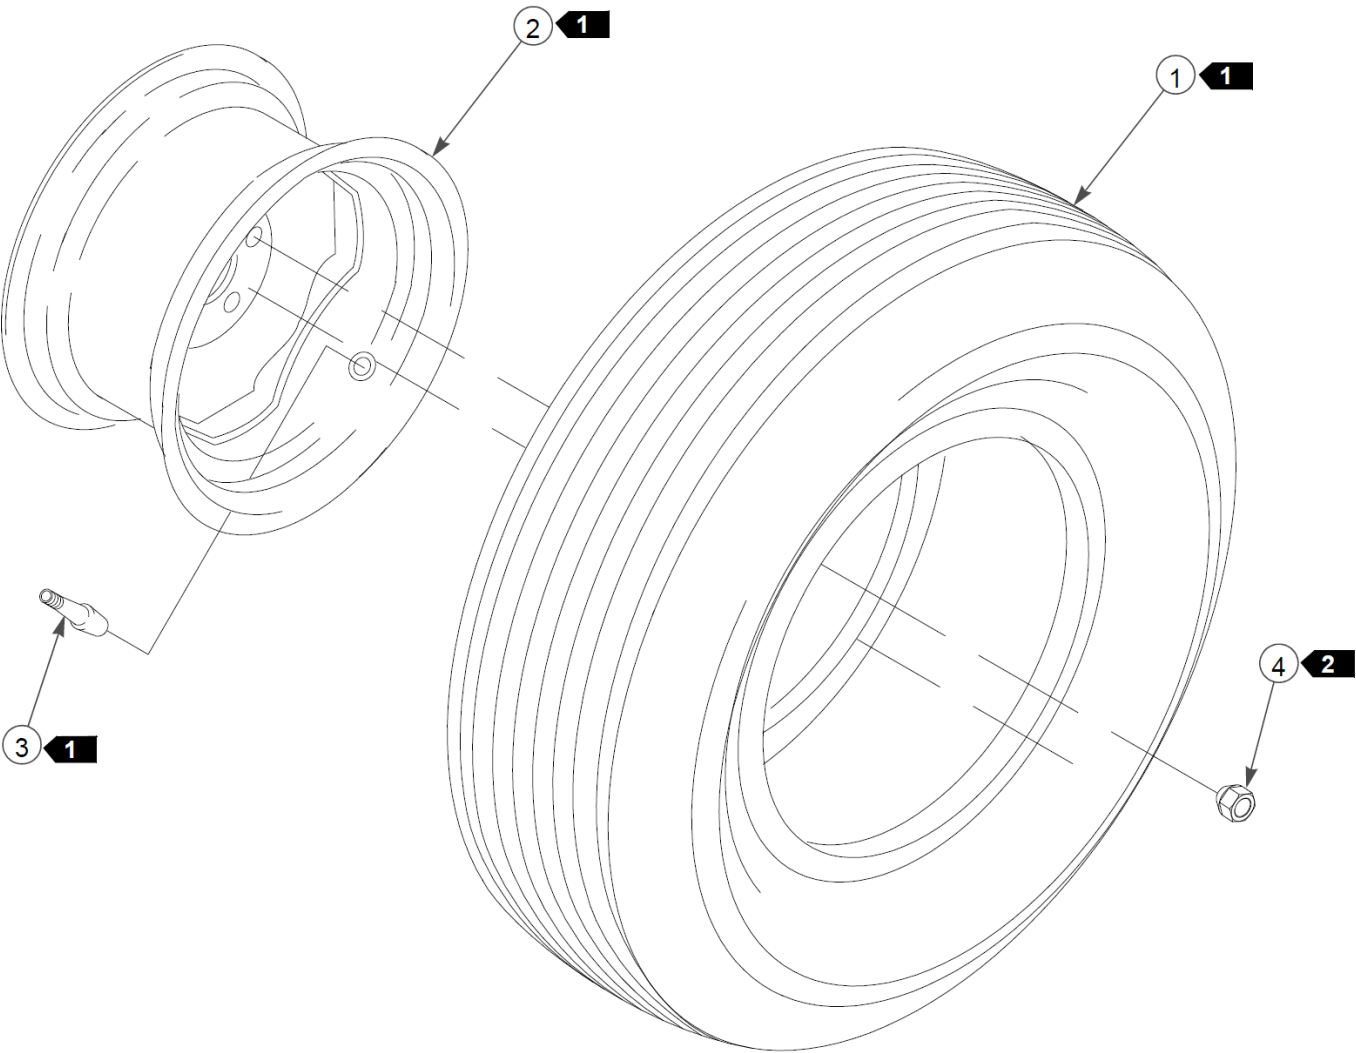

Élément	Numéro de pièce	Qté	Nom
1	770354	1	TIRE 18 X 8.00 MULTI TR
Not Shown	788539	2	TIRE/WHEEL ASSY 20 X 10
Not Shown	798819	1	TIRE 20x10-8 4 PLY
2	768291	1	WHEEL
Not Shown	783159	1	WHL 8X7.00 4X4.0 SLV
3	019521	1	TIRE VALVE TR-412 GOODY
4	061077	8	WHEEL NUT

Comments for Page: Drive Wheel Assembly—48"

 1. Quantities are per Tire/Wheel Assembly. Inflate to 55.16–68.95 kPa.
2. Torque Item 4 (Lug Nuts) to 88.1–101.7 N•m.

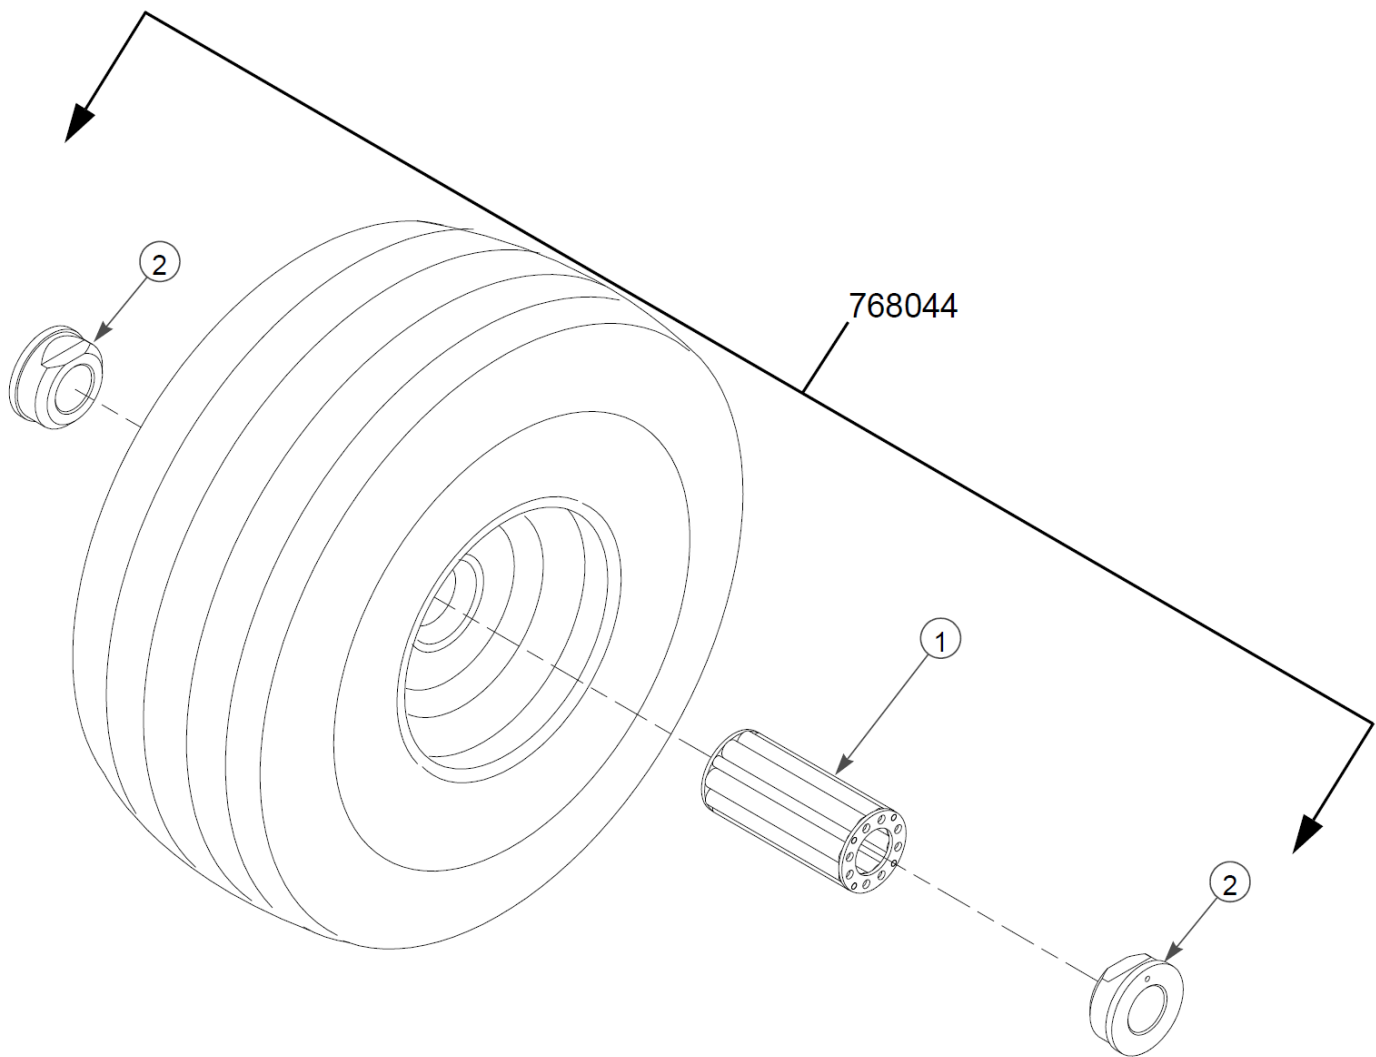

Élément	Numéro de pièce	Qté	Nom
1	772814	1	BEARING, 3/4" ROLLER
2	772806	2	BEARING CAP

Comments for Page: Front Wheel Assembly

- 1. Inflate to 55.16–68.95 kPa.