


Hustler® Parts Manual



200 South Ridge Road

Hesston, Kansas

67062

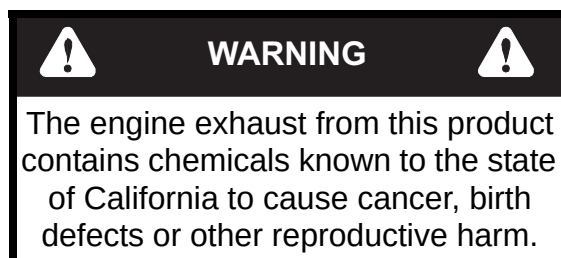

NOTICE OF REQUIREMENT OF SPARK ARRESTER MUFFLER

This equipment may create sparks that can start fires around dry vegetation. California Public Resources Code Section 4442.6 provides that it is unlawful to use or operate an internal combustion engine on any forest-covered, brush-covered, or grass-covered land unless the engine is equipped with a spark arrester maintained in effective working order. A spark arrester is a device constructed of nonflammable materials specifically for the purpose of removing and retaining carbon and other flammable particles over 0.0232 of an inch in size from the exhaust flow of an internal combustion engine that uses hydrocarbon fuels or which is qualified and rated by the United States Forest Service. Other states or federal areas may have similar laws. The Operator Should Contact Local Fire Agencies For Laws or Regulations Relating to Fire Prevention Requirements. THIS EQUIPMENT DOES NOT HAVE A SPARK ARRESTER AND YOU SHOULD CONTACT YOUR AUTHORIZED DEALER FOR THE PURCHASE OF A SPARK ARRESTER.

Inspect spark arrester daily; replace every 500 hours or as needed.

The Engine Owner's Manual provides information regarding the U.S. Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance and warranty.

Keep Engine Owner's Manual with your unit. Should the Engine Owner's Manual become damaged or illegible, replace immediately. Replacements may be ordered per the information found in the Product Information section of the owner's manual.

Federal law and California State law prohibit the following acts or the causing thereof:

- 1. The removal or rendering inoperative by any person other than for purposes of maintenance, repair, replacement, of any device or element of design incorporated into any equipment for the purposes of emissions control prior to or after its sales or delivery to the ultimate purchaser or while it is in use, or**
- 2. The use of the equipment after such device or element of design has been removed or rendered inoperative by any person.**

General Information	1
Frame, Instrument Panel, Wire Harness, Battery & Engine Guard	
Frame	3-1
Fenders, Instrument Panel & Wire Harness	3-2
Battery	3-3
Engine Guard	3-4
Transmissions, Drive Belt, Steering & Brake	
Transmission Assembly & Drive Belt (Multi-Page)	4-1
Transmission Service Parts	4-2
Steering & Brake	4-3
Steering Cover Assembly	4-4
Wheels & Tires	
Wheel & Tire	5-1
Front Wheel Assembly Breakdown	5-2
Drive Wheel Breakdown	5-3
Engine, Muffler, Clutch & Fuel System	
Engine, Muffler & Clutch (Multi-Page)	6-1
Engine Service Parts	6-2
Fuel System	6-3
Deck, Deck Belt, Blades & Deck Lift	
Service Deck	7-1
Deck Pulleys & Spindles	7-2
Spindle Service Parts - 604214	7-3
Deck Pulley Covers, Discharge Chute, Deck Belt, Mower Blades	7-4
Deck Lift	7-5
Seat	
Seat	8-1
Seat Service Parts	8-2

General Information

Note: When ordering parts, you must use the part number as shown for each part, not the index number. Always give the model and serial number to your parts and service representative.

Note: Items sold in bulk such as seals and hoses are sold by the foot.

Using This Manual

This manual is part of a service package for the Hustler® mowers. Use of this manual in conjunction with other Hustler® mower and component manuals will provide the information necessary to service and maintain Hustler® mowers.

This Parts Manual provides a complete parts listing for the unit. Use this manual when ordering parts. Illustrations used were current at the time of printing, but subsequent production changes may cause your machine to vary slightly in detail. Excel Industries, Inc. reserves the right to redesign and change the machine as deemed necessary, without notification. If a change has been made to your machine which is not reflected in this parts manual, see your authorized dealer for current information and parts.

The Service Manual is a service guide for use by Service Technicians. It provides the necessary information needed to perform normal maintenance requirements on these units.

The Operator's Manual provides fundamental operational information and operational safety that is needed when operating the mower.

The component manuals are furnished by the various manufacturers to be used for the troubleshooting and servicing of their products.

Hardware Description Codes & Abbreviations

The following codes are used throughout this parts manual. Refer to this list when ordering parts.


ABBREVIATION	DESCRIPTION	ABBREVIATION	DESCRIPTION
CB	CARRIAGE BOLT	MB	MACHINE BUSHING
CE	CLEVIS PIN	MS	MACHINE SCREW
CN	CLIP NUT	NT	NUT
CP	COTTER PIN	SC	SELF TAPPING CAP SCREW
CS	CAP SCREW	SH	SOCKET HEAD
CW	CUP WASHER	SB	SHOULDER BOLT
FDRW	FENDER WASHER	SS	SET SCREW
FW	FLAT WASHER	OD	OUTSIDE DIAMETER
HX	HEX HEAD	ID	INSIDE DIAMETER
LW	LOCK WASHER	WN	WELD NUT

Standard Torques


The following chart lists the standard torque values for the threaded fasteners found in this manual. Torque all cap screws, nuts and set screws to these values unless a different torque is shown in the Notes section next to the fastener.

SIZE	FT-LBS	N•M	SIZE	FT-LBS	N•M
.250	8.2	11.1	M3	1	1.3
.312	17	23	M4	2.2	3
.375	30	40	M5	4.5	6.1
.438	48	65	M6	7.7	10.4
.500	73	99	M8	18.5	25
.562	105	143	M10	37	50
.625	145	200	M12	64	87
.750	260	350	M14	80	108.5
.875	420	565	M16	160	215
1.00	625	850	M20	320	435
			M24	555	750

This page intentionally left blank

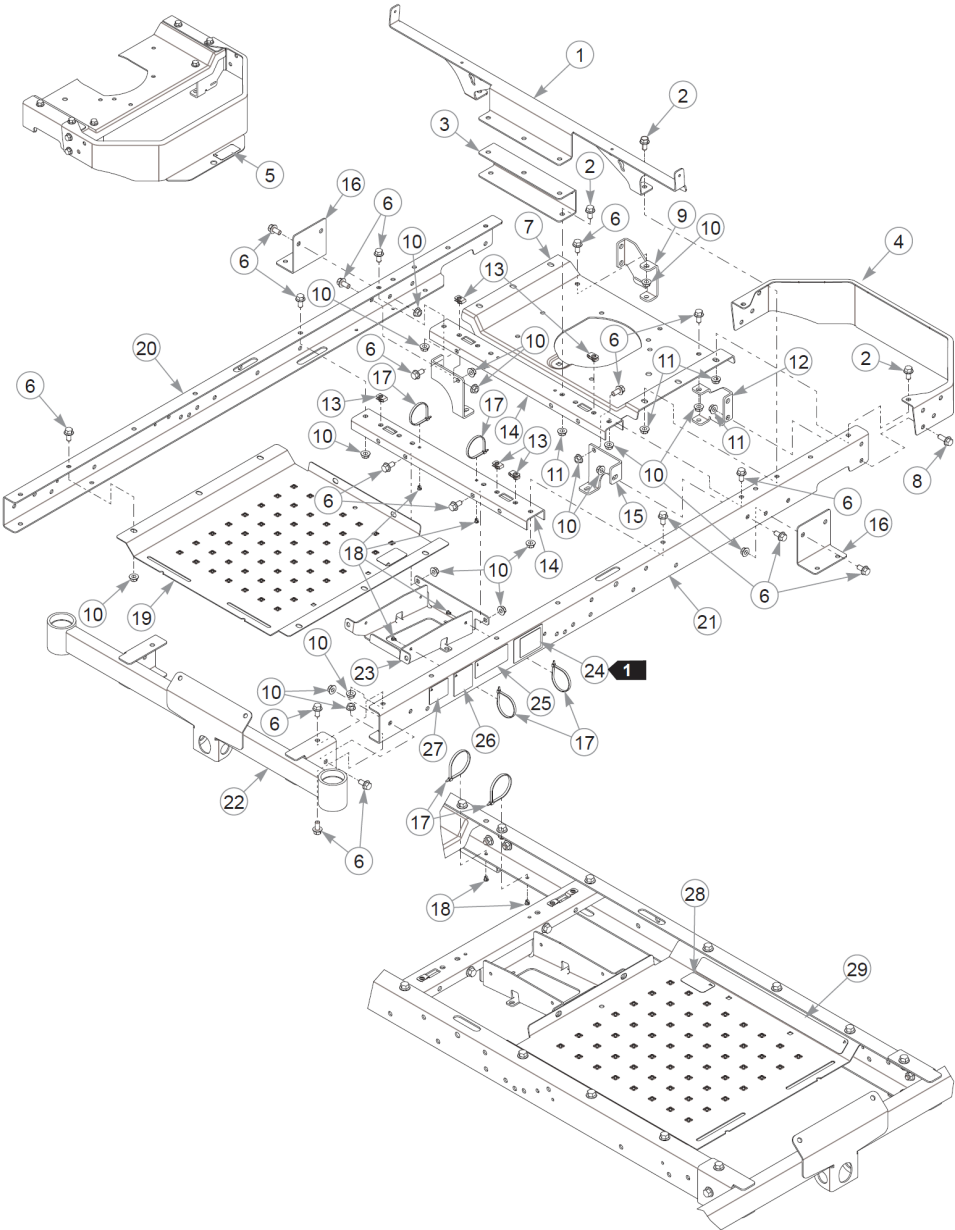

Item	Part No.	Qty	Name
1	123637-1	1	SEAT SUPPORT
2	029629	6	CS .375-16X0.75 HXF G5ZY
3	123636-1	1	SPRING SUPPORT
4	553148	1	SERVICE, BUMPER STAMPED
5	602041	1	DECAL, HOT
6	604176	30	CS .375-16X.75 HXF NF
7	551858	1	SVC, ENGINE PLATE
8	029751	4	CS .375-16X1.00 HXF G5ZY
9	551859	1	SVC, RS REAR BRKT
10	604177	30	NT .375-16 HXFLK PLN
11	016899	10	NT .375-16 FLKG5
12	551860	1	SVC, LS REAR BRKT
13	601982	5	CN .250-20X .150 MAX THK
14	551861	2	SVC, CROSS SUPPORT
15	551862	2	SVC, FRONT BRKT
16	551863	2	SVC, HYDRO BRKT
17	000331	6	WIRE TIE, SMALL/SHORT
18	604307	6	MOUNT, PUSH BUTTON
19	551865	1	SVC, FOOT PAN
20	119718	1	SVC, RS FRAME CHANNEL
21	551868	1	SVC, LS FRAME CHANNEL
22	551867	1	SVC, FRONT CROSS FRAME
23	552570	1	BATTERY TRAY
24	N/A	1	SERIAL NUMBER / SPEC DECAL
25	601967	1	DECAL, ENGINE COMPART
26	789776CE	1	DBA LIMIT DECAL

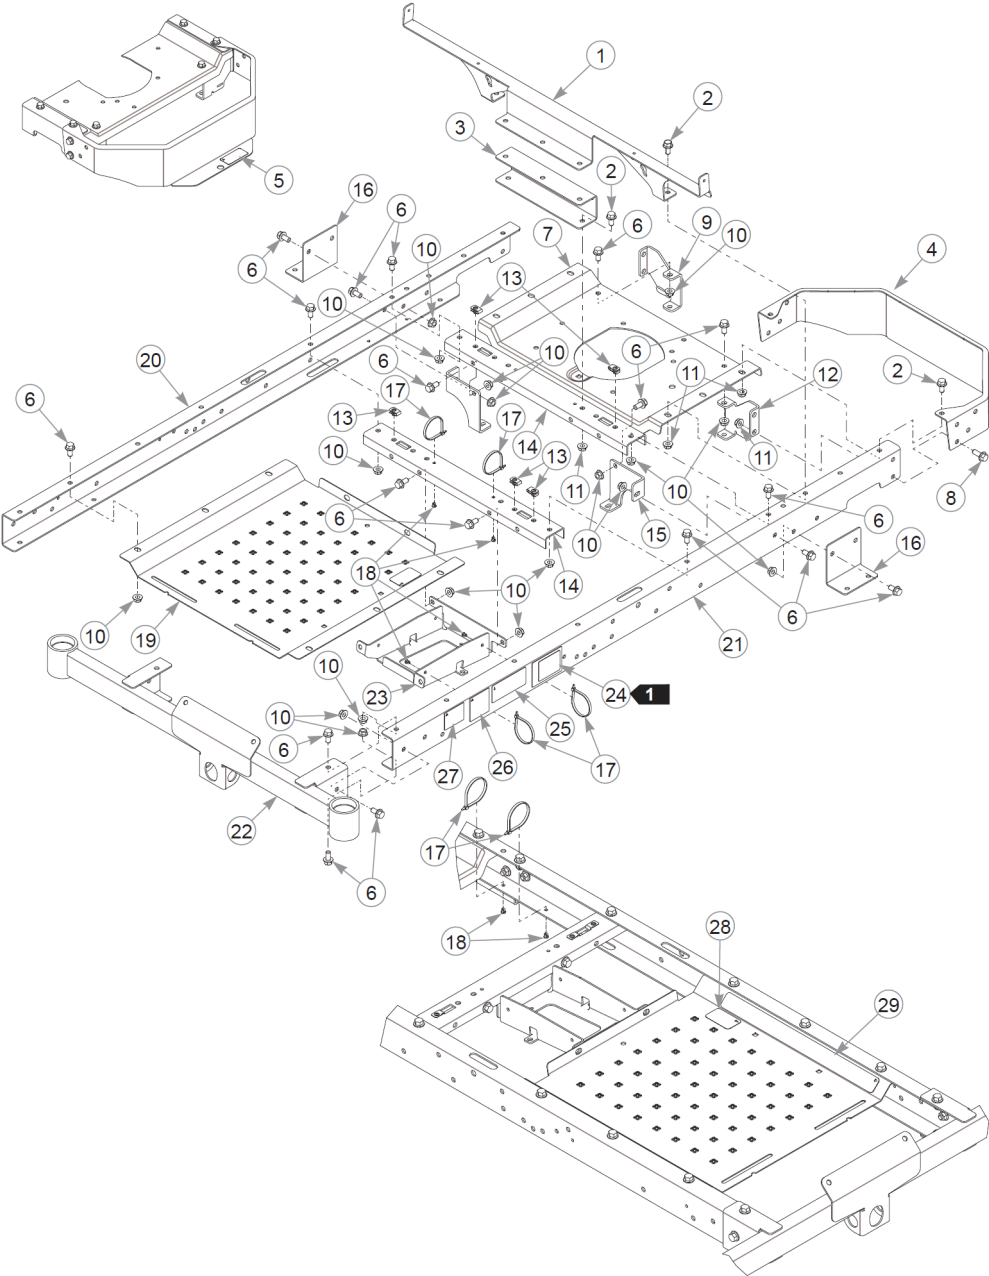


Frame

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
27	776310	1	DECAL, CE MARK
28	605782	1	DECAL, LEVEL FUEL BLOWM
29	601981	1	DECAL, SAFE OPERATE-GRAY
Not Shown	604876	1	WIRE HARNESS

Comments for Page: Frame

1. Serial number decal. In the event the serial number decal becomes damaged or illegible, please contact your dealer to order a replacement.
2. The bumper, engine plate, foot pan and LS frame channel include decals.

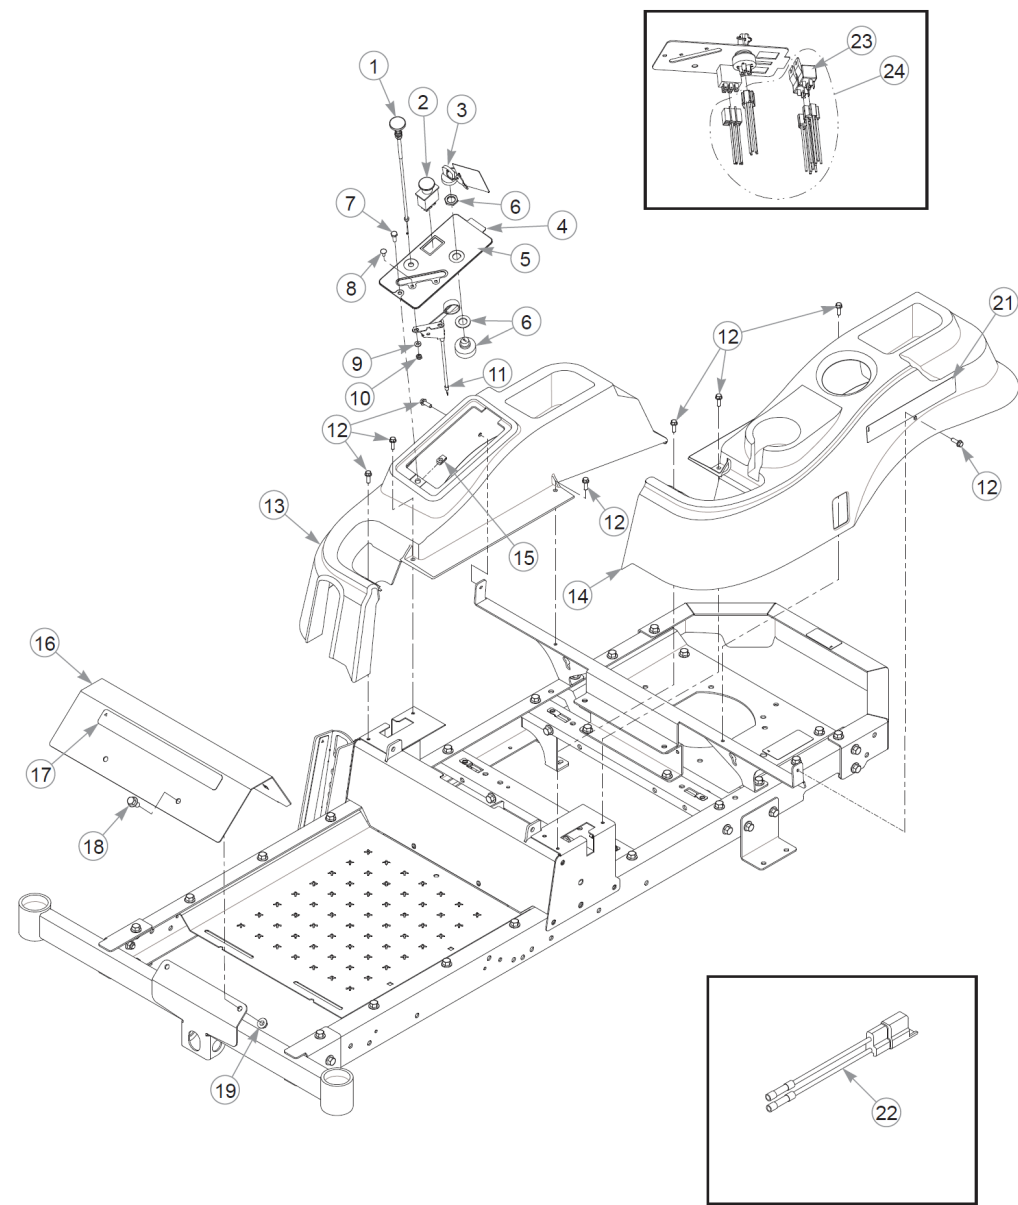

Item	Part No.	Qty	Name
1	601097	1	CABLE, CHOKE
2	776476	1	SWITCH, PTO 6201-321
3	785808	1	KEY ASSEMBLY
4	551898	1	SERVICE, INSTR PANEL
5	604196	1	DECAL, INST PANEL
6	045898	1	IGNITION SWITCH
7	055939	1	CS .250-20X0.75 HX G5 ZY
8	601098	2	CB 10-24 X .500 ZYNC
9	704932	2	FW 0.219X.50X.05 ZY
10	059832	2	NT #10-24 HX NL ZN
11	601096	1	CABLE, THROTTLE
12	604324	8	CS .250-20 X .75 HX FLG
13	552809	1	SVC, FENDER RS
14	552810	1	SVC, FENDER LS
15	601982	1	CN .250-20X .150 MAX THK
16	553505	1	SVC, FOOTREST
17	602407	1	DECAL, HUSTLER ID
18	029629	2	CS .375-16X0.75 HXF G5ZY
19	016899	2	NT .375-16 FLKG5
20	000331	2	WIRE TIE, SMALL/SHORT
21	604388	2	DECAL, RAPTOR FENDER
22	114052	1	KIT, CLUTCH CONN. REP.
23	601053	2	RELAY, SEALED W/BRACKET
24	604876	1	WIRE HARNESS


Comments for Page: Fenders, Instrument Panel & Wire Harness

Fenders, Instrument Panel & Wire Harness

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

1. The instrument panel and fenders include decals.
2. The sealed relay includes a bracket.

This page intentionally left blank

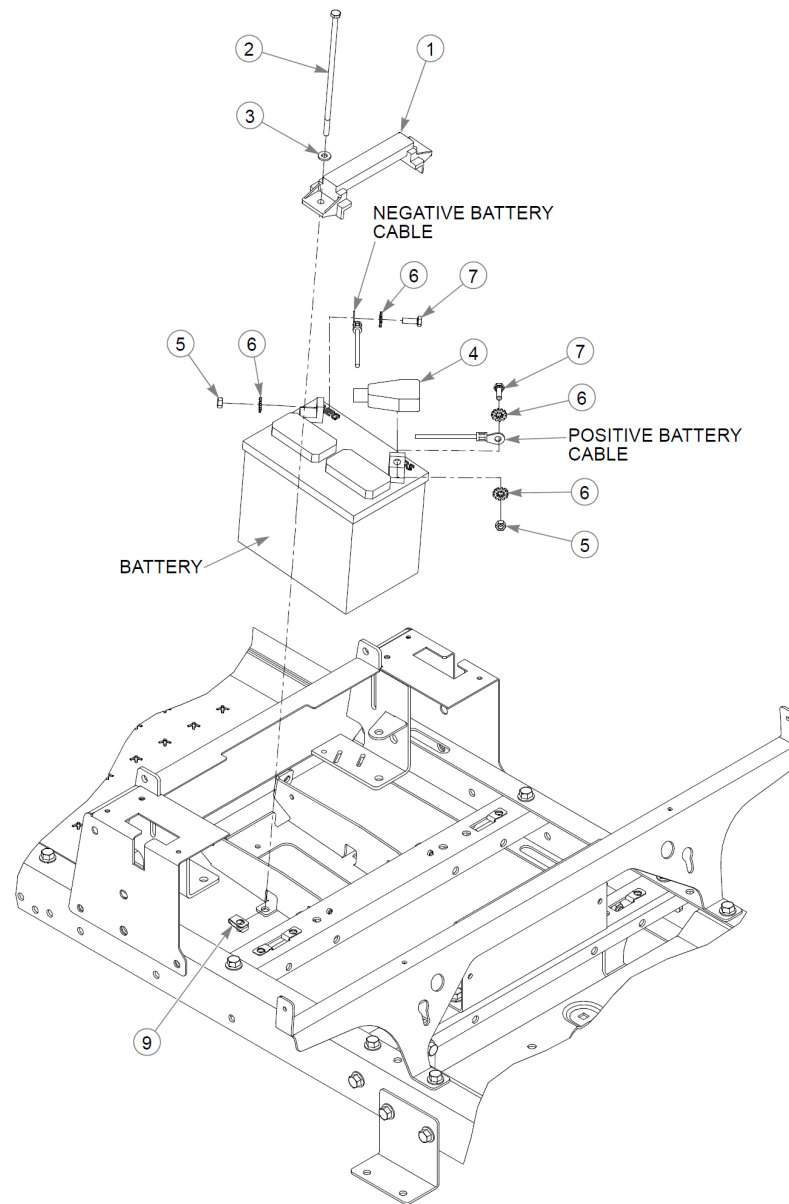


Battery

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
1	604178	1	STRAP, TIE DOWN
2	604465	2	CS .250-20X7.50 HX G5 ZC
3	768515	2	FW 0.281SAE
4	771428	1	BATTERY CBL BOOT-RED(FS)
5	024927	2	NT .250-20HXG5
6	029868	4	LW .250 INTEXT ZY
7	055939	2	CS .250-20X0.75 HX G5 ZY
8	000331	2	WIRE TIE, SMALL/SHORT
9	601982	2	CN .250-20X .150 MAX THK

Comments for Page: Battery


1. When performing service on the mower, disconnect the negative battery cable and do not reconnect it to the battery until ready to start the engine.

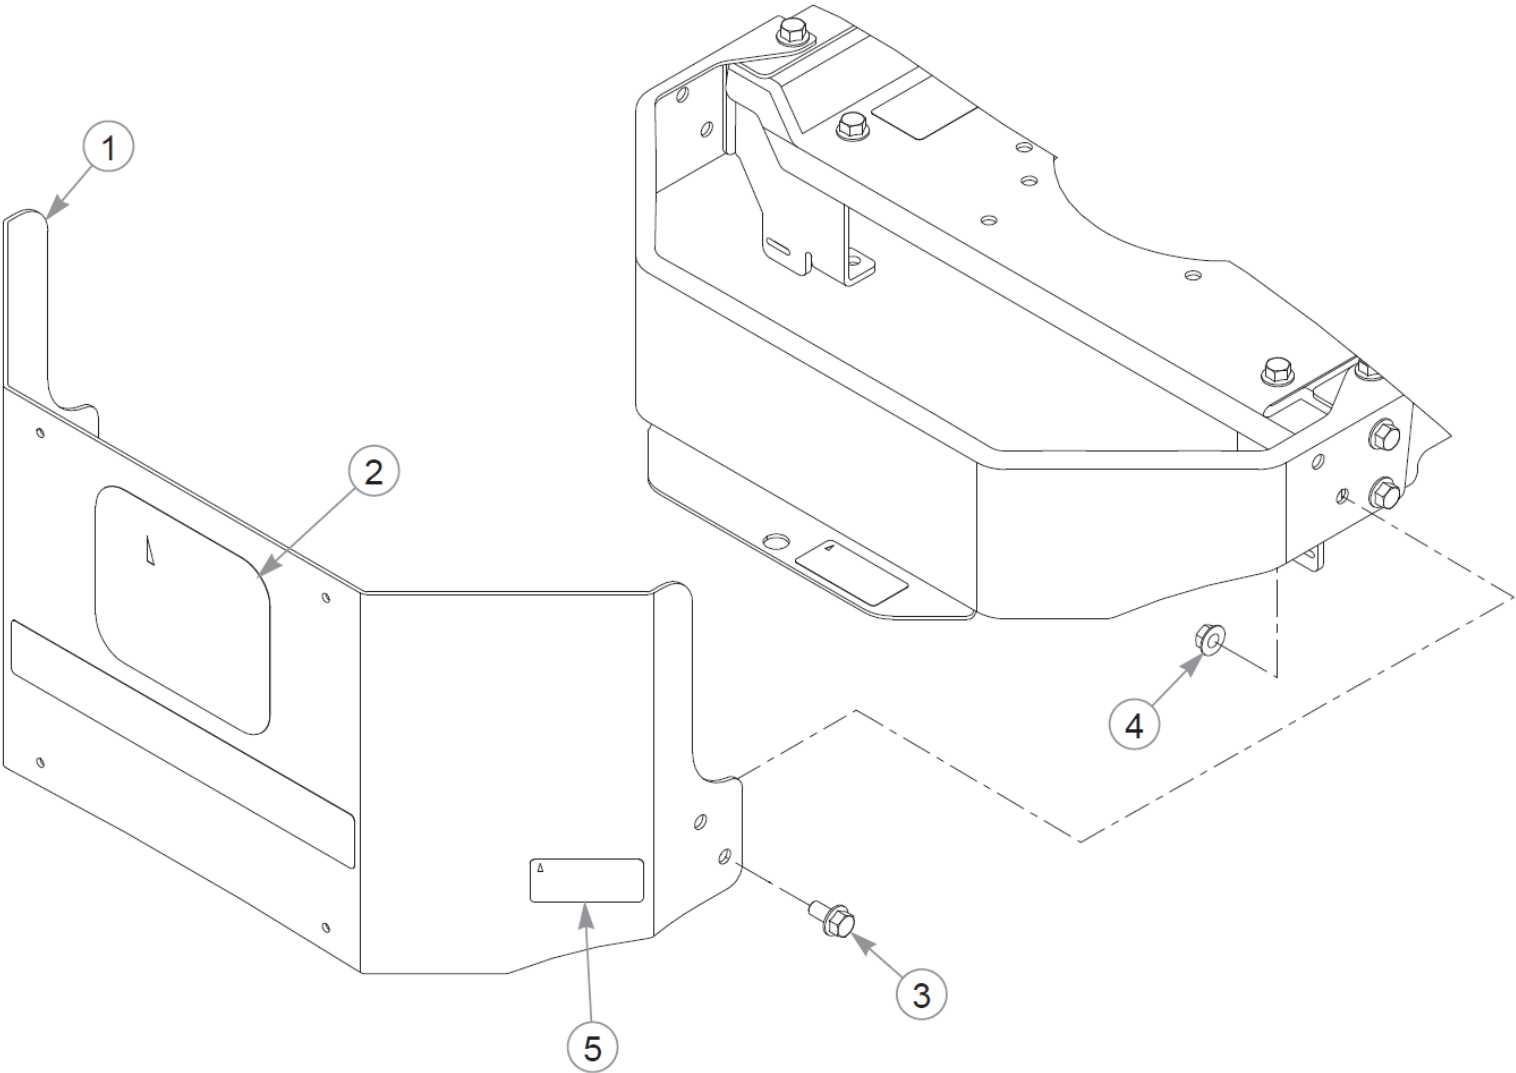


Engine Guard

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
1	122817	1	KIT, ENGINE GUARD
Comments for Part Num. 122817			
IMPORTANT - REFERENCE PRODUCT BULLETIN 571-R BEFORE ORDERING ENGINE GUARDNOTE: ENGINE GUARD KIT INCLUDES DECALS AND BOLTS.			
2	604745	1	DECAL, H LOGO, MFSD 36/4
3	029629	4	CS .375-16X0.75 HXF G5ZY
4	016899	4	NT .375-16 FLKG5
5	602041	1	DECAL, HOT

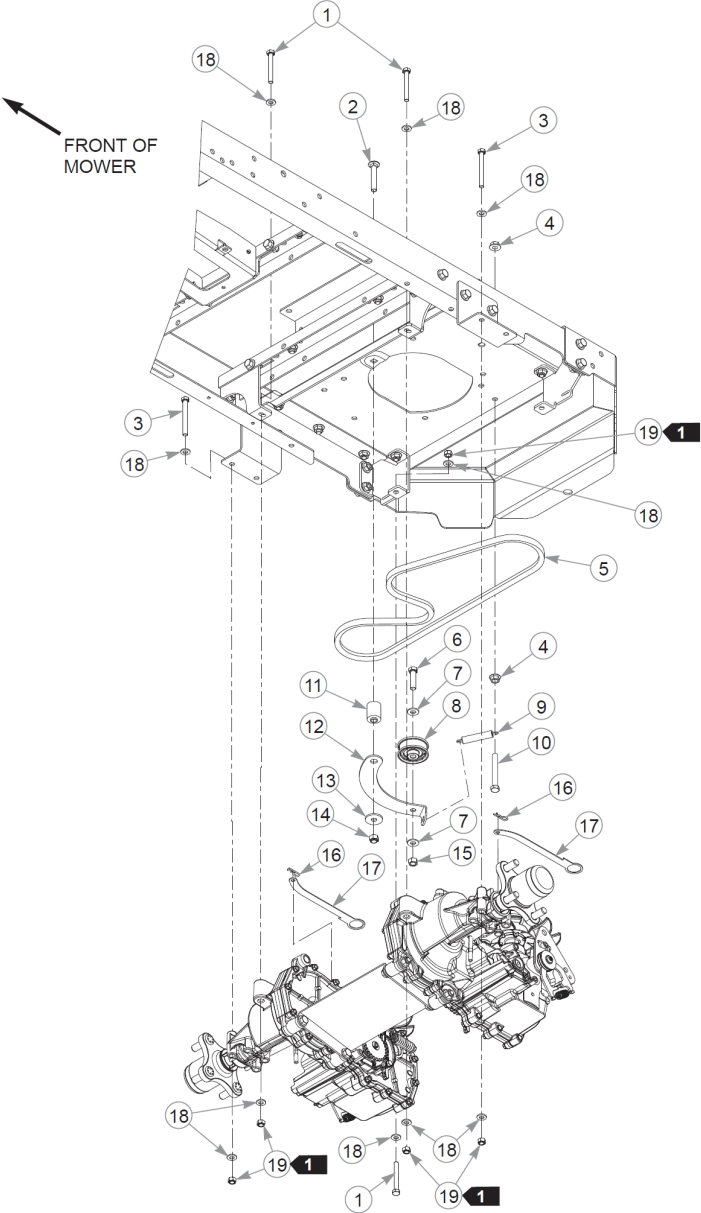



Item	Part No.	Qty	Name
1	710087	4	CS .312-18X2.500HXG5
2	604343	1	CB .375-16 X 2.25 STD ZN
3	043067	4	CS .312-18X3.000HXG5
4	016899	2	NT .375-16 FLKG5
5	603907	1	DRIVE BELT
6	080655	1	CS .375-16X1.500HXG5
7	767954	10	FW 0.379X.82X.06 HD ZY
8	604491	1	PULLEY, 2.0" IDLER
9	604490	1	SPRING, 3.00 X .50 EXT
10	005108	1	CS .375-16X3.500HXG5
11	116289	1	SPACER, PIVOT IDLER
12	116287	1	IDLER ARM
13	712893	1	FW 0.406X1.25X.12 HD ZY
14	086660	1	NT .375-16NLG8
15	054502	5	NT .375-16HXG5
16	706549	2	HP0.080X1.190
17	116218	2	LINK, TOW VALVE
18	768523	16	FW 0.343SAE
19	058776	8	NT .312-18NLG5
20	056036	4	CS .375-16X2.250HXG5
21	123634-3	1	CROSS BRACE, HYDROSTAT
22	604127	1	EZT, 19.2:1 TRANS
23	604128	1	EZT, 19.2:1 TRANS
24	116143	2	ROD, BRAKE ACTUATOR
25	768515	8	FW 0.281SAE
26	601051	2	OVERTRAVEL SPRING

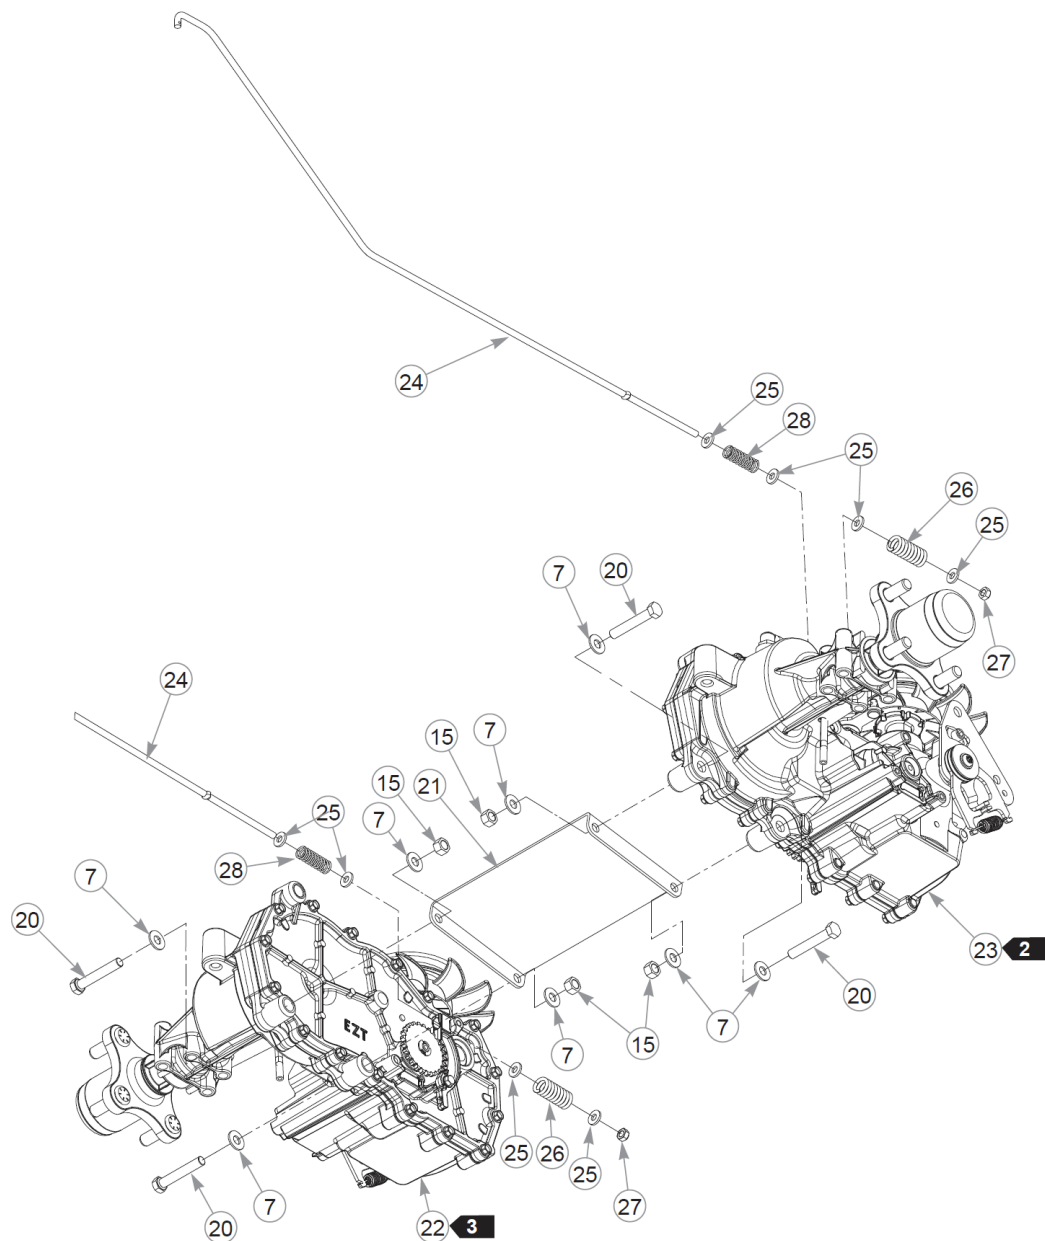


Item	Part No.	Qty	Name
27	068551	2	NT .250-20 HXZY NL
28	601131	2	SPRING, BRAKE ARM RET.

Comments for Page: Transmission Assembly & Drive Belt (Multi-Page)


1. Torque to 23 N•m.
2. 604128 is the LH Transmission
3. 604127 is the RH Transmission

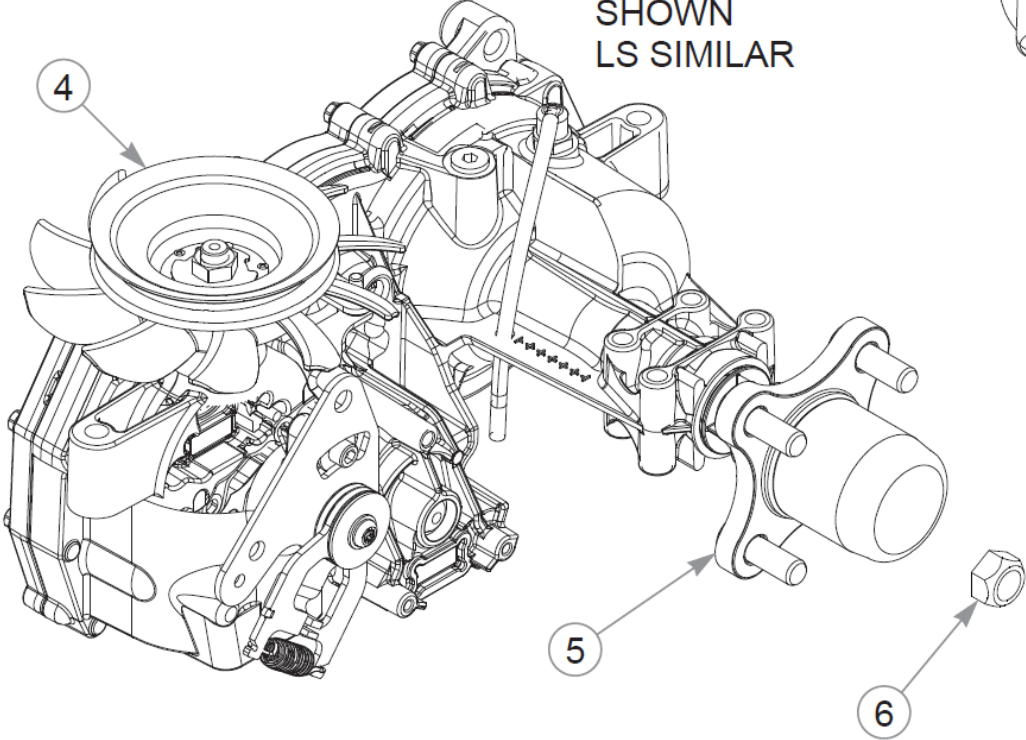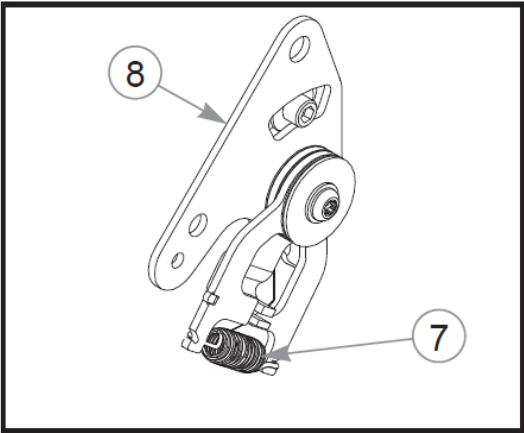

RS TRANSMISSION
SHOWN
LS SIMILAR

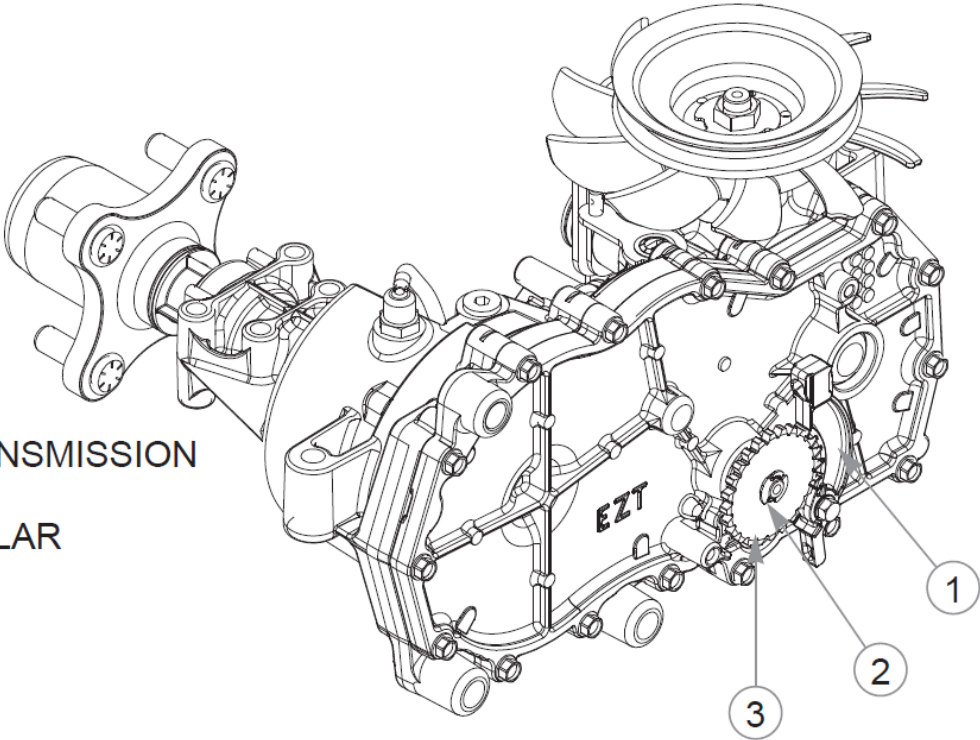


Item	Part No.	Qty	Name
1	795047	1	PARKING PAWL KIT, EZT
2	798371	1	RING, RETAINING
3	798363	1	GEAR, PARK BRAKE
4	602094	1	FAN / PULLEY KIT
5	601433	1	KIT, HUB 4 BOLT
Comments for Part Num. 601433			
CUSTOMER SERVICE NOTE: Lug Studs are not sold separately.			
6	788877	1	NUT, H-G ZT HUB
7	604903	1	HG RTN SPRING
8	604901	1	HG RTN CW
Not Shown	604902	1	HG RTN CCW

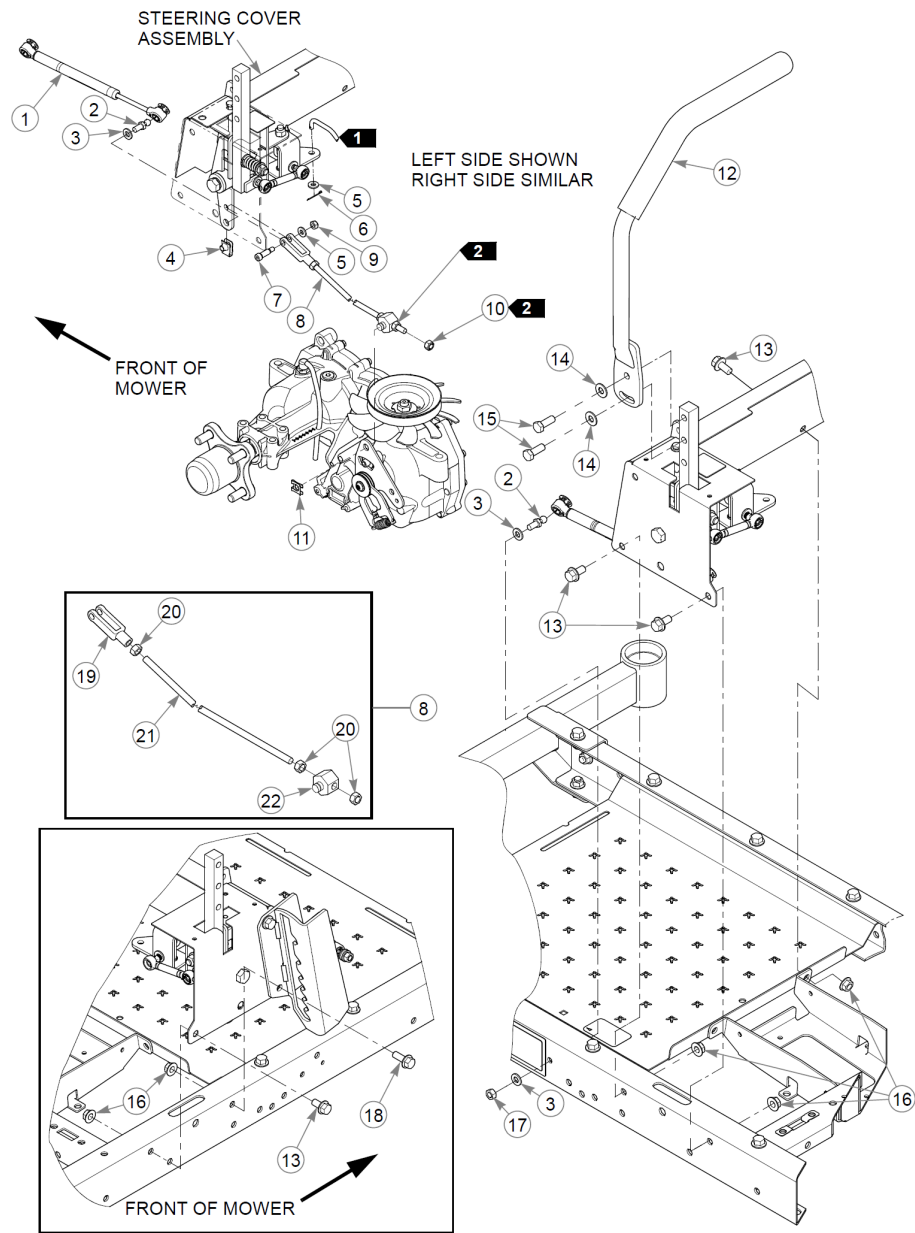

Steering & Brake

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	603983	2	DAMPER
2	781922	4	BALL STUD
3	768523	6	FW 0.343SAE
4	601069	2	CN .312-18x.200 MAX THK
5	768515	4	FW 0.281SAE
6	048553	2	CP .062DX1.000 LG HML Z
7	772483	2	SB0.312X0.750SH0.250-20
8	605273	2	STEERING ROD S/A
9	068551	2	NT .250-20 HXZY NL
10	023655	2	NT 0.312-24 NL G8
11	606575	2	CLIP, SAFETY
12	110370	2	STEERING BAR W/ GRIP
Not Shown	781260	1	GRIP, STEERING BAR
13	029629	5	CS .375-16X0.75 HXF G5ZY
14	767954	4	FW 0.379X.82X.06 HD ZY
15	036244	4	CS .375-16X1.00 HX G5 ZY
16	016899	6	NT .375-16 FLKG5
17	034272	2	NT .312-18HXG5
18	029751	1	CS .375-16X1.00 HXF G5ZY
19	604173	2	YOKE, 5/16-24
20	041152	6	NT 0.312-24 HX G8
21	605273	2	STEERING ROD S/A
22	116144	2	BLOCK, STEERING CONTROL

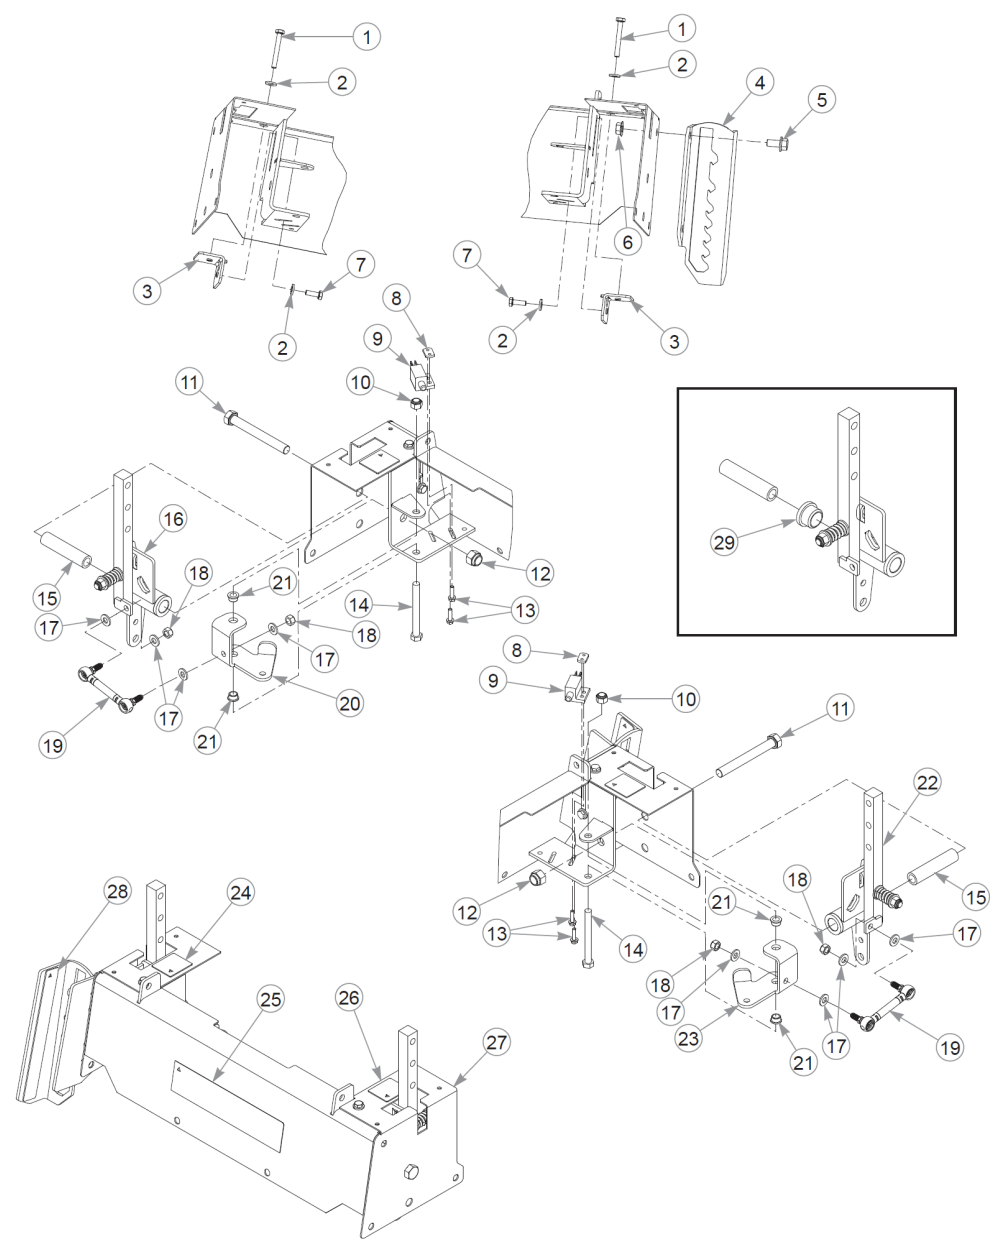

Steering Cover Assembly

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	604452	2	CS .250-20X2.00 HX FH ZY
2	768515	4	FW 0.281SAE
3	605529	2	STOP, STEERING
4	551912	1	SERVICE, LATCH
5	029629	1	CS .375-16X0.75 HXF G5ZY
6	016899	1	NT .375-16 FLKG5
7	055939	2	CS .250-20X0.75 HX G5 ZY
8	601822	2	NUT PLATE, .420 CENTERS
9	781211	2	SWITCH, PUSH BUTTON
10	086660	2	NT .375-16NLG8
11	781708	2	CS .500-13X4.25 HX G5 ZY
12	781567	2	NT .500-13NLG5
13	063198	4	CS #10-24X0.750FLKG5
14	005108	2	CS .375-16X3.500HXG5
15	604288	2	SPACER, STEERING
16	606106	1	STEERING BOX SUB, LH
17	768523	8	FW 0.343SAE
18	058776	4	NT .312-18NLG5
19	604179	2	BRAKE LINK
20	116142	1	BRAKE BLCRNK, LH
21	765339	4	BUSHING,IGUS#0608 (FS)
22	606105	1	STEERING BOX SUB, RH
23	116141	1	BRAKE BLCRNK, RH
24	785220	1	DECAL, STEERING R.S.
25	604195	1	DECAL ID, RAPTOR
26	785139	1	DECAL, STEERING L.S.

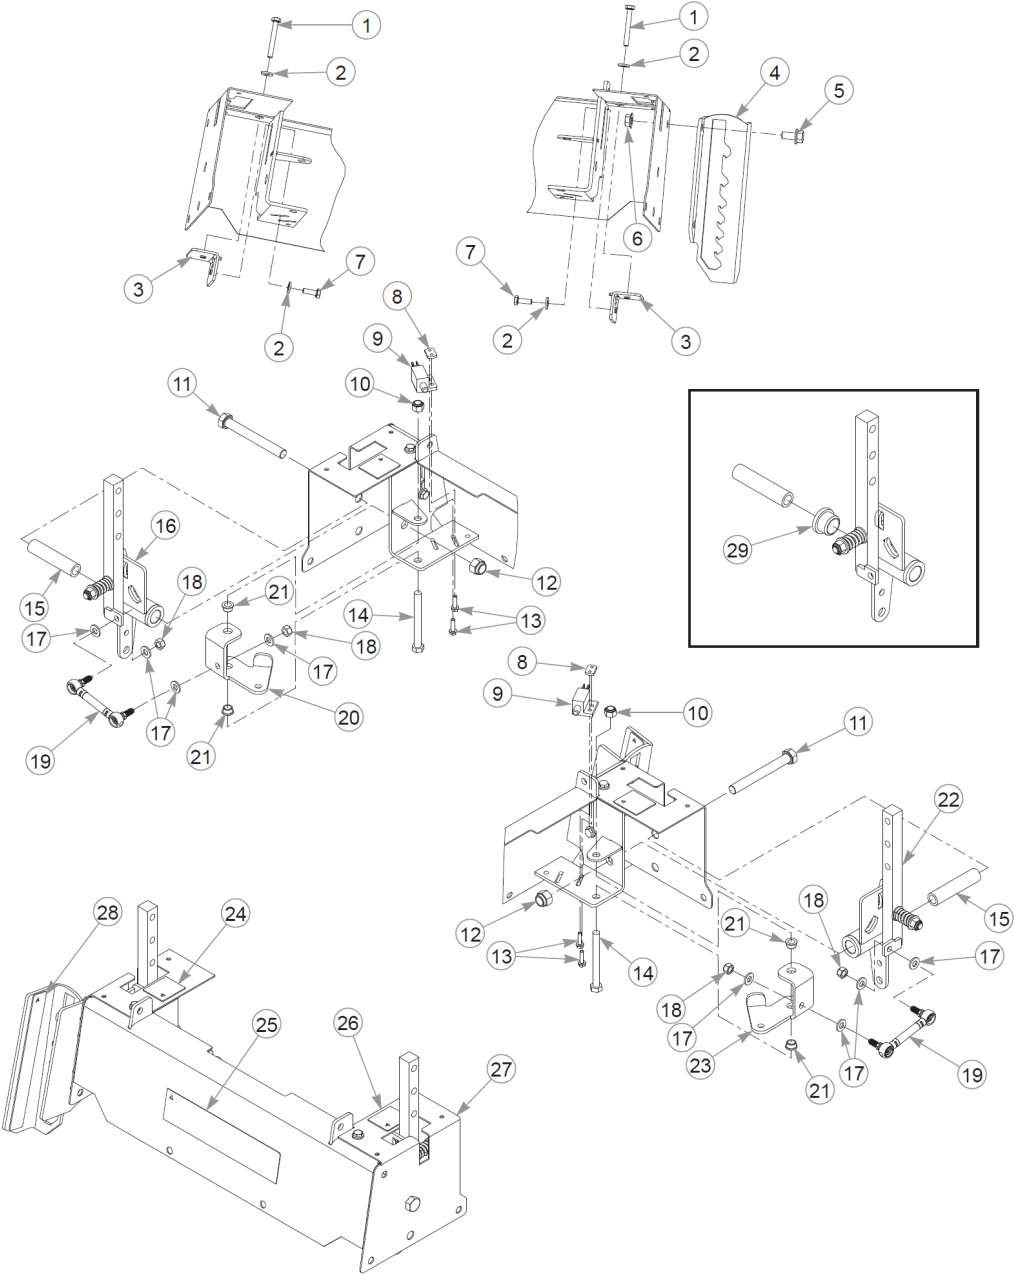

Item	Part No.	Qty	Name
27	551698	1	STEERING COVER, SERVICE
28	604275	1	DECAL, DECK HEIGHT
29	781153	2	BUSHING, UHMW

Comments for Page: Steering Cover Assembly

1. The latch and steering cover include decals.

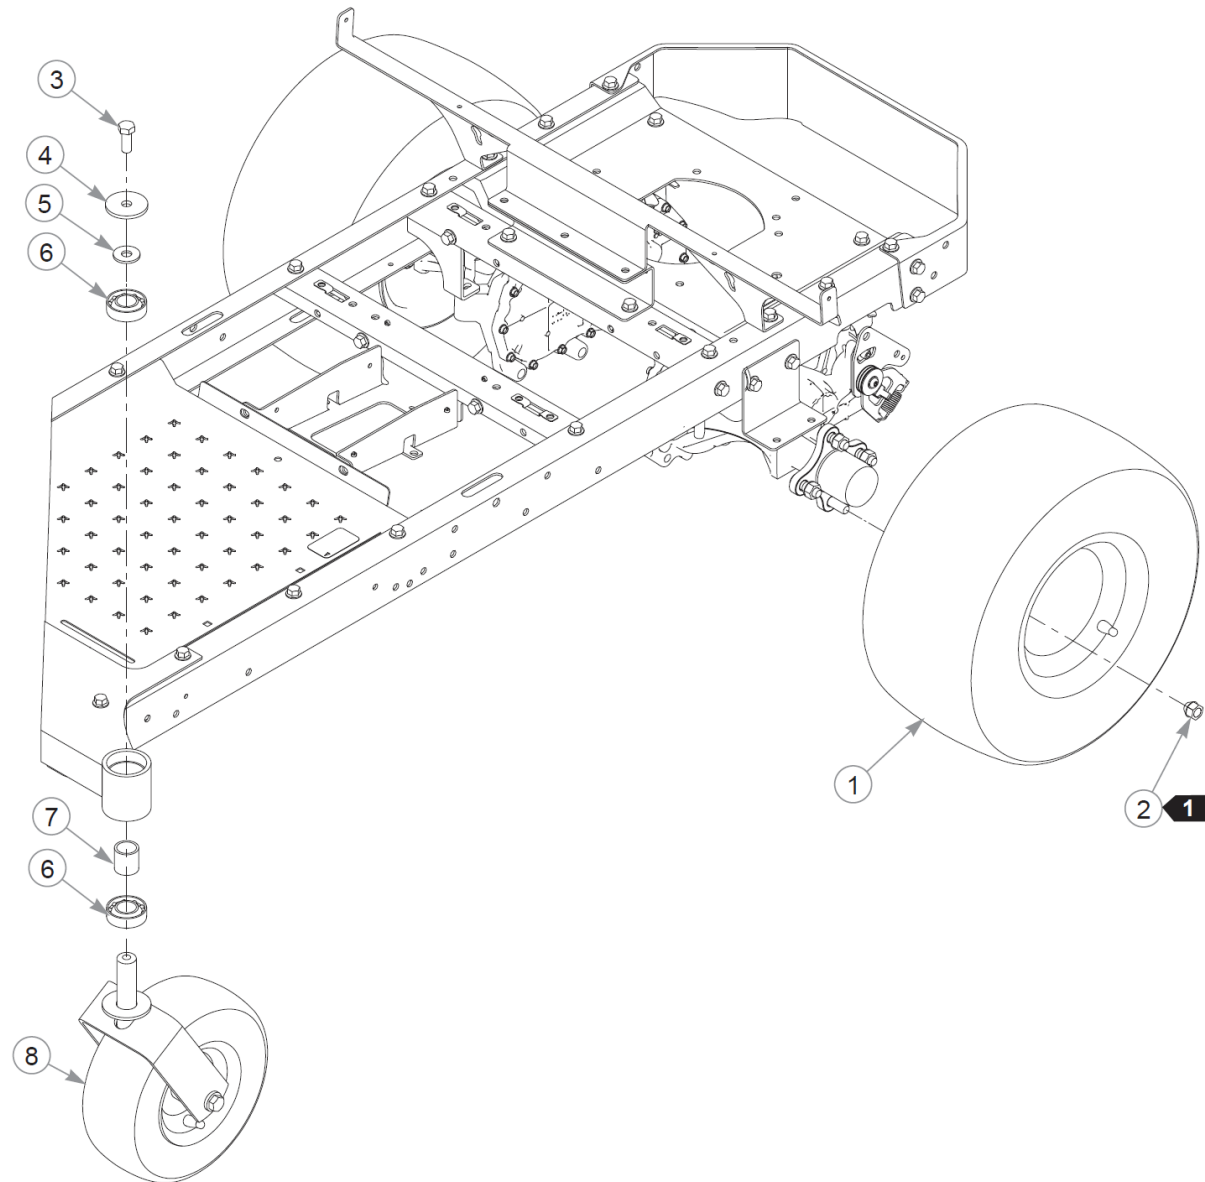


Wheel & Tire

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
1	604013	2	TIR/WHL 18X8.50-8 SLV
2	061077	8	WHEEL NUT
3	705954	2	CS .500-13X1.25 HX G5 ZY
4	344267	2	FW .510X2.15X.19 ZY
5	712976	2	FW 0.531X1.38X.12 ZY
6	784223	4	BEARING
7	784603	2	SPACER
8	N/A	1	FRONT WHEEL ASSEMBLY

Comments for Page: Wheel & Tire


1. Torque to 88–102 N•m.

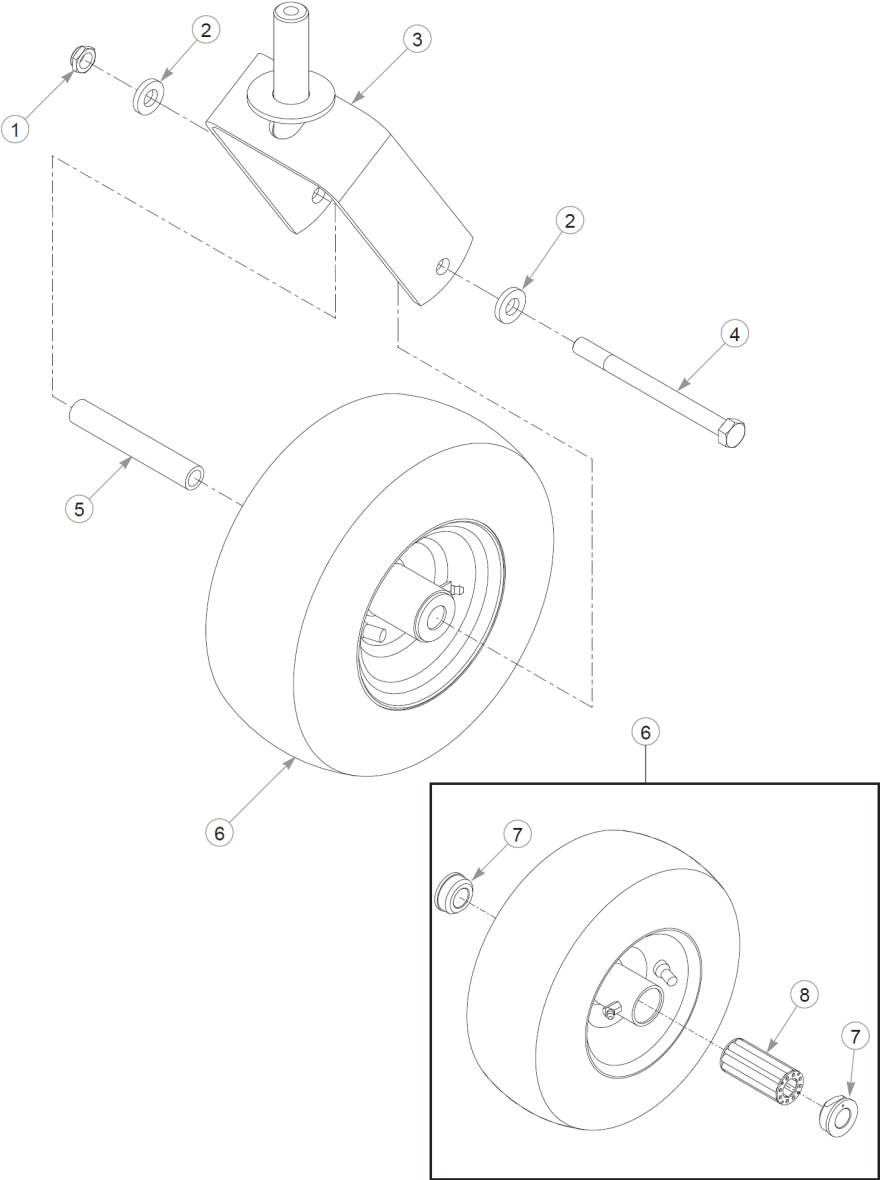

Front Wheel Assembly Breakdown

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	707398	1	NT .500-13 JAM NY LK
2	767962	2	FW .531 x 1.063 x .175
3	110116	1	CASTER FORK W/A
4	604718	1	CS .500-13X6.00 HX G5 ZY
5	306969	1	GAGE WHEEL SPACER
6	605113	1	TIR/WHL 11X4.00-5 SLV
Not Shown	768044	1	T/W 11X4.00-5 RIBBED
7	772806	2	BEARING CAP
8	772814	1	BEARING, 3/4" ROLLER

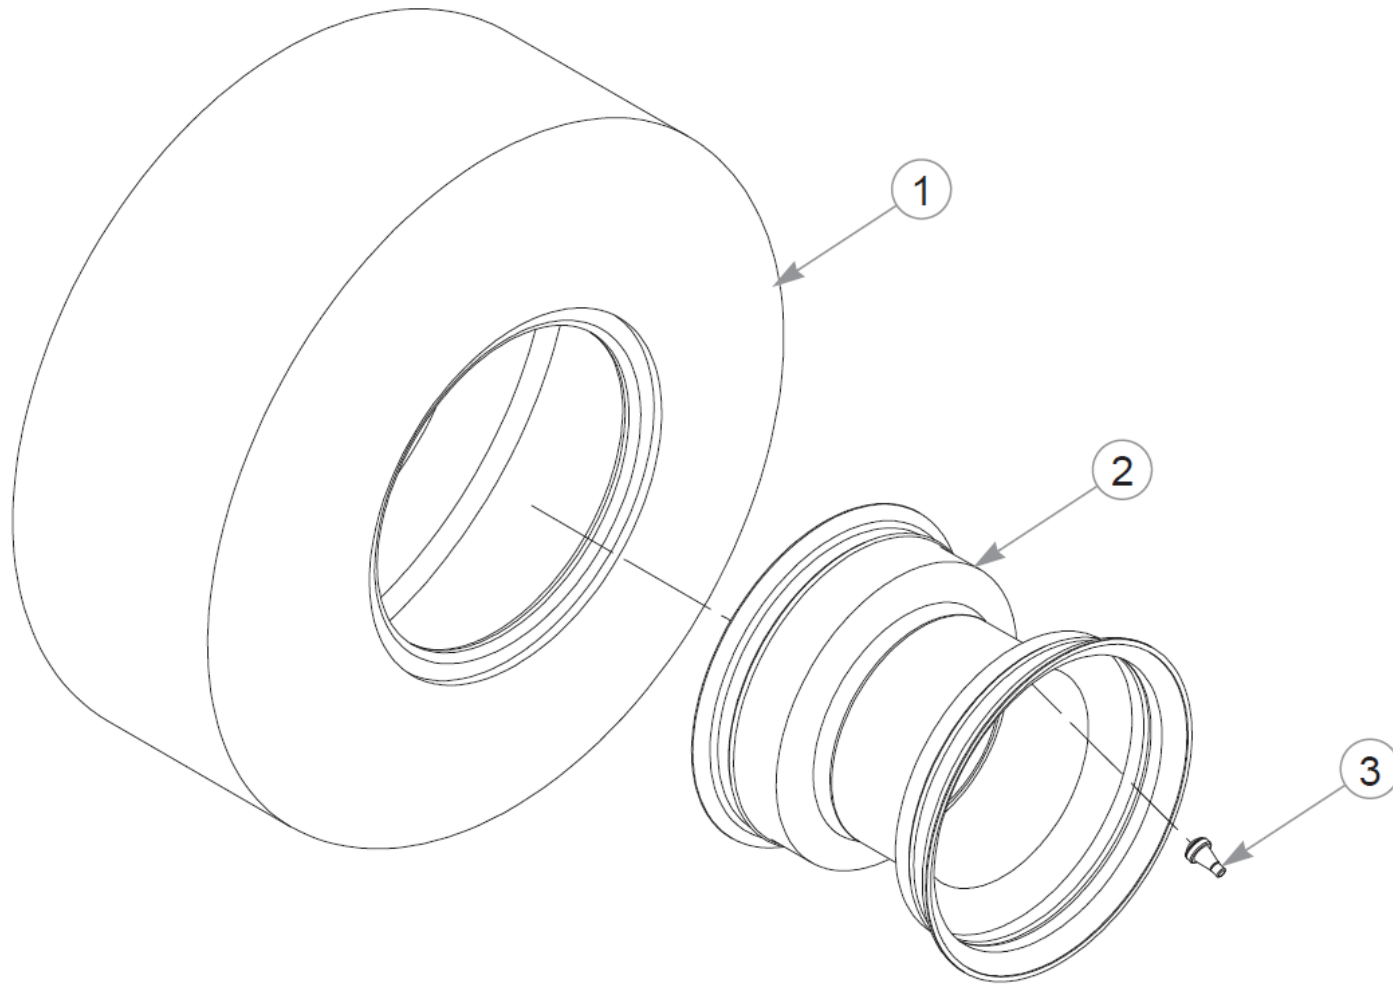


Drive Wheel Breakdown

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
1	604267	1	TIR 18X8.50-8 B2R GRMR
2	601820	1	WHL 8X6.93 4X4.0 SLV
3	019521	1	TIRE VALVE TR-412 GOODY

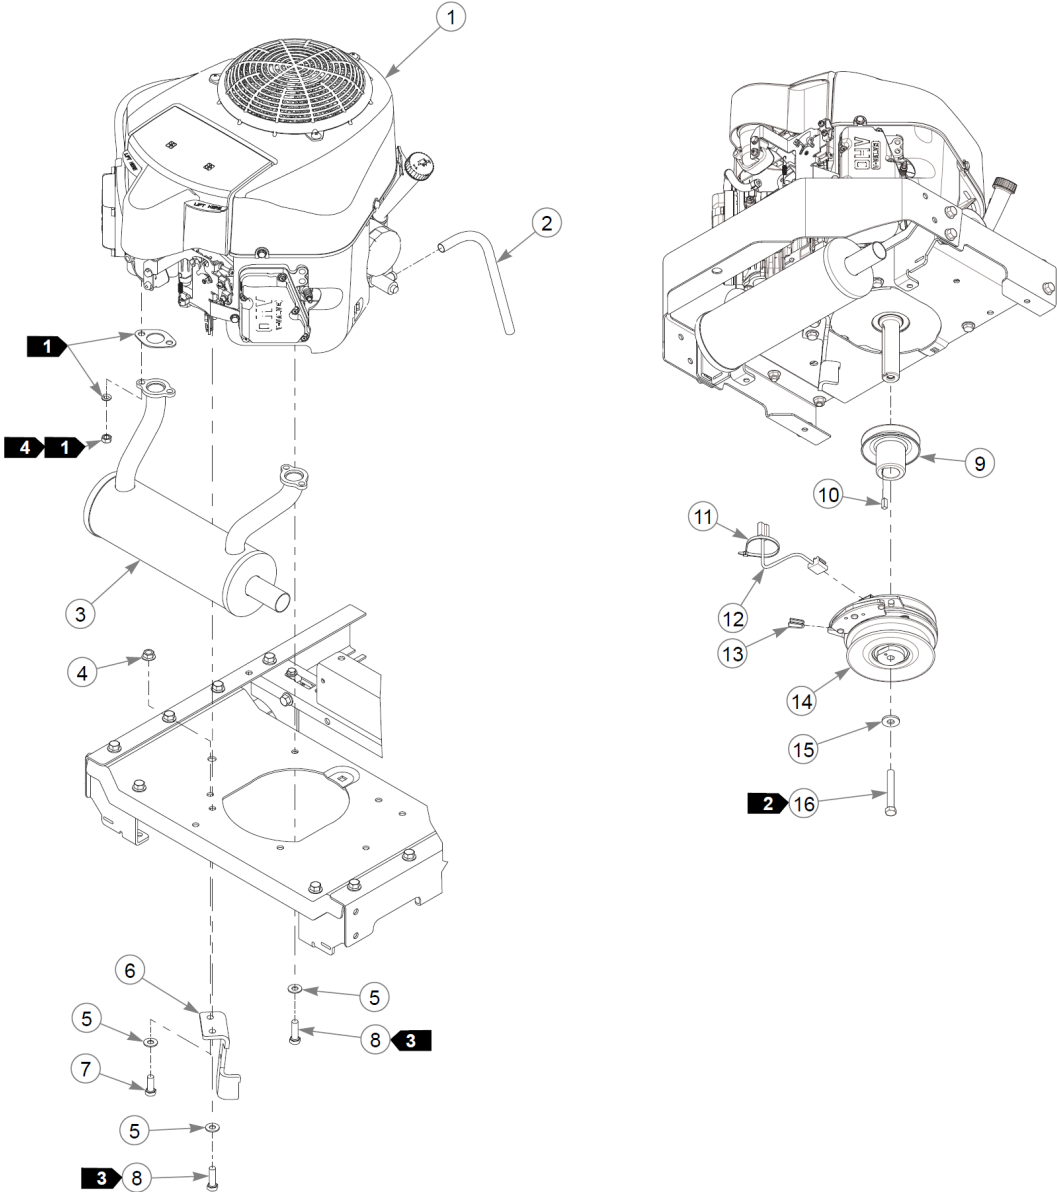

Item	Part No.	Qty	Name
1		1	ENGINE, KAW FR691V
2	604463	30cm	HOSE, OIL DRAIN
3	604016	1	MUFFLER, FR730V
4	016899	1	NT .375-16 FLKG5
5	767954	5	FW 0.379X.82X.06 HD ZY
6	121625	1	CLUTCH ANCHOR
7	036244	1	CS .375-16X1.00 HX G5 ZY
8	602580	4	CS .375-16X1.25HXG8ZYP85
9	605574	1	PULLEY, ENG 4.094OP
10	712372	1	KEY 1/4 SQ X 0.66 LG(FS)
11	000331	3	WIRE TIE, SMALL/SHORT
12	791251	1	HARNESS, CLUTCH PIGTAIL
Comments for Part Num. 791251			
Pigtail was updated with epoxy to hold the wires steady. The wire sheath was also updated to a more flexible material.			
13	605595	1	BUSHING, CLUTCH
14	605827K	1	CLUTCH KIT
15	602680	1	FW .453X1.12X.12 HRD ZY
16	785048	1	CS .437-20X3.00 HXG5 P85
17	055939	2	CS .250-20X0.75 HX G5 ZY
18	768515	4	FW 0.281SAE
19	044255	1	NT #10-32HXG5
20	030817	1	STARTER SOLENOID HW KIT
21	024927	2	NT .250-20HXG5
22	029876	1	LW .312 INTEXT ZY
23	720516	1	CS M8-1.25X16HX FL10.9

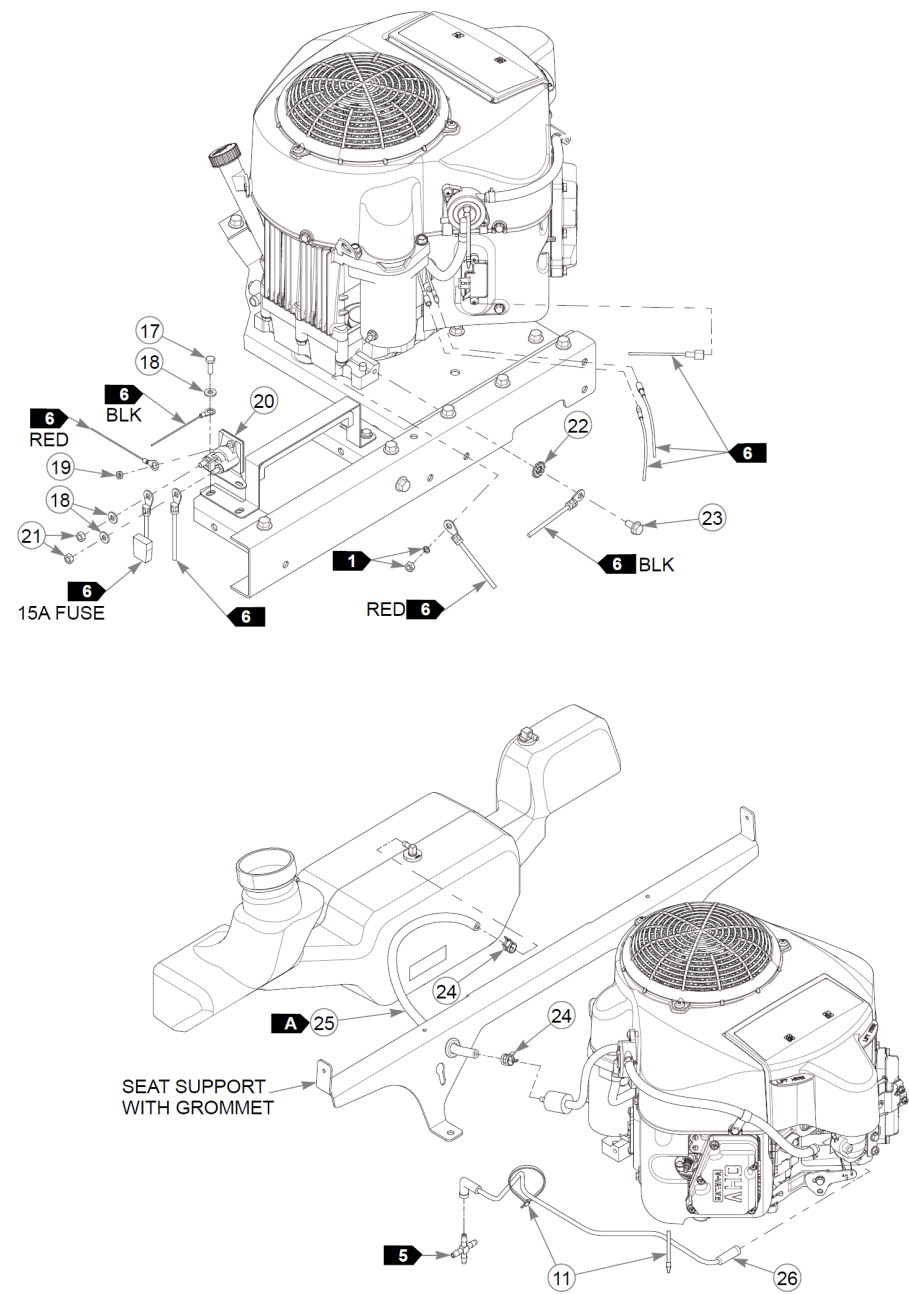


Item	Part No.	Qty	Name
24	000323	2	CLIP, HOSE CLAMP
25	015818	46 cm	FUEL LINE, 1/4"
Comments for Part Num. 015818			
Sold by the foot.			
26	604274	1	VAPOR LINE, 3/16 FORMED

Comments for Page: Engine, Muffler & Clutch (Multi-Page)

FUEL LINE LENGTH

A: 46 cm TANK TO FUEL FILTER (FUEL)


1. Supplied with the engine.
2. Torque to 61–65 N•m. Replace (do not reuse) the cap screw if removed or loosened.
3. Torque to 41–47 N•m. Replace (do not reuse) the cap screw if it is removed or loosened.
4. Torque to 30 N•m.
5. Part of the fuel system.
6. Part of the wire harness.

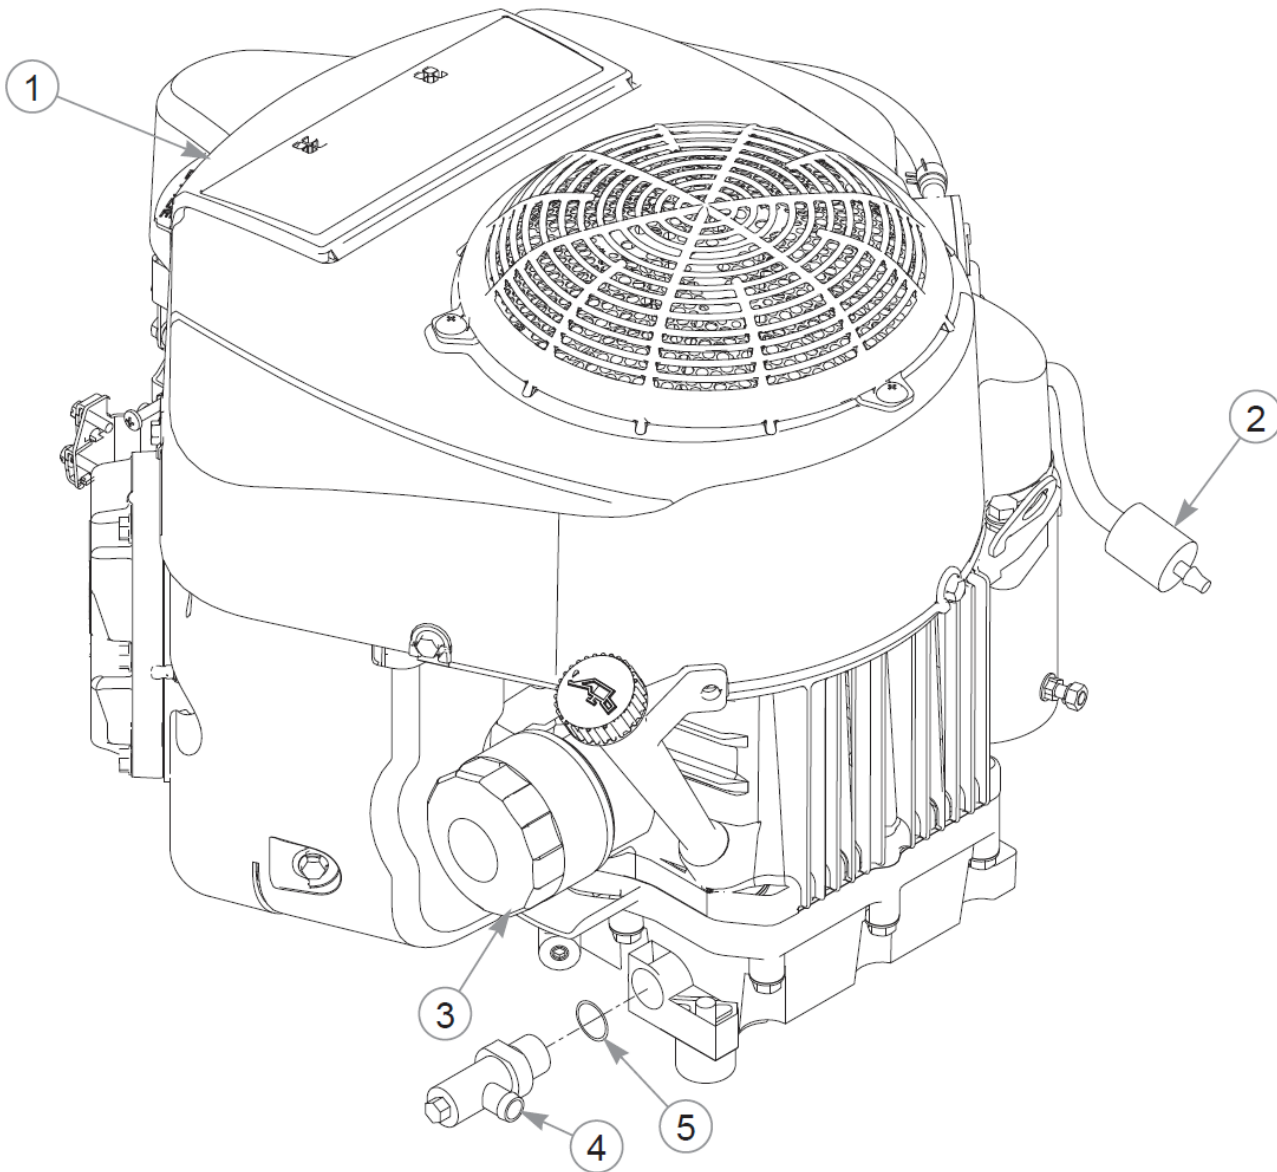

Engine Service Parts

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	603059	1	AIR FILTER, KAW (MAIN AIR FILTER)
2	068478	1	FUEL FILTER - IN LINE
3	602581	1	ENGINE OIL FILTER
4	604350	1	VALVE, OIL DRAIN
5	604369	1	O-RING

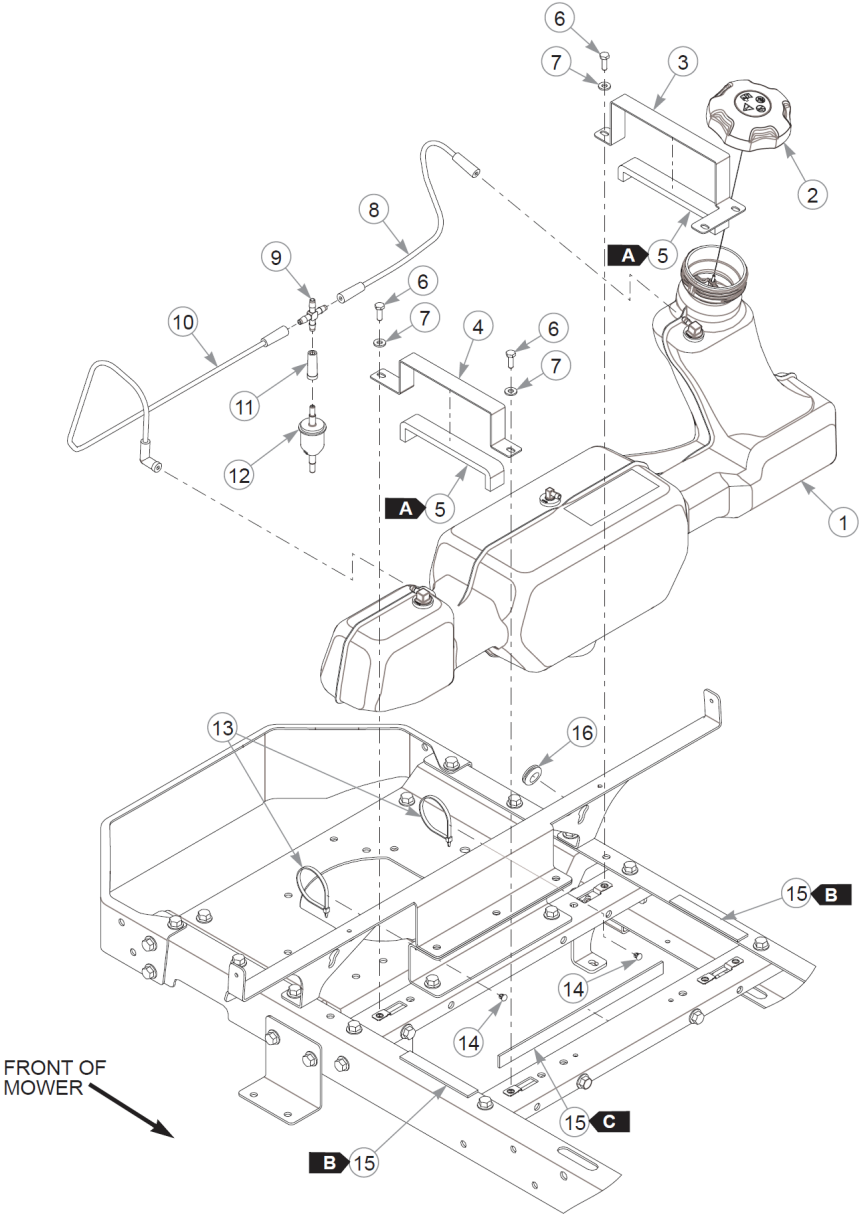

Fuel System

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	606432	1	FUEL TANK
2	603807	1	CAP, 3.5" RATCHETING GAS
3	117059	1	TANK MNT LEFT
4	117060	1	TANK MNT RIGHT
5	713198	47 cm	SEAL 3/8x3/4 SOLD BY FT
6	055939	3	CS .250-20X0.75 HX G5 ZY
7	768515	3	FW 0.281SAE
8	604279	1	VAPOR LINE, 3/16 FORMED
9	604322	1	1/4" HOSE BARB CROSS
10	604273	1	VAPOR LINE, 3/16 FORMED
11	604292	1	BOOT, 3/16" TO 1/4" BARB
12	604323	1	FILTER, VAPOR SYSTEM
13	000331	2	WIRE TIE, SMALL/SHORT
14	604307	2	MOUNT, PUSH BUTTON
15	033035	56 cm	WEATHERSTRIP .12X.75
16	601400	1	GM .63 x1.13 x.88 x .13

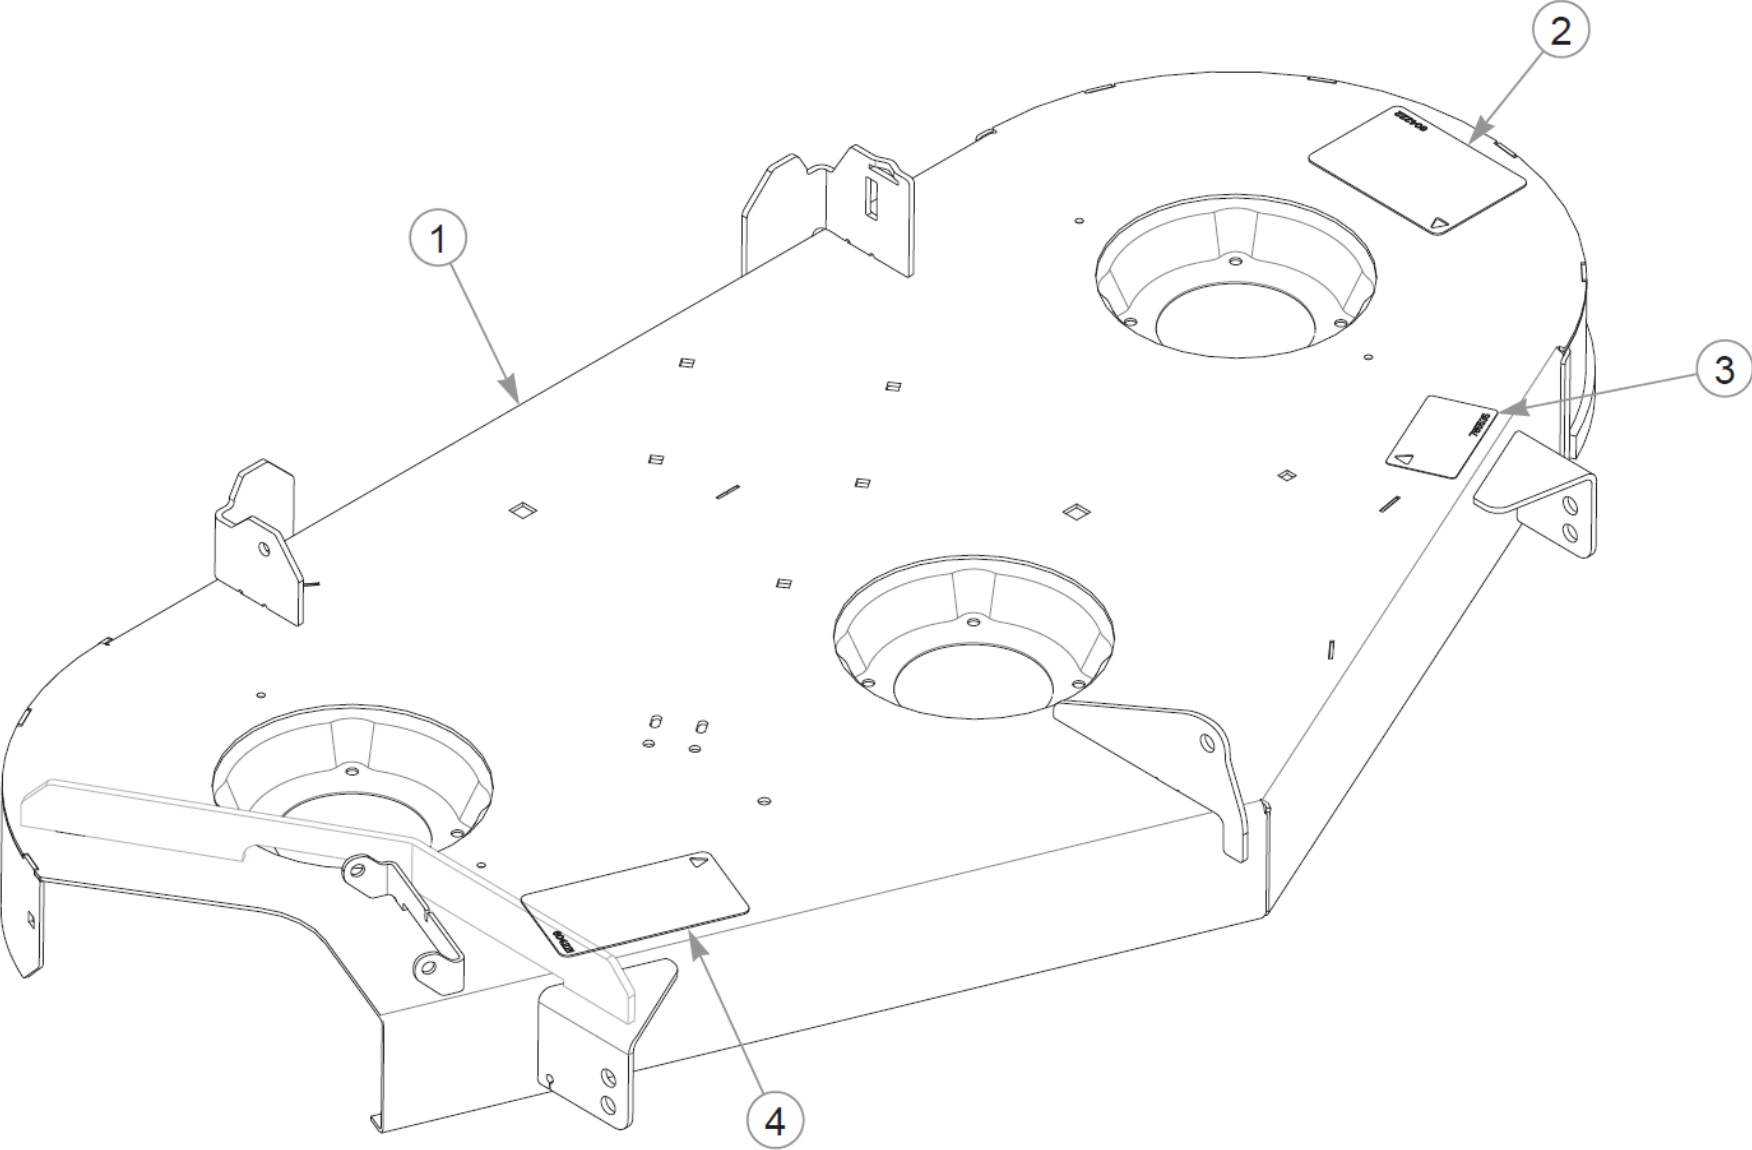

Item	Part No.	Qty	Name
1	554446	1	SVC, DECK DECAL ASSY
2	604222	1	DECAL, DANGER / OBJECTS
3	785535	1	DECAL, 52 DECK ID
4	604221	1	DECAL, DANGER / CHUTE

Comments for Page: Service Deck


1. The deck includes the decals.

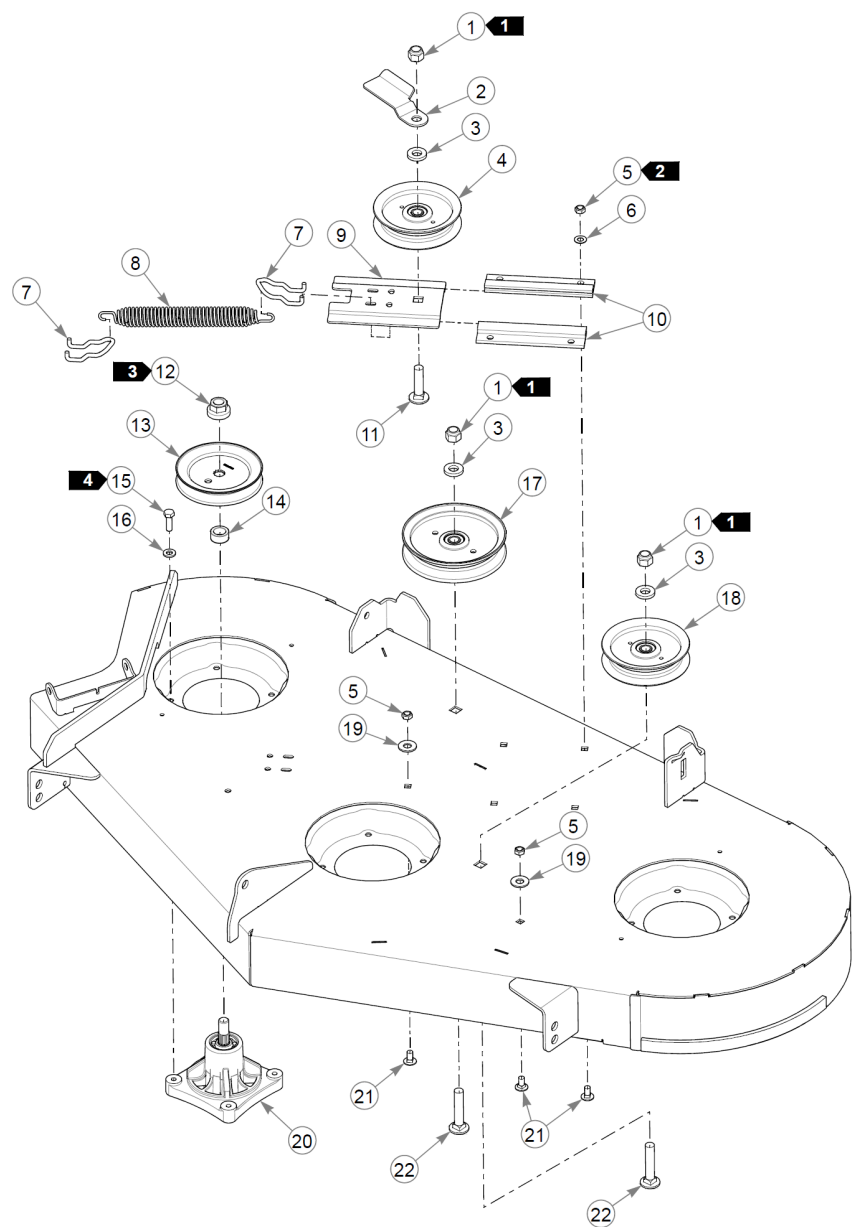


Deck Pulleys & Spindles

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	781567	3	NT .500-13NLG5
2	121780	1	BELT GUIDE
3	767962	3	FW .531 x 1.063 x .175
4	603986	1	IDLER PULLEY, 4.00" FLAT
5	604251	6	NT .312-18 HXNL JAM G2ZN
6	604252	4	FW .340X.68X.04 ZY
7	604110	2	ANCHOR, SPRING TENSIONER
8	122388	1	SPRING
9	604194	1	SLED, IDLER
10	604079	2	IDLER SLIDE, EXTRUDED
11	604253	1	CB .50-13 X 2.00 STD ZN
12	606943	3	NT .562-18 HX NLG5
13	603988	3	PULLEY, DRIVE "B-SEC"
14	604123	3	SPACER, PULLEY
15	036236	12	CS .312-18X1.250HXG5
16	768523	12	FW 0.343SAE
17	604231	1	PULLEY, IDLER 5.00" O.D.
18	604219	1	IDLER PULLEY, 4.00" FLAT
19	017129	2	FW .440X1.00X0.08 ZY
20	604214	3	SPINDLE ASSY, RAP/ALP
21	083147	6	CB .312-18X .620 G5 ZN
22	604254	2	CB .50-13 X 2.50 STD ZN

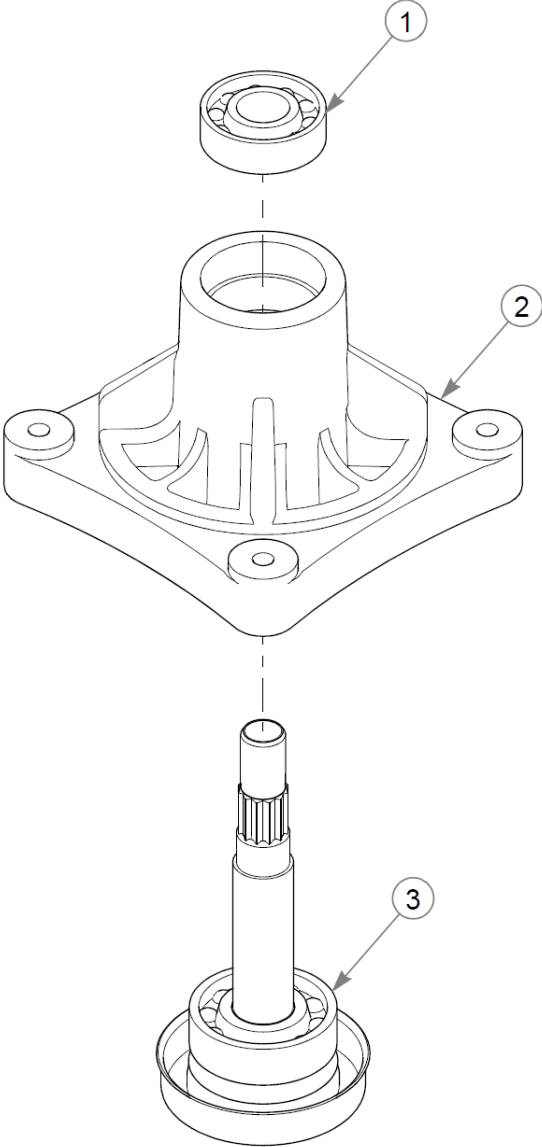

Item	Part No.	Qty	Name
1	604019	1	BEARING, SPINDLE
2	604218	1	CAST HOUSING
3	607274	1	SVC SHAFT

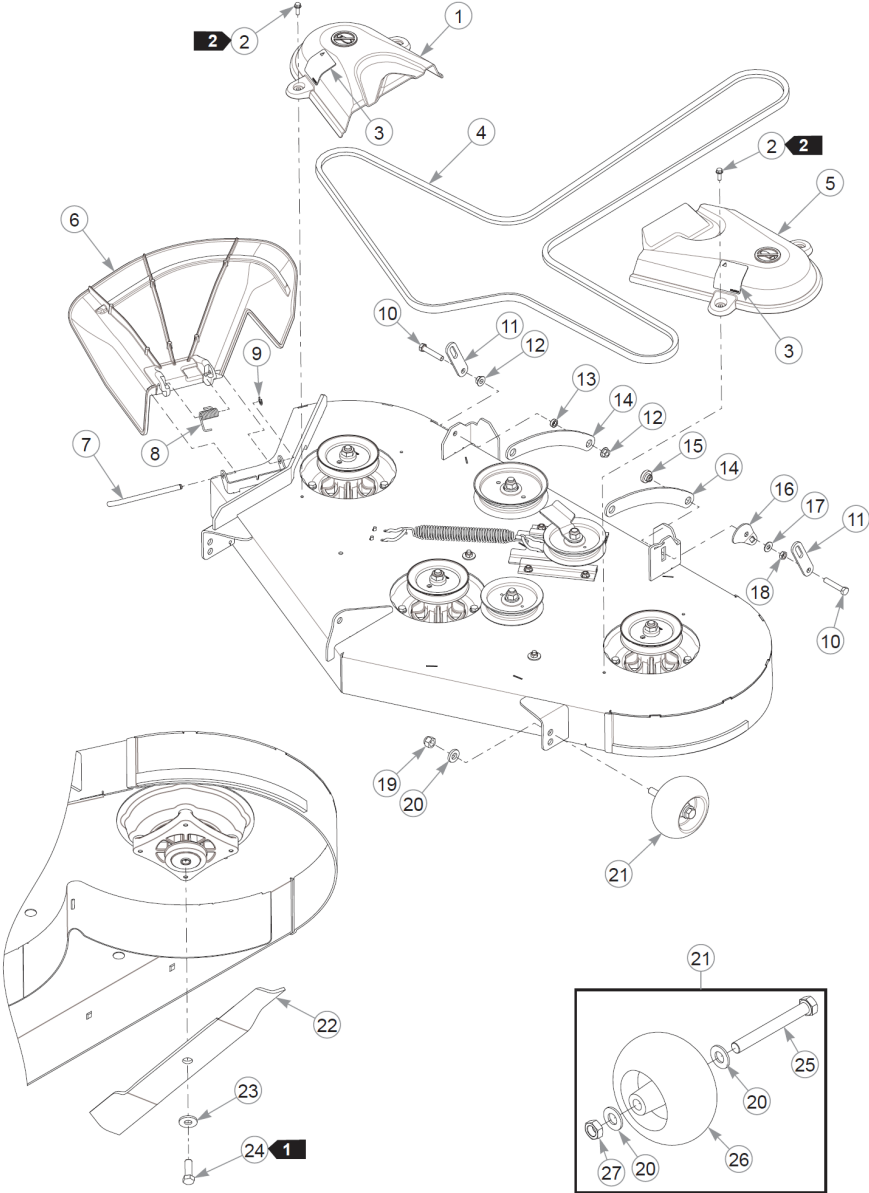


Item	Part No.	Qty	Name
1	604337	1	PULLEY COVER RH
2	604324	4	CS .250-20 X .75 HX FLG
3	602562	2	DECAL, NO SERVICE
4	791988	1	BELT,B 140.77" EL (DECK BELT)
5	604338	1	PULLEY COVER LH
6	606931	1	RAPTOR DISCHARGE CHUTE
7	606981	1	PIN, CHUTE
8	604331	1	CHUTE SPRING
9	603332	1	CLIP E .66 X .303 X .035
10	606593	2	CS .375-16x2.00 HXG5 P85
11	116157	2	LINK, DECK LIFT
12	016899	2	NT .375-16 FLKG5
13	601839	1	PIVOT SPACER BUSHING
14	116155	2	DECK LINK
15	605016	1	NUT, DECK LEVELING
16	116911	1	CAM, DECK LEVELER
17	767954	1	FW 0.379X.82X.06 HD ZY
18	706168	1	NT .375-16JAMG5
19	781567	2	NT .500-13NLG5
20	767962	4	FW .531 x 1.063 x .175
21	788166	2	WHEEL ASSY, ANTI SCALP
22	603995	3	BLADE, 17.86" -M-F-CW
Not Shown	783753	3	BLADE,17.86"-L-F-CW
Not Shown	787721	3	BLADE,17.86"-H-F-CW
Not Shown	603848	3	BLADE, 17.86"-CAT-F-CW
Not Shown	794198	3	BLADE,17.86"-MUL-F-CW

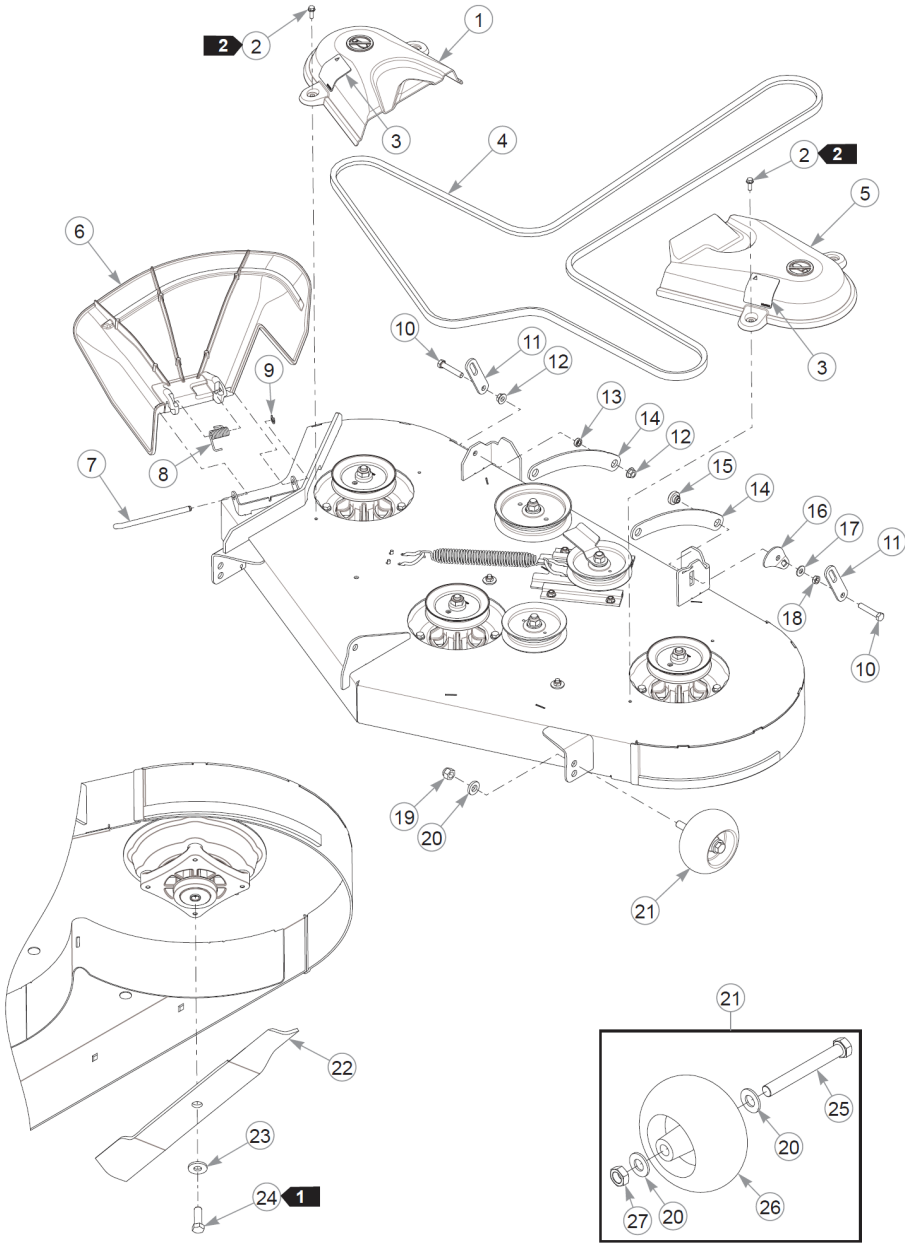

Item	Part No.	Qty	Name
Not Shown	785436	3	BLADE,17.86"-GAT-F-CW
23	602680	3	FW .453X1.12X.12 HRD ZY
24	754101	3	CS .437-20X1.250HXG5
25	781708	1	CS .500-13X4.25 HX G5 ZY
26	031997	1	ANTI-SCALP WHEEL
27	053199	1	NT .500-13JAMG5

Comments for Page: Deck Pulley Covers, Discharge Chute, Deck Belt, Mower Blades


1. Torque to 65 N•m.2. Torque to 3–7 N•m on these 4 self-tapping screws.

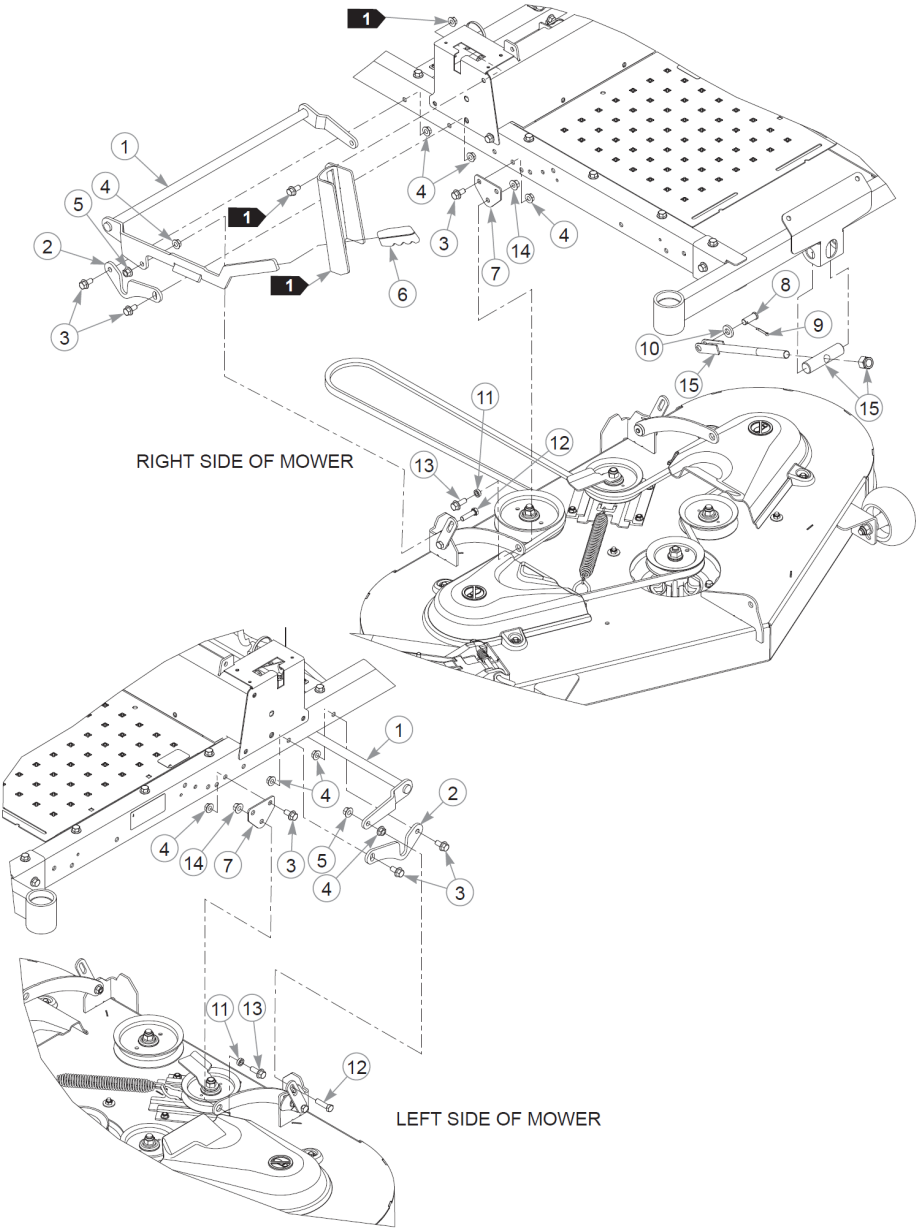

Deck Lift

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC


Item	Part No.	Qty	Name
1	120677	1	HANDLE W/A, DECK LIFT
2	116151	2	PIVOT BLOCK, DECK LIFT
3	029629	8	CS .375-16X0.75 HXF G5ZY
4	016899	10	NT .375-16 FLKG5
5	604515	2	NT .375-16 FL NY GF
6	604377	1	GRIP, 1/4 X 1.000 BLACK
7	116916	2	PLATE, DECK LINK
8	027714	1	CE0.500X1.250X.156X1.093
9	017251	1	CP .156DX1.000 LG HML Z
10	767962	1	FW .531 x 1.063 x .175
11	601839	2	PIVOT SPACER BUSHING
12	005116	2	CS .375-16X1.38 HX G5 ZY
13	029751	2	CS .375-16X1.00 HXF G5ZY
14	604515	2	NT .375-16 FL NY GF
15	121232	1	KIT, DECK PIVOT
Comments for Part Num. 121232			
Kit contains Heavy Duty Deck Lift Rod, Heavy Duty Deck Lift Pivot, and Nut..			

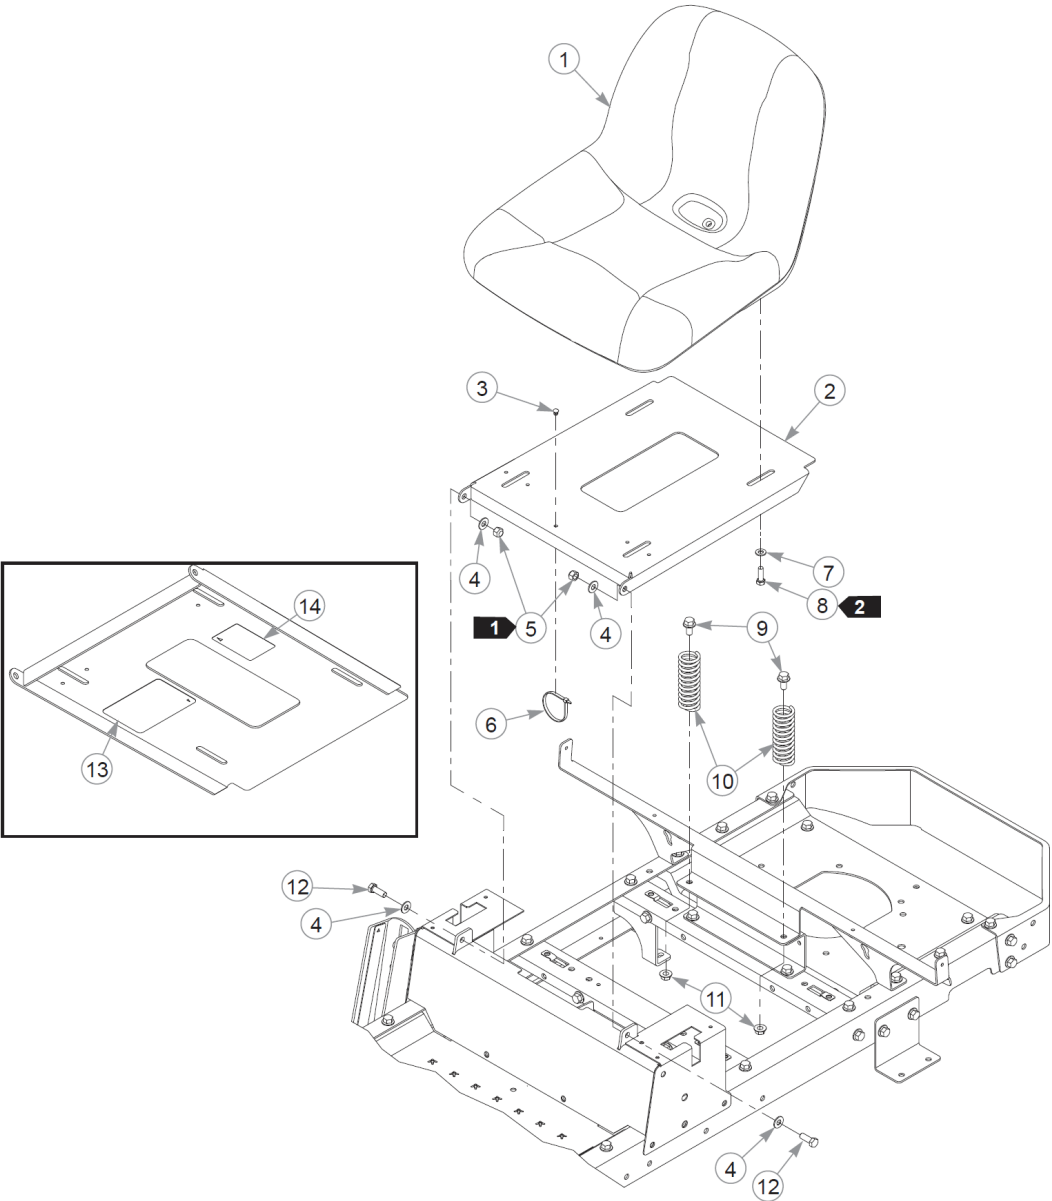

Seat

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
1	601807	1	SEAT, MILSCO
2	551897	1	SERVICE, SEAT PAN
3	604307	1	MOUNT, PUSH BUTTON
4	767954	4	FW 0.379X.82X.06 HD ZY
5	086660	2	NT .375-16NLG8
6	000331	1	WIRE TIE, SMALL/SHORT
7	768523	4	FW 0.343SAE
8	036236	4	CS .312-18X1.250HXG5
9	029629	2	CS .375-16X0.75 HXF G5ZY
10	793851	2	SPRING,COMP 1.25X4.00X.
11	016899	2	NT .375-16 FLKG5
12	036244	2	CS .375-16X1.00 HX G5 ZY
13	601815	1	DECAL, BATTERY WARNINGS
14	781419	1	DECAL, BELT ROUTING
15	793315	1	SWITCH, SNAP MOUNT

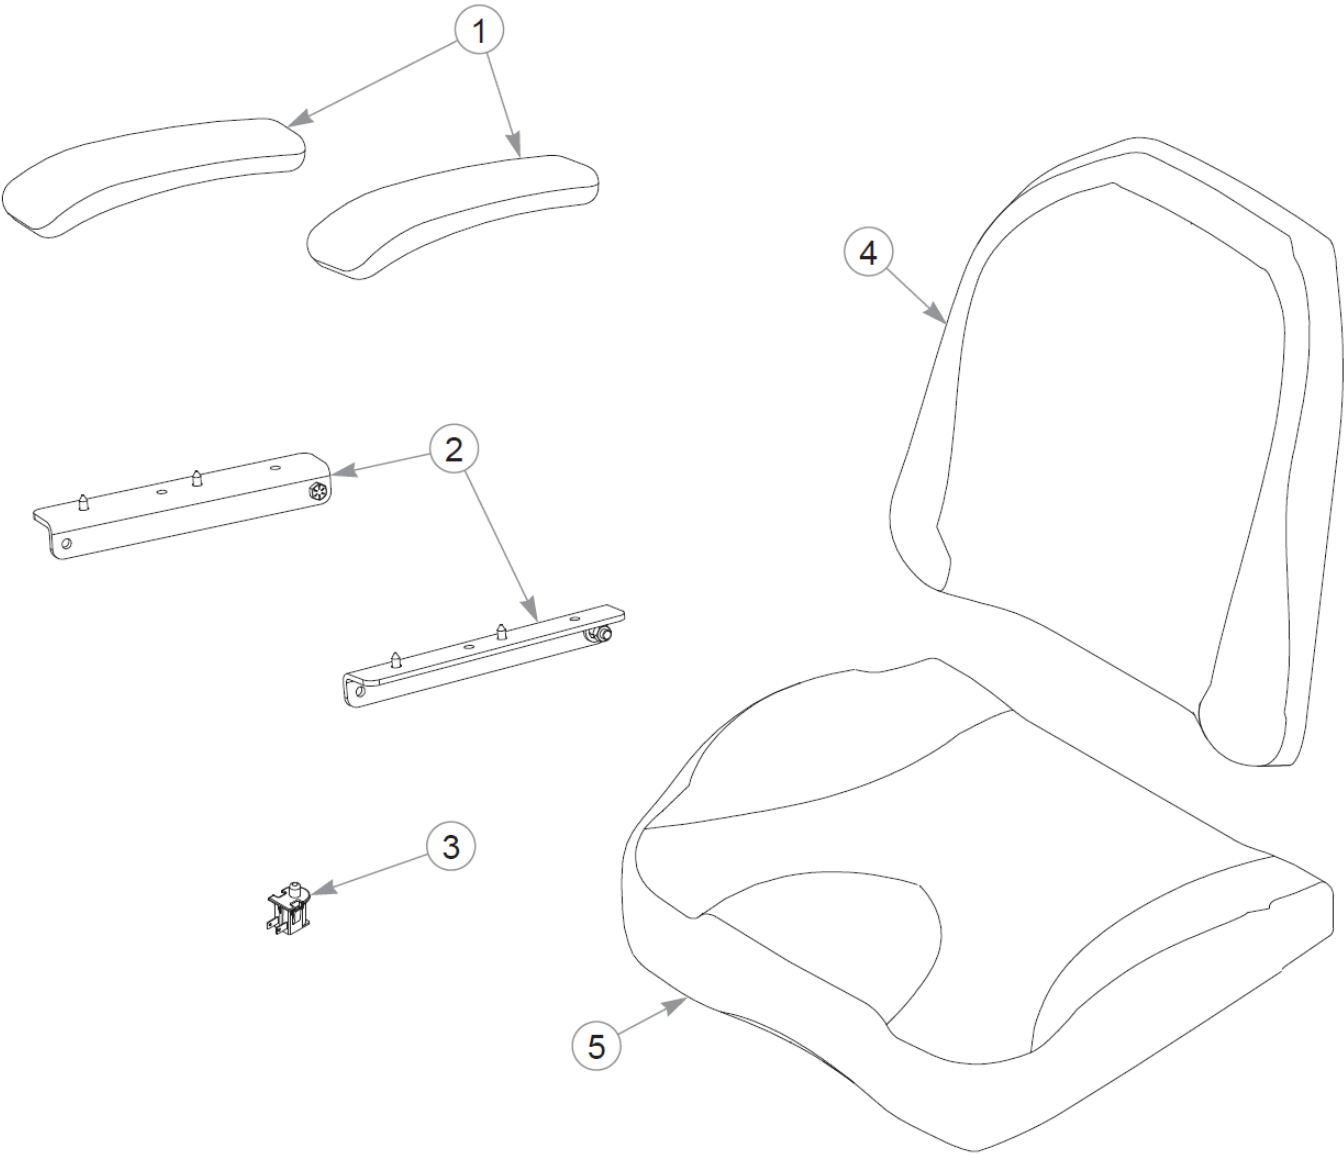

Seat Service Parts

52" Raptor Parts Manual - 938274CE - HTRTRL052KAWFR691VC

Item	Part No.	Qty	Name
Not Shown	606146	1	SEAT, SEATS INC 907
1	606081	2	SVC, ARM PADS
2	606085	2	SVC, ARMEST SET
3	606082	1	SVC, OPS
4	606147	1	SVC, BACK CUSHION
5	606148	1	SVC, SEAT CUSHION


Hustler® Parts Manual



200 South Ridge Road

Hesston, Kansas

67062

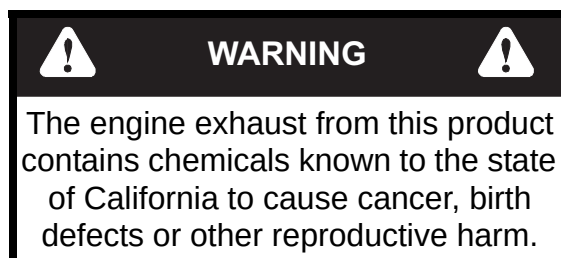

NOTICE OF REQUIREMENT OF SPARK ARRESTER MUFFLER

This equipment may create sparks that can start fires around dry vegetation. California Public Resources Code Section 4442.6 provides that it is unlawful to use or operate an internal combustion engine on any forest-covered, brush-covered, or grass-covered land unless the engine is equipped with a spark arrester maintained in effective working order. A spark arrester is a device constructed of nonflammable materials specifically for the purpose of removing and retaining carbon and other flammable particles over 0.0232 of an inch in size from the exhaust flow of an internal combustion engine that uses hydrocarbon fuels or which is qualified and rated by the United States Forest Service. Other states or federal areas may have similar laws. The Operator Should Contact Local Fire Agencies For Laws or Regulations Relating to Fire Prevention Requirements. THIS EQUIPMENT DOES NOT HAVE A SPARK ARRESTER AND YOU SHOULD CONTACT YOUR AUTHORIZED DEALER FOR THE PURCHASE OF A SPARK ARRESTER.

Inspect spark arrester daily; replace every 500 hours or as needed.


The Engine Owner's Manual provides information regarding the U.S. Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance and warranty.

Keep Engine Owner's Manual with your unit. Should the Engine Owner's Manual become damaged or illegible, replace immediately. Replacements may be ordered per the information found in the Product Information section of the owner's manual.

Federal law and California State law prohibit the following acts or the causing thereof:

- 1. The removal or rendering inoperative by any person other than for purposes of maintenance, repair, replacement, of any device or element of design incorporated into any equipment for the purposes of emissions control prior to or after its sales or delivery to the ultimate purchaser or while it is in use, or**
- 2. The use of the equipment after such device or element of design has been removed or rendered inoperative by any person.**

Mulch Kit 1

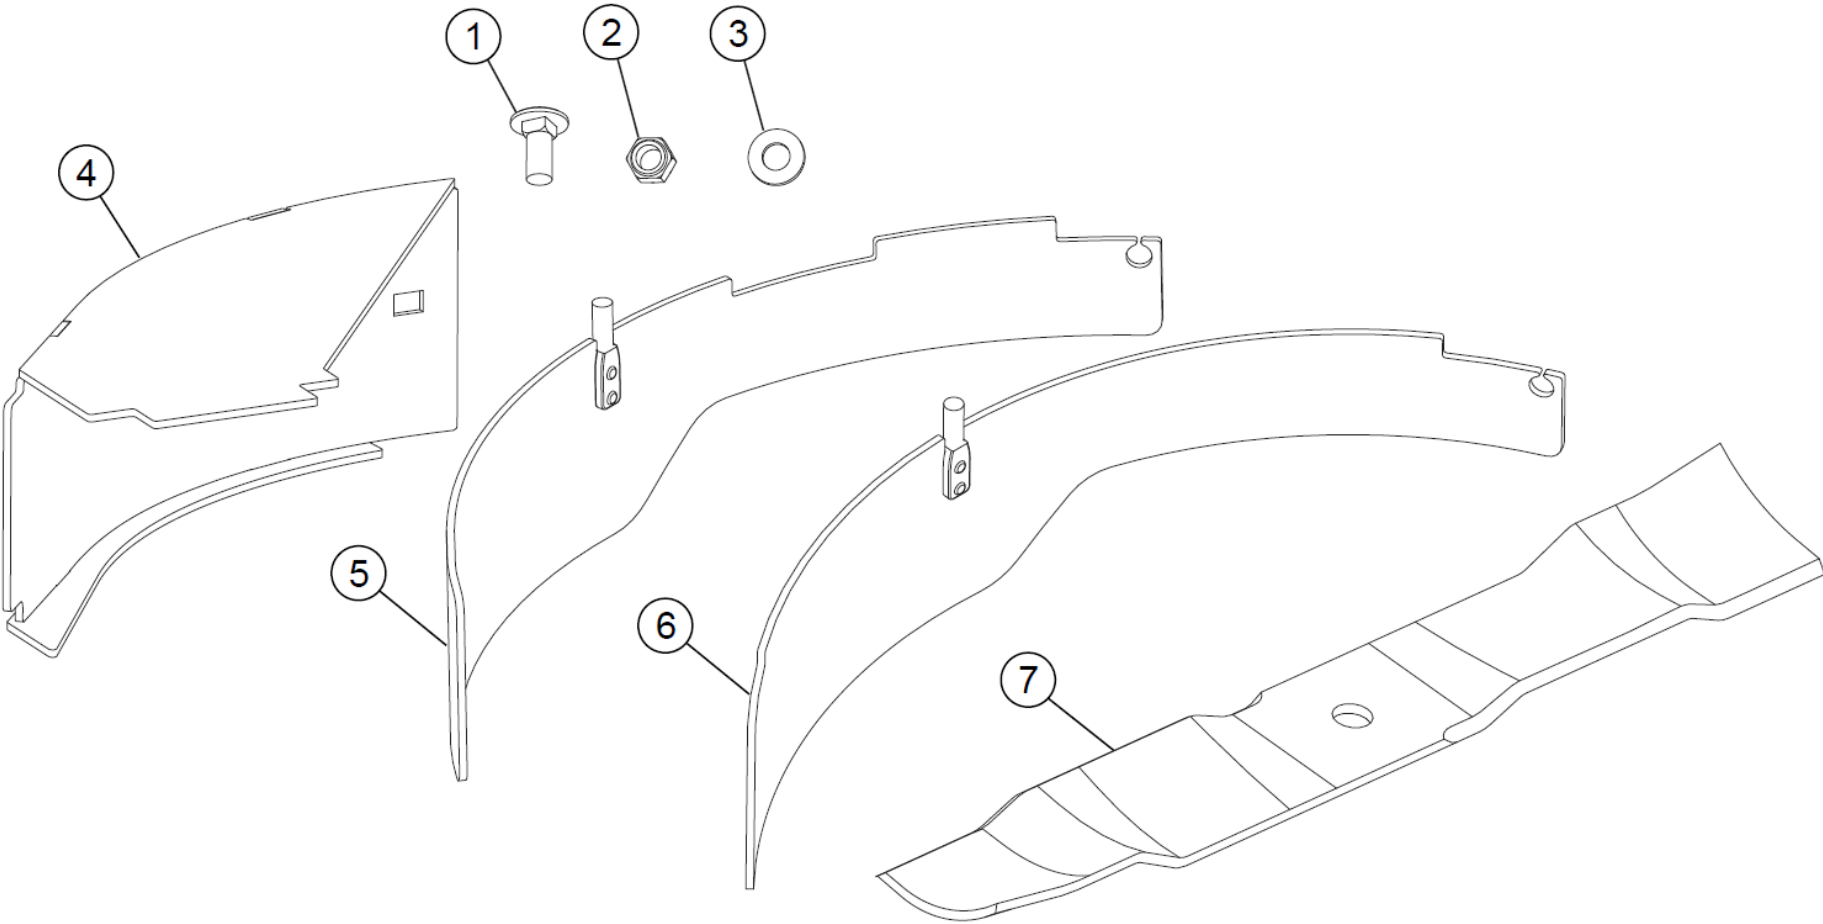

Item	Part No.	Qty	Name
Not Shown	124443	1	52" MULCH KIT
1	016253	1	CB .312-18X .750 FUL ZN
2	058776	3	NT .312-18NLG5
3	768523	3	FW 0.343SAE
4	124444-3	1	MULCH CLOSE OFF W/A
5	117479	1	MULCH, WRAPPER CENTER WA
6	117478	1	MULCH, WRAPPER LEFT W/A
7	794198	3	BLADE, 17.86"-MUL-F-CW