

LAWN MOWER

GR480 GR530

FOR

SPARE PARTS LIST

Fig. 1 Gear Case


JARDIN S.A.

B.P. 133

38521 SAINT-EGREVE CEDEX

Tél. 76 75 48 86


Fax 76 75 69 65

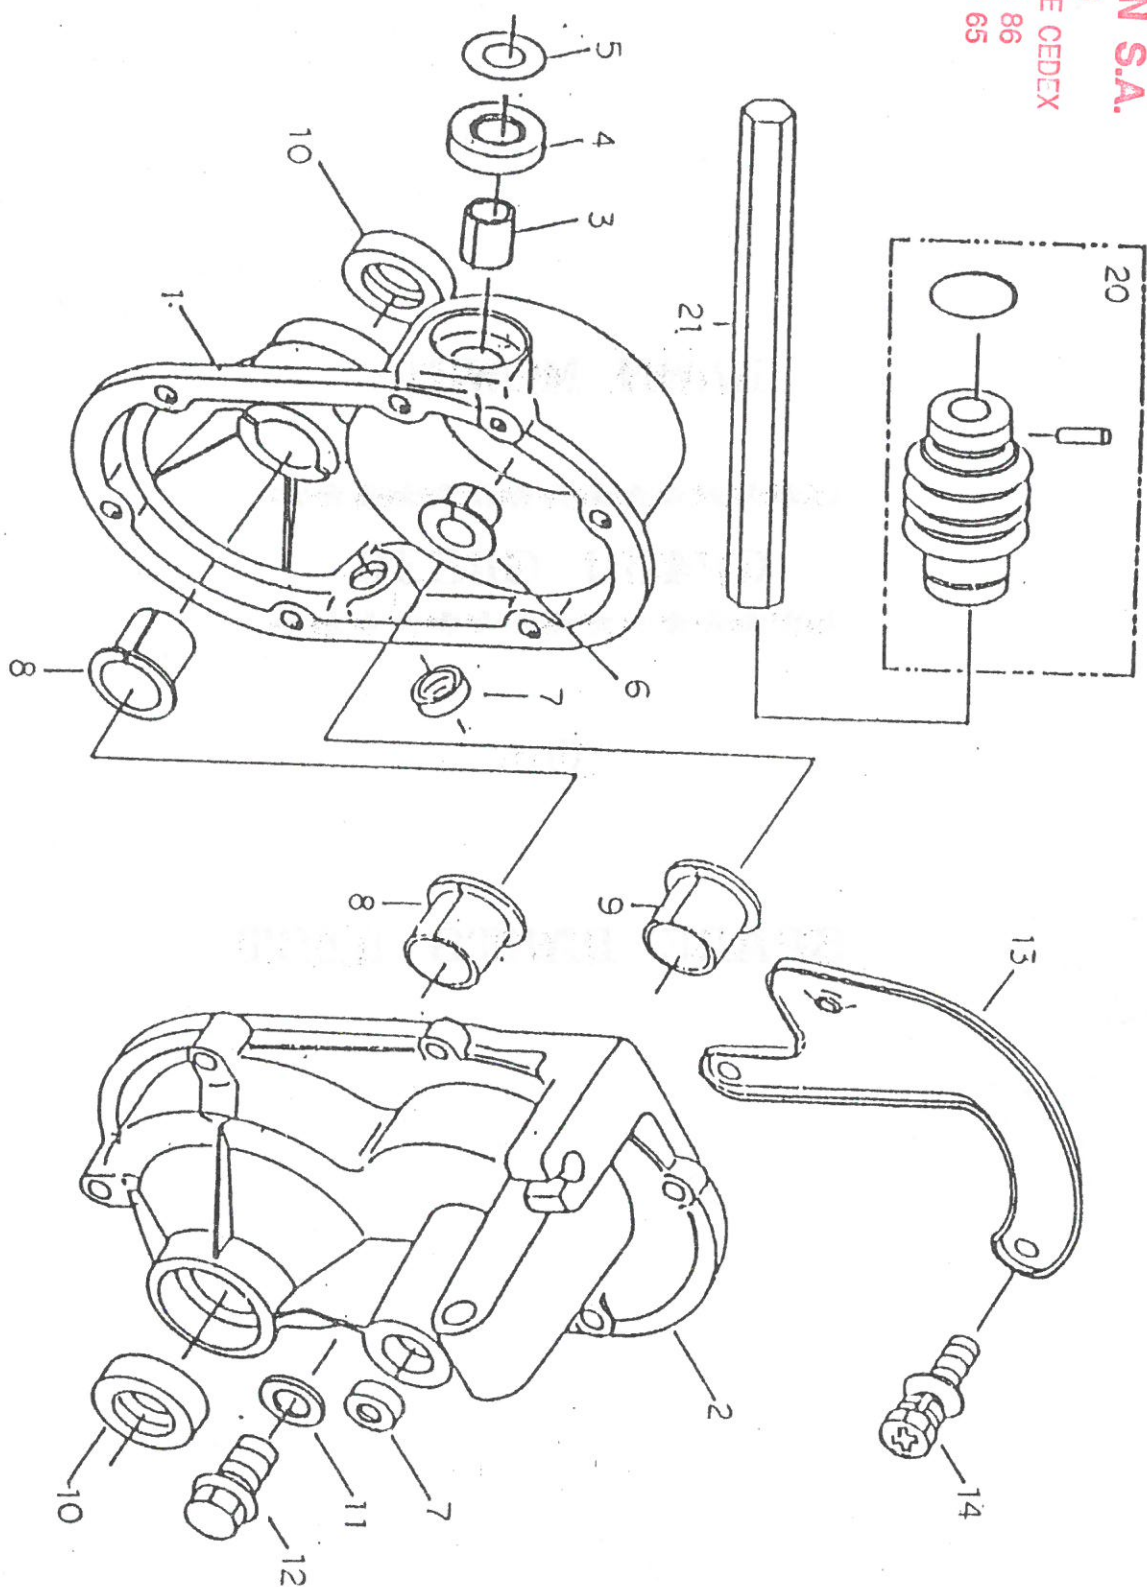

A GEAR CASE

No.	Parts No.	Parts Name	480				530		
			P	A	B	BA	A	B	BS
	80-1020-100-00	Gear Case Assembly		1	1	1	1	1	1
1	80-1020-101-00	Gear Case (Inside)		1	1	1	1	1	1
2	80-1020-103-00	Gear Case (Outside)		1	1	1	1	1	1
3	89-3512-010150	Metal DBB 1015		1	1	1	1	1	1
4	89-5121-102007	Oil Seal UE 10207		1	1	1	1	1	1
5	83-1210-352-00	Washer 10 t1		1	1	1	1	1	1
6	89-3511-012100	Metal MB1210-20FPU		1	1	1	1	1	1
7	89-5131-081404	Oil Seal KE8144		2	2	2	2	2	2
8	89-3511-015150	Metal MB1515-23FPU		2	2	2	2	2	2
9	89-3511-016150	Metal MB1615-24FPU		1	1	1	1	1	1
10	89-5121-152507	Oil Seal UE 15257		2	2	2	2	2	2
11	89-5230-100000	Seal Washer SW-10		1	1	1	1	1	1
12	89-1254-100143	Flange Bolt M10X1.25X14		1	1	1	1	1	1
13	80-1020-198-10	Lock Arm Bracket B		1	1	1	1	1	1
14	89-1144-060253	Bolt And P.W. S.W. ASSY M6X25		6	6	6	6	6	6
20	80-1020-515-00	Universal Joint NC-10-37C1		2	2	2	2	2	2
21	80-1020-522-10	Drive Shaft (K) 97L		1	1	1	1	1	1
	80-1020-525-00	Drive Shaft (H) 119L		1	1	1	1	1	1
	80-1020-526-00	Drive Shaft (H) 133L		1	1	1	1	1	1

Fig. 2 Gear Case (Outside, Inside)

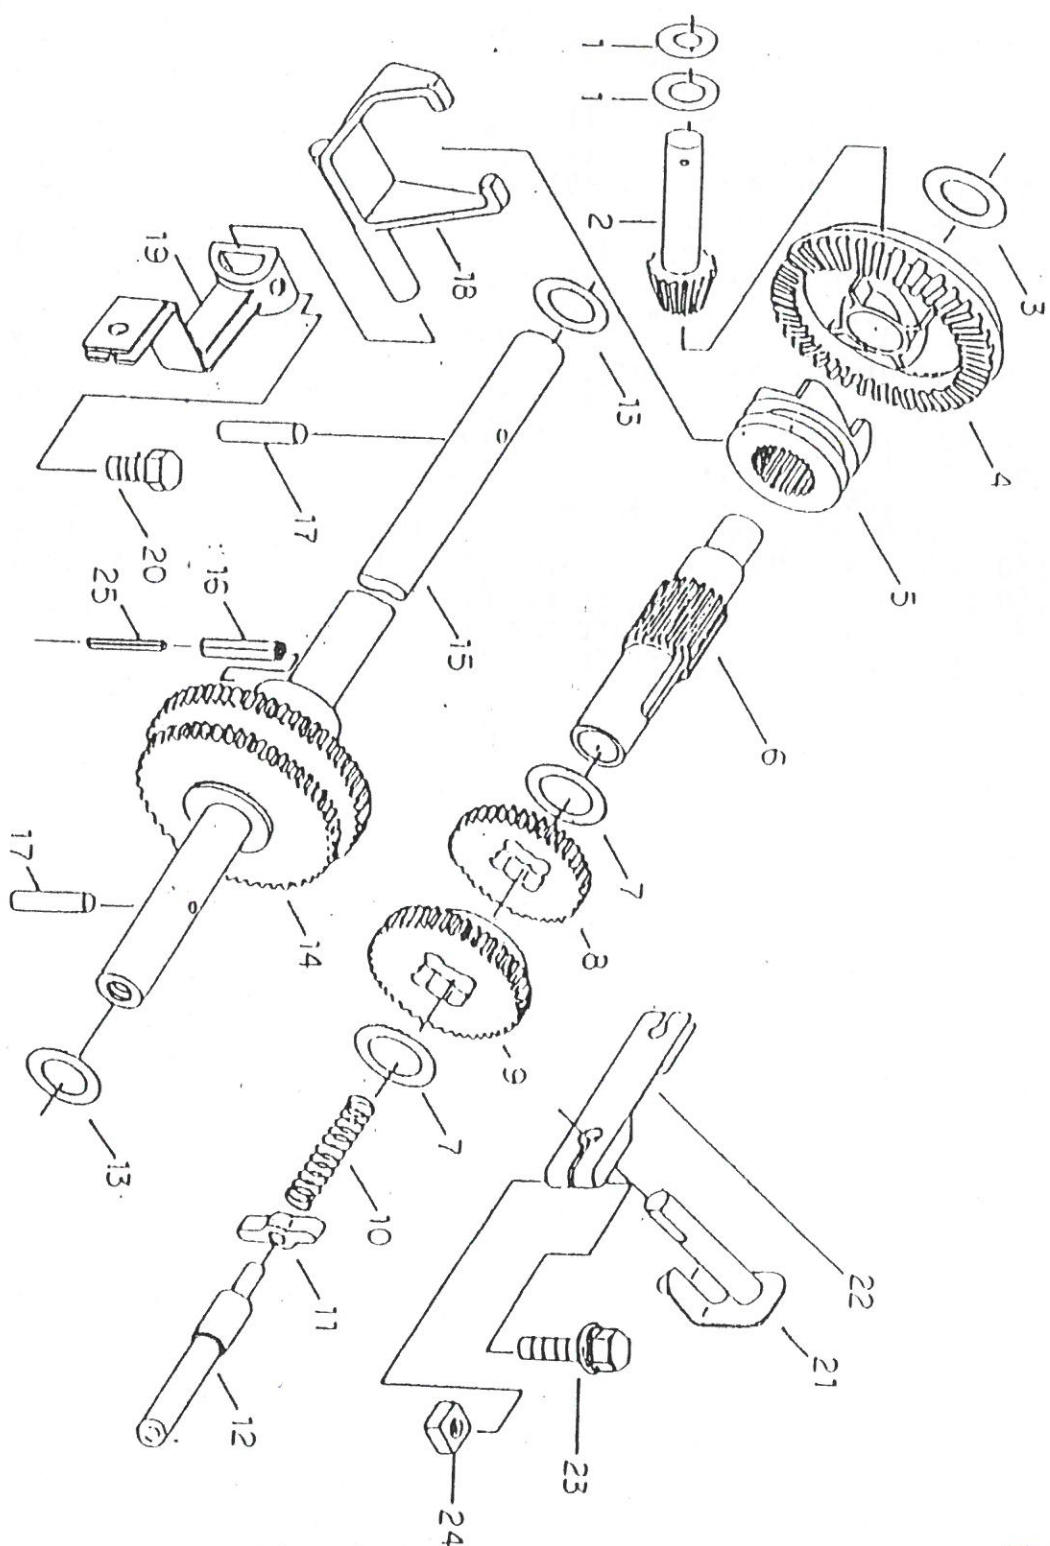


JARDIN S.A.
 B.P. 133
 38521 SAINT-EGREVE CEDEX
 Tél. 76 75 48 86
 Fax 76 75 69 65

B GEAR CASE (INSIDE, OUTSIDE)

			480				530		
No.	Prats No.	Parts Name	P	A	B	BS	A	B	BS
1	83-1020-351-00	Thrust Washer 10		2	2	2	2	2	2
2,4	80-1020-115-10	Pinion Bevel And Bevel Gear ASSY		1	1	1	1	1	1
2	80-1020-116-10	Pinion Bevel		1	1	1	1	1	1
3	83-1020-355-00	Thrust Washer 12		1	1	1	1	1	1
4	80-1020-117-10	Bevel Gear 53-tooth		1	1	1	1	1	1
5	80-1020-119-10	Clutch for driving		1	1	1	1	1	1
6	80-1020-118-20	Main Shaft		1	1	1	1	1	1
7	83-1020-363-00	Thrust Washer 16		2	2	2	2	2	2
8,9	80-1020-125-10	Gear ASSY (Low and High)		1	1	1	1	1	1
8	80-1020-123-10	Gear (Low)		1	1	1	1	1	1
9	80-1020-121-10	Gear (High)		1	1	1	1	1	1
10	80-1020-161-00	Shaft Spring		1	1	1	1	1	1
11	80-1020-108-00	Change Guide		1	1	1	1	1	1
12	80-1020-107-00	Change Rod		1	1	1	1	1	1
13	83-1020-361-00	Thrust Washer 15		2	2	2	2	2	2
14	80-1020-148-30	Axle Gear		1	1	1	1	1	1
15	80-1020-146-00	Axle		1	1	1	1	1	1
	80-1010-461-00	Axle (Push)	1						
16	89-2111-050025	Spring Pin 5X25		1	1	1	1	1	1
17	89-2142-050250	Pin 5X25		2	2	2	2	2	2
18	80-1020-113-00	Clutch Frok		1	1	1	1	1	1
19	80-1020-153-10	Clutch Arm		1	1	1	1	1	1
20	89-1113-060123	Bolt 8T M6X12		1	1	1	1	1	1
21	80-1020-106-00	Shaft Arm		1	1	1	1	1	1
22	80-1020-193-10	Change Arm		1	1	1	1	1	1
23	89-1144-060253	Bolt And P.W. S.W. ASSY M6X25		1	1	1	1	1	1
24	83-1020-198-00	Square Nut M6		1	1	1	1	1	1
25	89-2111-030025	Spring Pin 3X25		1	1	1	1	1	1


Fig. 3 Safety Cover

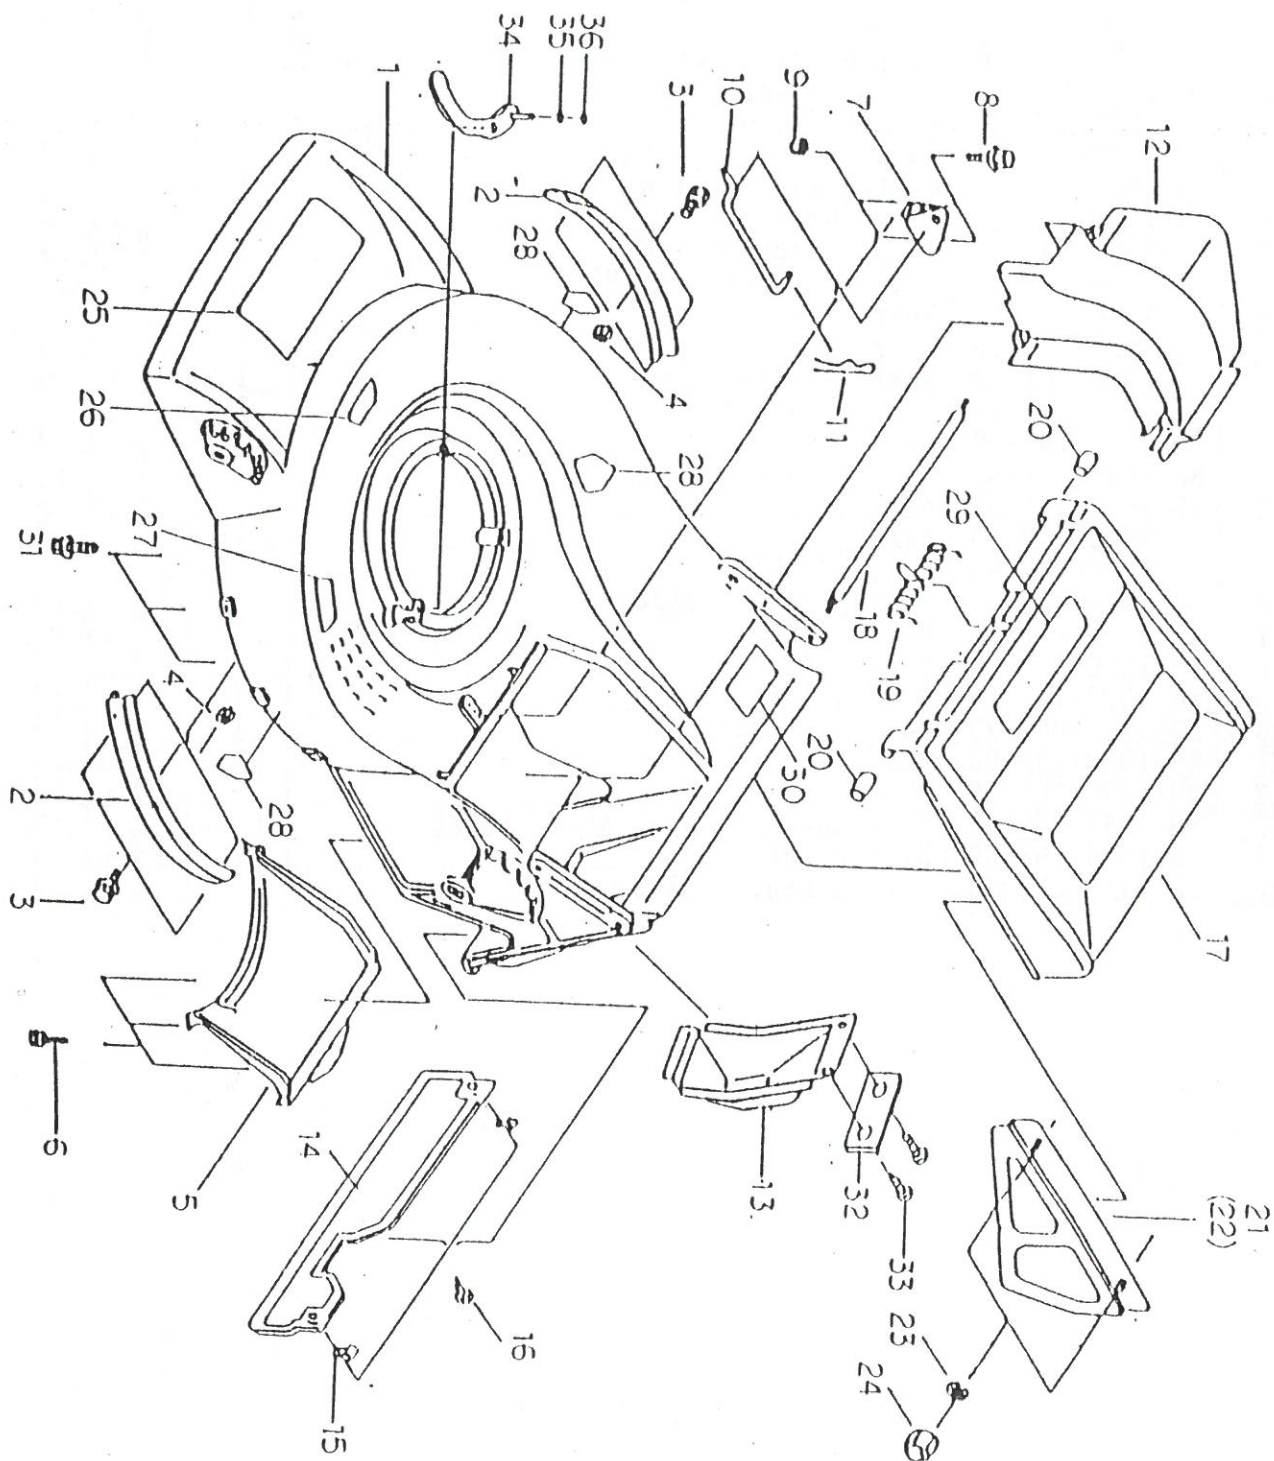

C SAFETY COVER

No.	Parts No.	Parts Name	480				530		
			P	A	B	BS	A	B	BS
1	80-1010-731-00	Cover (Body) 480	1	1	1	1			
	80-1020-731-00	Cover (Body) 530					1	1	1
2	80-1010-741-00	Under Guard 480	2	2	2	2			
	80-1020-741-00	Under Guard 530					2	2	2
3	89-1133-080163	Bolt And P.W. S.W. ASSY M8X20	4	4	4	4			
	89-1133-080203	Bolt And P.W. S.W. ASSY M8X20					4	4	4
4	89-1511-080043	Nut M8	4	4	4	4			
	89-1511-080043	Nut M8					4	4	4
5	80-1010-714-00	Guide 480	1	1	1	1			
	80-1020-714-00	Guide 530					1	1	1
6	83-1020-143-00	Tapping Bolt M8X18	3	3	3	3	3	3	3
7	80-1020-705-30	Lock Arm Bracket A		1	1	1	1	1	1
8	89-1132-080253	Bolt And S.W. ASSY M8X25		2	2	2	2	2	2
9	89-1511-080043	Nut M8		2	2	2	2	2	2
10	80-1020-707-20	Lock Arm		1	1	1	1	1	1
11	89-2131-080002	Snap Pin 8		1	1	1	1	1	1
12	80-1020-733-00	Front Cover - Gear Case	1	1	1	1	1	1	1
13	80-1020-735-00	Rear Cover - Gear Case	1	1	1	1	1	1	1
14-16	80-1020-791-00	Flapper Assembly	1	1	1	1	1	1	1
14	80-1020-792-00	Flapper	1	1	1	1	1	1	1
15	80-1020-793-10	Flapper Setting	2	2	2	2	2	2	2
16	83-1020-144-00	Blot And P.W. S.W. ASSY M8X16	2	2	2	2	2	2	2
17	80-1020-751-00	Rear Cover	1	1	1	1	1	1	1
18	80-1020-207-10	Rear Cover Shaft	1	1	1	1	1	1	1
19	80-1020-753-00	Rear Shaft Spring	1	1	1	1	1	1	1
20	80-1020-202-00	Rear Shaft Spacer					2	2	2
21	80-1020-755-10	Side Plate (Left)	1	1	1	1	1	1	1
22	80-1020-754-10	Side Plate (Right)	1	1	1	1	1	1	1
23	89-1750-080003	Spring Washer 6	4	4	4	4	4	4	4
24	89-1571-080043	Cap Nut M8	4	4	4	4	4	4	4
25	80-1020-902-00	Lable (Large)	1	1	1	1	1	1	1
26	80-1020-928-00	Notice Label (Small)					1	1	1
27	80-1020-907-00	Step Label	1	1	1	1	1	1	1
28	80-1010-926-00	Danger Label	2	2	2	2			
	80-1020-927-00	Danger Label					3	3	3
29	80-1020-929-00	Notice Label	1	1	1	1	1	1	1
30	80-1010-931-00	Number Label 480	1	1	1	1			
	80-1020-931-00	Number Label 530					1	1	1
31	89-1133-100503	Bolt And P.W. S.W. ASSY M10x50 (K)	3	3	3	3	3	2	2
	89-1133-100553	Bolt And P.W. S.W. ASSY M10X55 (H)						1	1
	83-1020-116-00	Bolt 5/16-24X45UNF (H)	2	2	2		2	2	2
	89-1133-080453	Bolt M8X45 (H)						1	1
	80-1010-789-00	Engine Setting Bolt (H)	1	1	1		1		
32	80-1020-736-00	Rear Cover Stationary Plate	1	1	1	1	1	1	1
33	89-1161-050163	Cross Recessed Tapping Screw 5x16	2	2	2	2	2	2	2
34	80-1020-721-00	HONDA Engine Stay (H)	1	1	1	1	1	1	1
35	89-1750-080003	Spring Washer 8 (H)	1	1	1	1	1	1	1
36	89-1711-080003	Washer M8 (H)	1	1	1	1	1	1	1

Fig. 4 Wheel

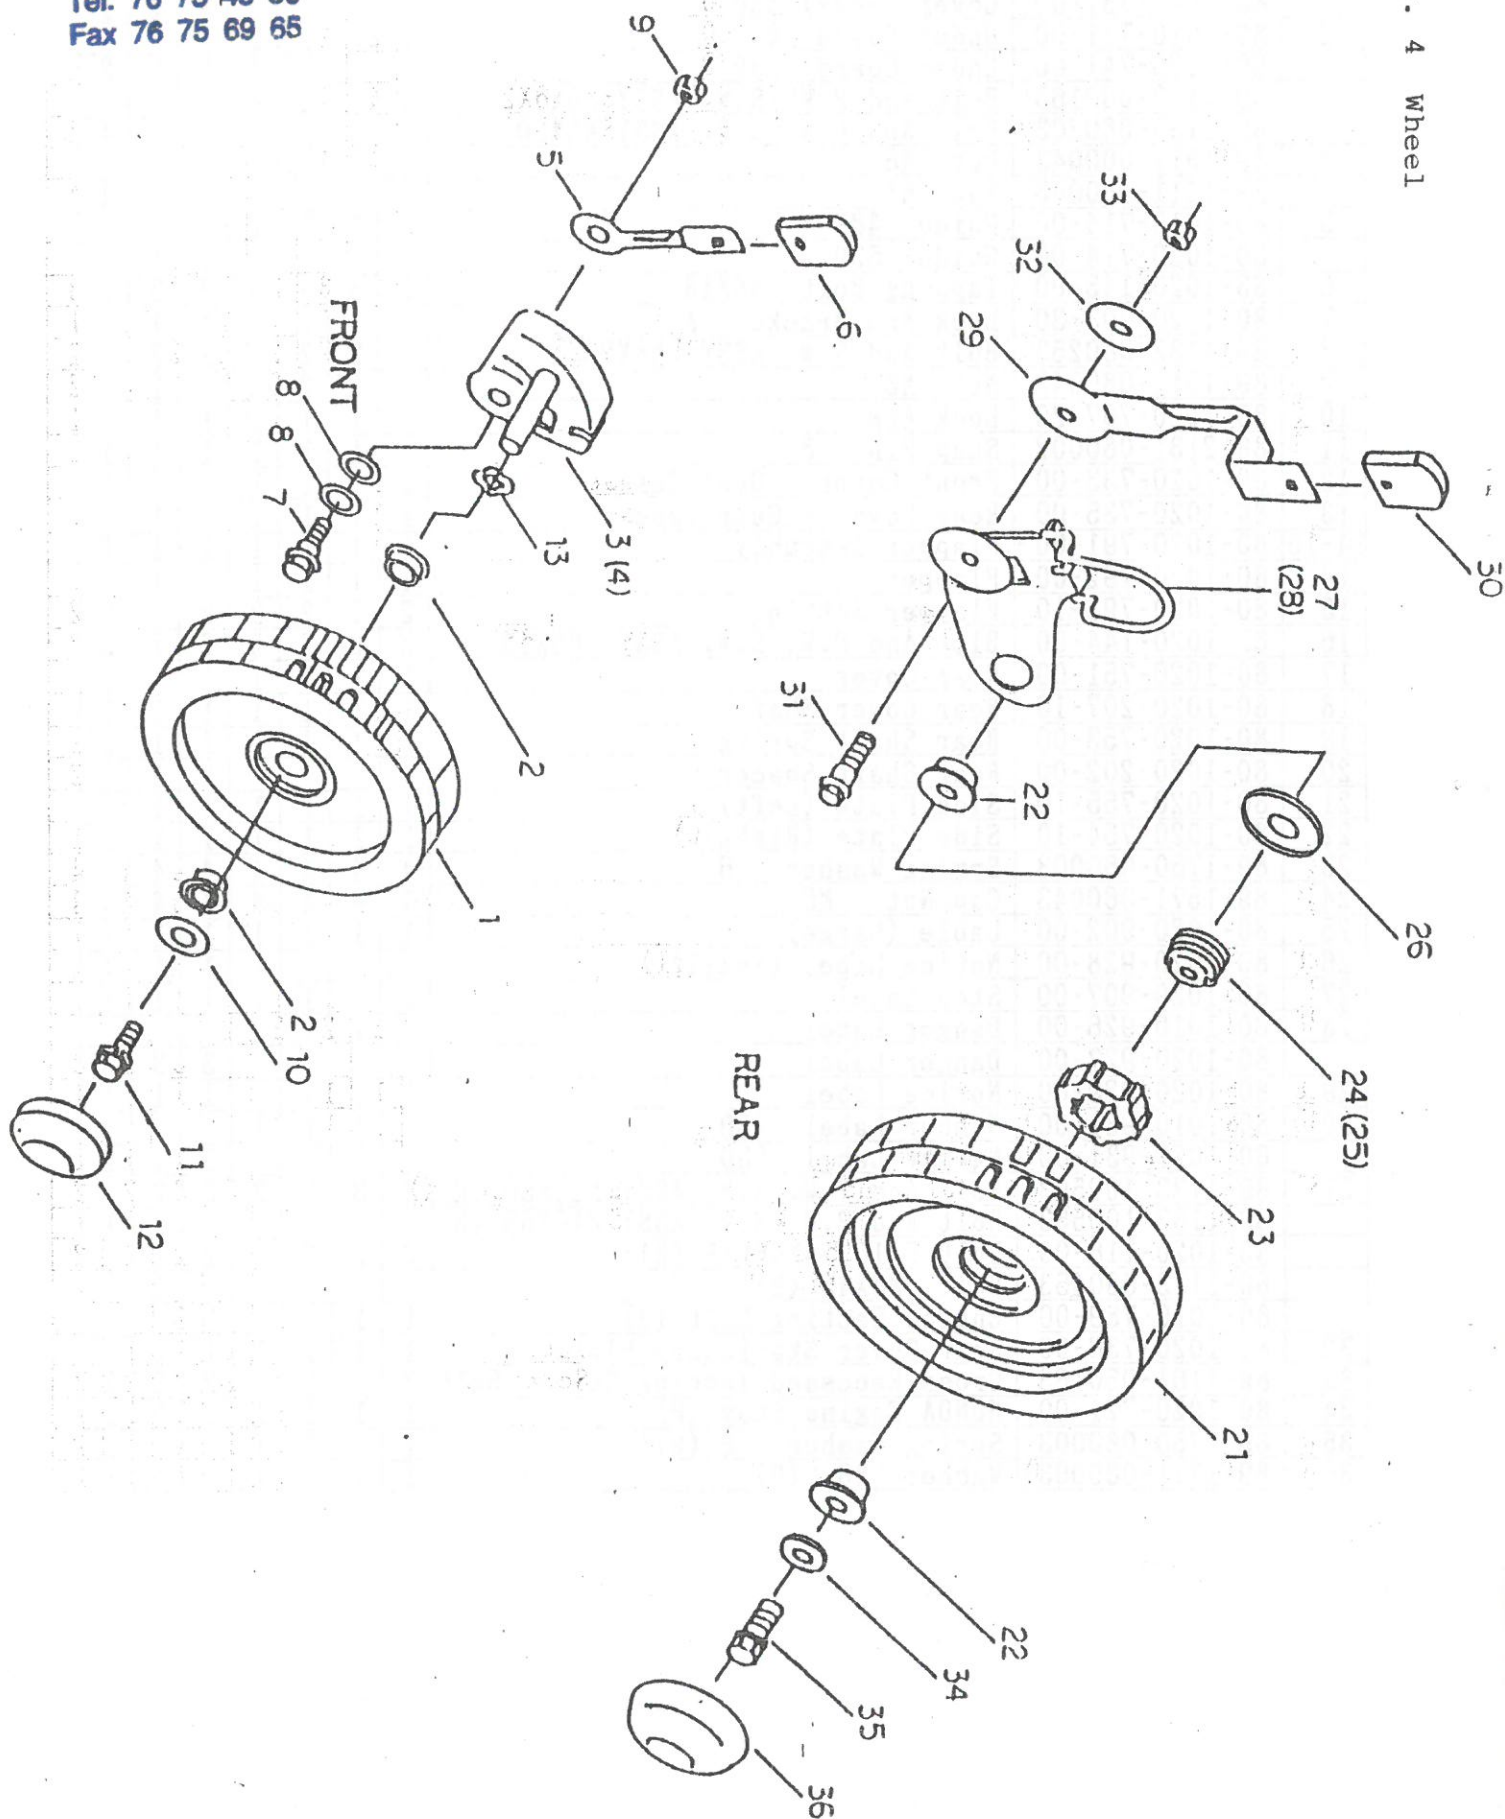


D WHEEL

net HT

No.	Parts No.	Parts Name	480				530		
			P	A	B	BS	A	B	BS
1-2	80-1020-421-00	Front Wheel Assembly	2	2	2	2	2	2	2
1	80-1020-407-00	Front Wheel	2	2	2	2	2	2	2
2	83-1020-987-00	Bearing ND-02S	4	4	4	4	4	4	4
3	80-1020-404-10	Front Wheel Arm (Left)	1	1	1	1	1	1	1
4	80-1020-405-10	Front Wheel Arm (Right)	1	1	1	1	1	1	1
5	80-1020-424-10	Front Wheel Arm Stopper	2	2	2	2	2	2	2
6	80-1020-426-10	Grip	2	2	2	2	2	2	2
7	80-1020-406-10	Arm Bolt	2	2	2	2	2	2	2
	83-1020-395-00	Washer 8X12 t0.8	4	4	4	4	4	4	4
9	89-1551-080003	U-Nut M8	2	2	2	2	2	2	2
10	83-1020-312-00	Washer 8X30 t3.2	2	2	2	2	2	2	2
11	89-1132-080203	Bolt And S.W. ASSY M8X20	2	2	2	2	2	2	2
12	80-1020-441-00	Wheel Cap	2	2	2	2	2	2	2
13	83-1020-359-00	Spring Washer	2	2	2	2	2	2	2
21-23	80-1020-422-00	Rear Wheel Assembly		2	2	2	2	2	2
21-22	80-1020-421-00	Rear Wheel Assembly	2						
21	80-1020-408-00	Rear Wheel		2	2	2	2	2	2
22	83-1020-987-00	Bearing ND-0.2	6	4	4	4	4	4	4
23	80-1020-409-00	Clutch Guide		2	2	2	2	2	2
24	80-1020-458-00	Ratchet Assembly (Left)		1	1	1	1	1	1
25	80-1020-459-00	Ratchet Assembly (Right)		1	1	1	1	1	1
26	80-1020-433-00	Coned Disc Spring		2	2	2	2	2	2
27	80-1020-414-20	Rear Wheel Arm (Left)	1	1	1	1	1	1	1
28	80-1020-415-20	Rear Wheel Arm (Right)	1	1	1	1	1	1	1
29	80-1020-425-10	Rear Wheel Arm Stopper	2	2	2	2	2	2	2
30	80-1020-426-10	Grip	2	2	2	2	2	2	2
31	80-1020-406-10	Arm Bolt	2	2	2	2	2	2	2
32	83-1020-314-00	Washer 8X40 t2.3					2	2	2
33	89-1551-080003	U-Nut M8	2	2	2	2	2	2	2
34	83-1020-312-00	Washer 8X30 t3.2	2	2	2	2	2	2	2
35	89-1132-080203	Bolt And S.W. ASSY M8X20	2	2	2	2	2	2	2
36	80-1020-441-00	Wheel Cap	2	2	2	2	2	2	2

JARDIN S.A.
 Z.I. - 36, avenue de l'Île Brune
 38120 SAINT-EGREVE
 Tél. 76 75 48 86
 Fax 76 75 69 65


Fig. 5 Handle

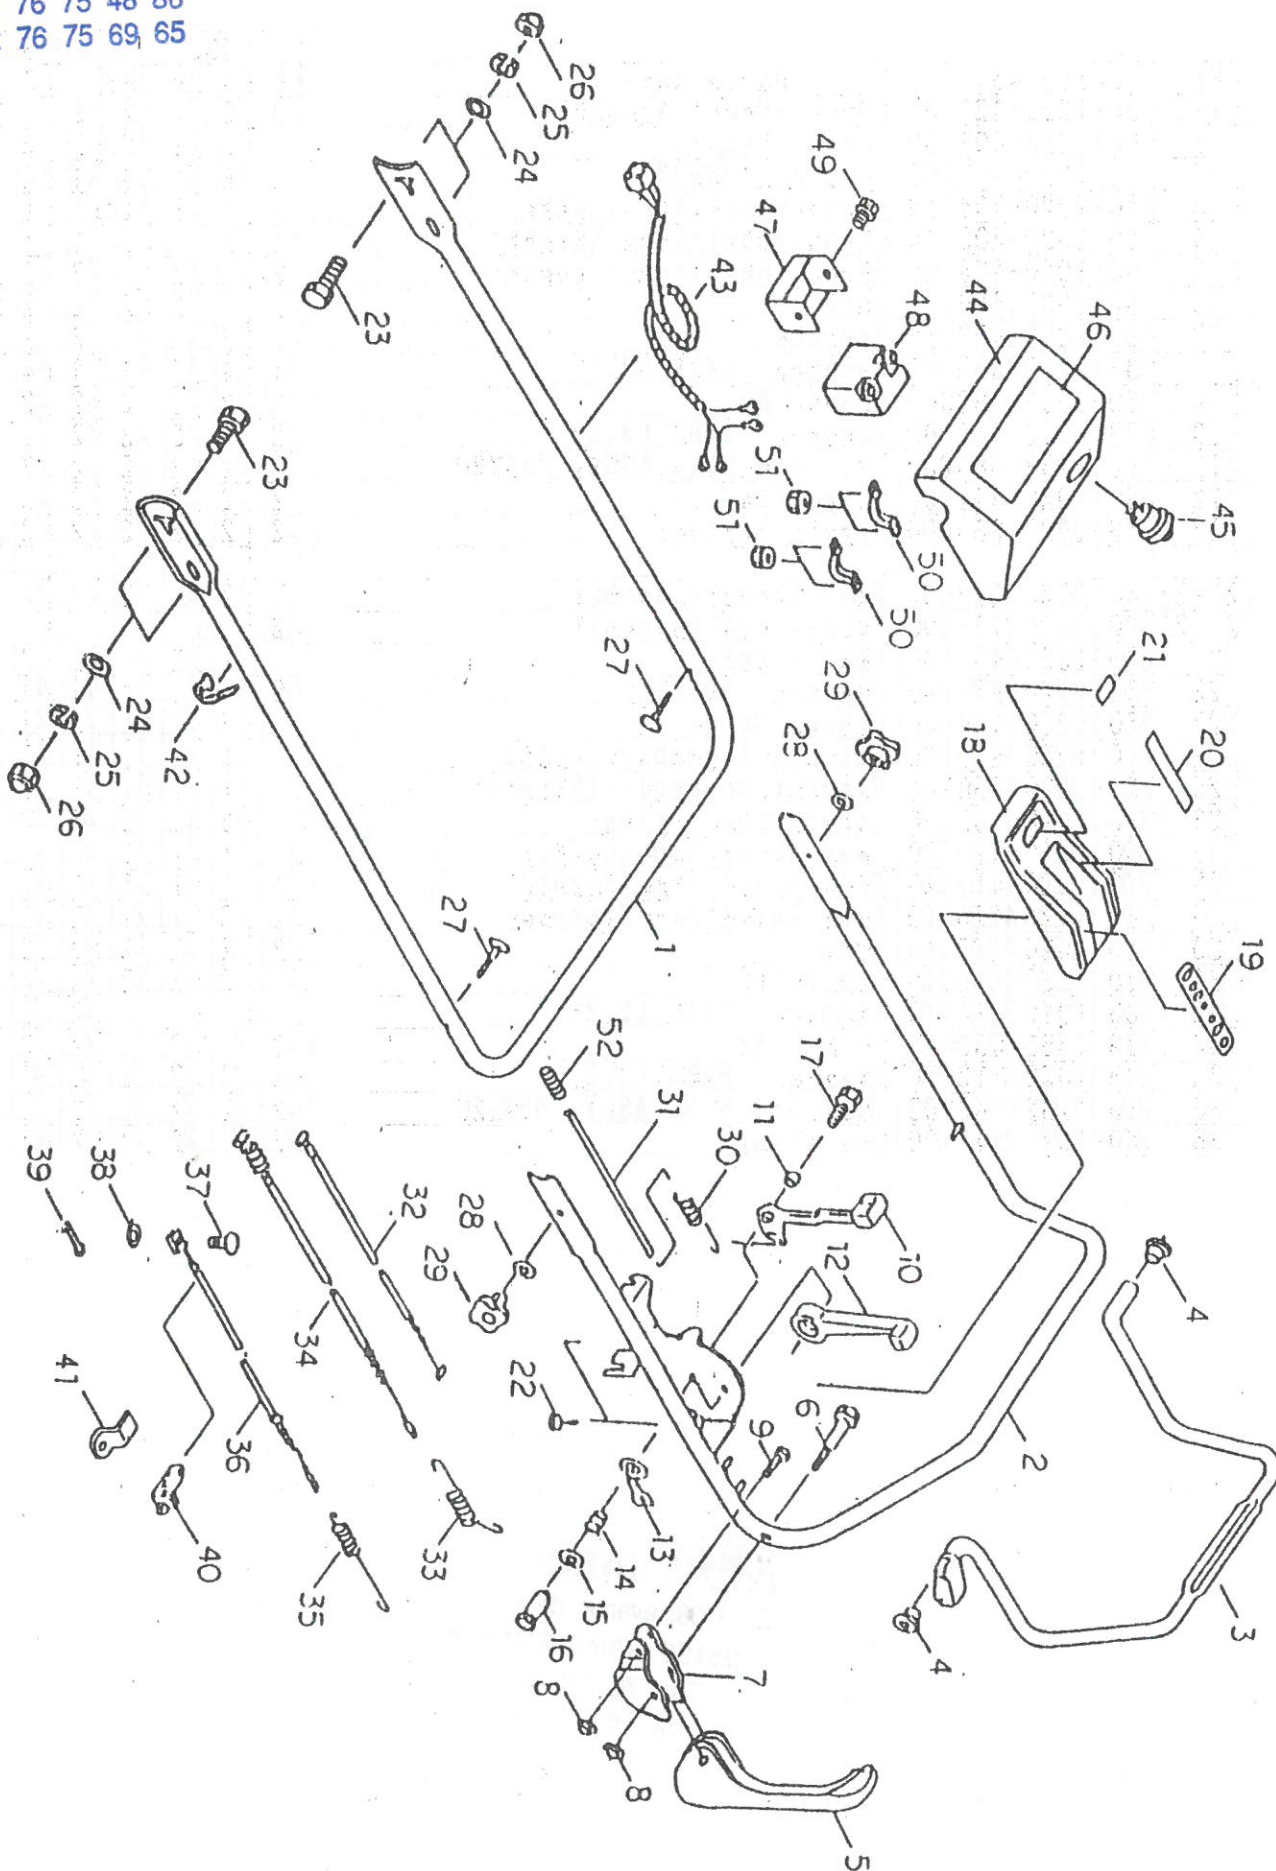

E HANDLE

No.	Parts No.	Parts Name	480				530		
			P	A	B	BS	A	B	BS
1	80-1020-201-10	Lower Handle	1	1	1	1	1	1	1
2	80-1020-222-00	Upper Handle (A)		1			1		
	80-1020-221-20	Upper Handle (B)			1	1		1	1
	80-1010-223-00	Upper Handle (Push)	1						
3	80-1020-241-00	Lever for Driving		1	1	1	1	1	1
4	80-1020-243-00	Spacer		2	2	2	2	2	2
5	80-1020-251-20	Blade Lever			1	1		1	1
6	80-1020-258-00	Blade Lever Shaft			1	1		1	1
7	80-1020-268-00	Blade Lever Cover			1	1		1	1
8	83-1575-189-00	Flange Cap Nut M6			2	2		2	2
9	89-1111-060353	Bolt M6X35			1	1		1	1
10	80-1020-260-00	Change Lever		1	1	1	1	1	1
11	80-1020-270-00	Inner Collar		1	1	1	1	1	1
12	80-1020-261-00	Throttle Lever (K)	1	1	1	1	1	1	1
	80-1020-265-00	Throttle Lever (H)	1	1	1	1	1	1	1
13	80-1020-264-00	Washer	1	1	1	1	1	1	1
14	80-1020-263-00	Lever Shaft Spring	1	1	1	1	1	1	1
15	89-1711-120003	Washer 13X21	1	1	1	1	1	1	1
16	80-1020-262-00	Lever Shaft	1	1	1	1	1	1	1
17	89-1133-080303	Bolt and P.W. S.W. ASSY M8X30		1	1	1	1	1	1
	89-1133-080163	Bolt and P.W. S.W. ASSY M8X16	1						
18	80-1020-231-00	Control Case	1	1	1	1	1	1	1
19	80-1020-911-00	Throttle Label (K)	1	1	1	1	1	1	1
	80-1020-913-00	Throttle Label (H)	1	1	1	1	1	1	1
20	80-1020-912-00	Change Label		1	1	1	1	1	1
21	80-1020-903-00	Label (Small)	1	1	1	1	1	1	1
22	89-1161-050123	Tapping Screw 5X12	2	2	2	2	2	2	2
23	80-1020-208-00	Lower Handle Bolt					2	2	2
	89-1113-080253	Bolt 8T M8X25	2	2	2	2			
24	89-1711-080003	Washer 8	4	4	4	4	4	4	4
25	89-1750-080003	Spring Washer 8	4	4	4	4	4	4	4
26	89-1571-080043	Cap Nut M8	4	4	4	4	4	4	4
27	80-1020-227-00	Handle Bolt (B)	2	2	2	2	2	2	2
28	89-1711-080003	Washer 8	2	2	2	2	2	2	2


Fig. 5 Handle

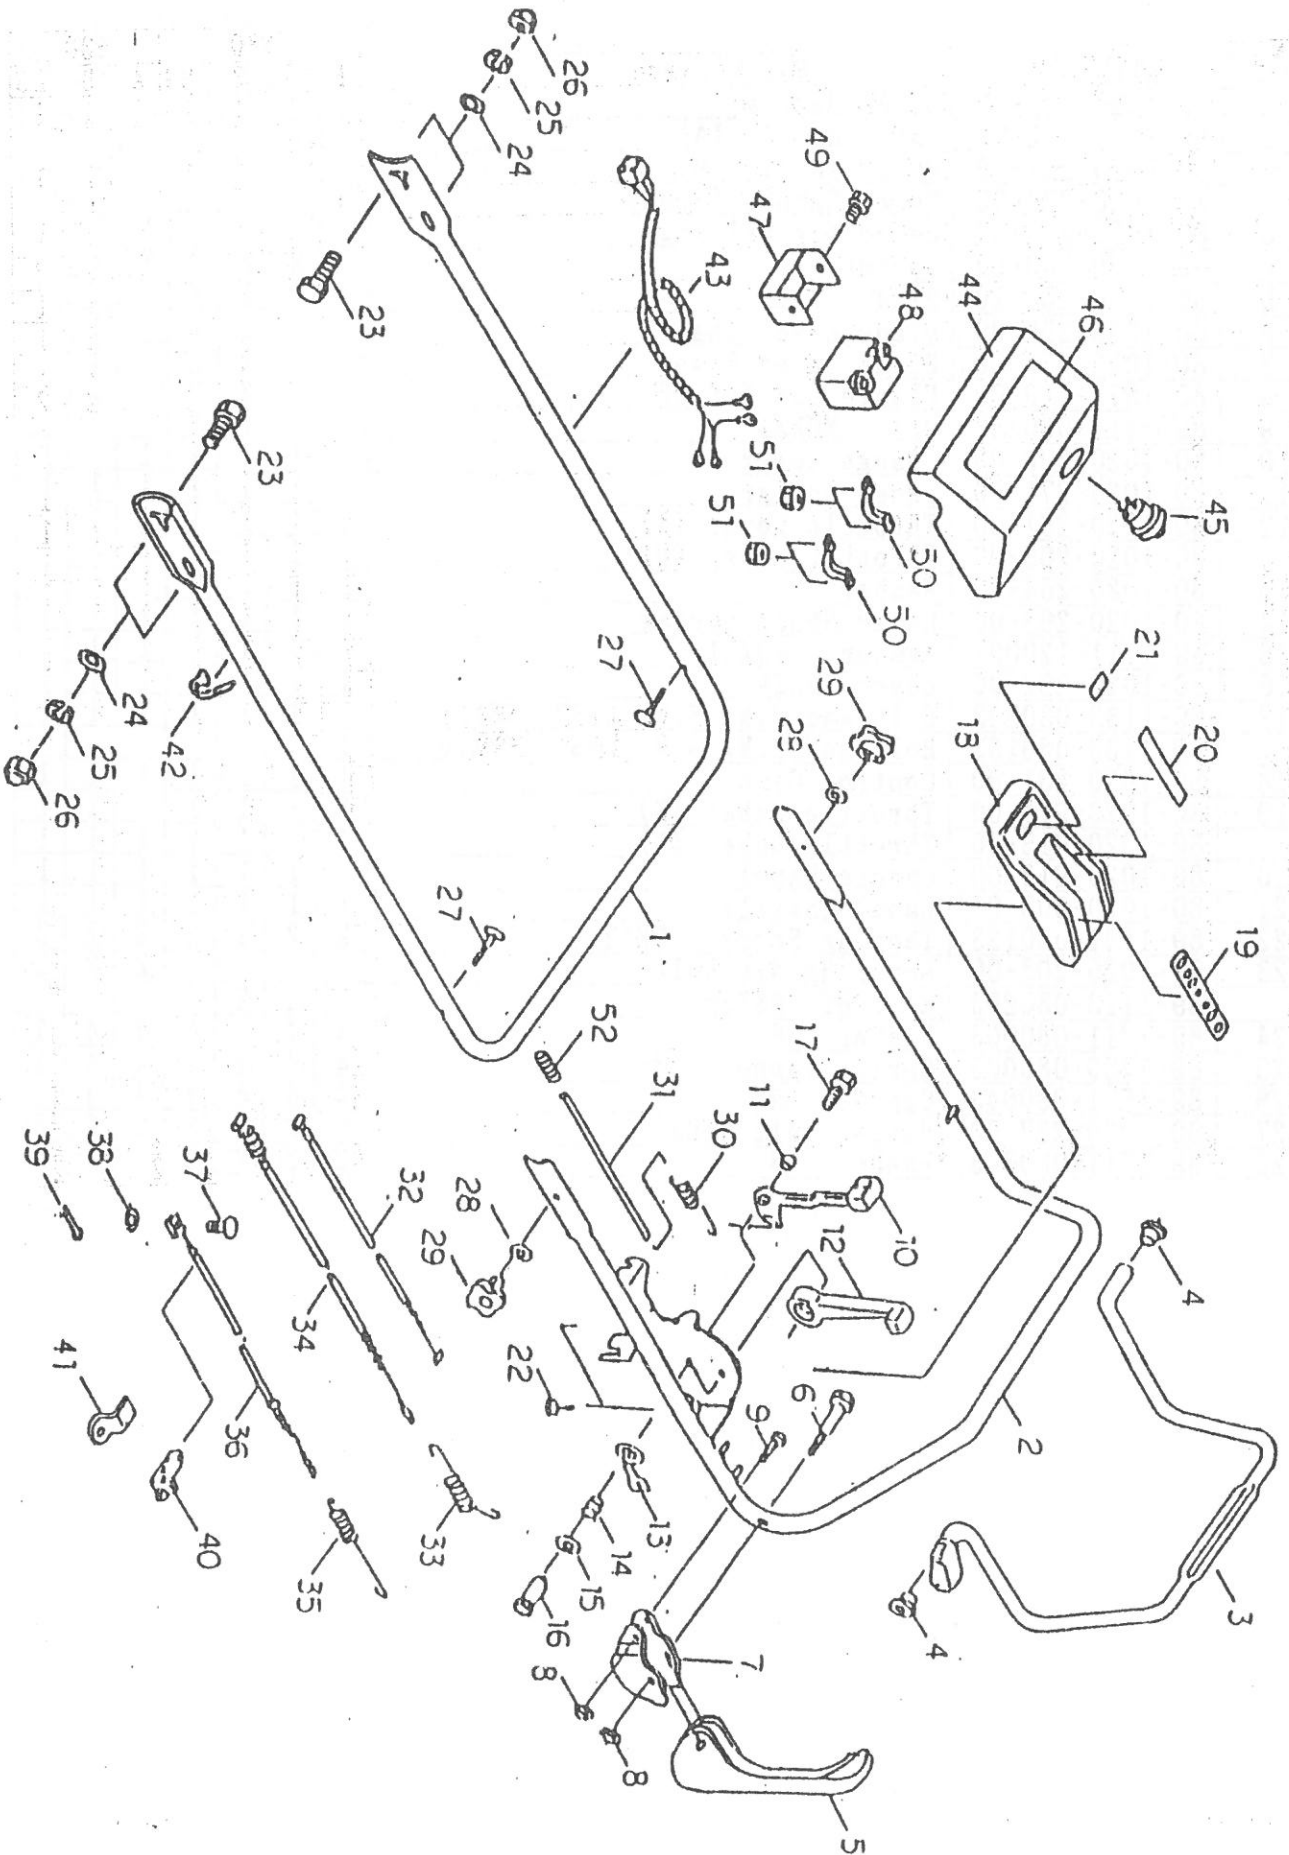

E HANDLE


No.	Parts No.	Parts Name	480				530		
			P	A	B	BS	A	B	BS
29	80-1020-228-10	Knob Nut M8	2	2	2	2	2	2	2
30	80-1020-967-00	Change Spring		1	1	1	1	1	1
31	83-1020-936-00	Change Wire <i>CABLE Accelereur Wette</i>		1	1	1	1	1	1
32	83-1020-952-00	Throttle Wire (K)	1	1	1	1	1	1	1
	83-1020-955-00	Throttle Wire (H) <i>CABLE Accelerat.</i>	1	1	1	1	1	1	1
33	80-1020-966-10	Clutch Spring		1	1	1	1	1	1
34	83-1020-932-00	Clutch Wire <i>CABLE Traction</i>		1	1	1	1	1	1
35	80-1020-968-10	Blade Clutch Spring			1	1		1	1
36	83-1020-945-00	Blade Wire <i>CABLE RetoSTOP</i>			1	1		1	1
37	89-2181-060162	Pin 6X16			1	1		1	1
38	89-1711-060002	Washer 6			1	1		1	1
39	89-2120-200152	Split Pin 2X15			1	1		1	1
40	80-1020-717-00	Blade Wire Setting						1	1
41	80-1010-717-00	Blade Wire Setting			1	1			
42	80-1210-968-00	Wire Band	2	2	2	2	2	2	2
43	80-1020-971-00	Wire Assembly				1			1
44	80-1020-291-00	Control Box				1			1
45	80-1020-972-00	Switch (B17590-00-00)				1			1
46	80-1020-902-00	Label				1			1
47	80-1020-292-00	Battery Holder				1			1
48	80-1020-975-00	Battery (FT4L-12B)				1			1
49	89-1133-060163	Bolt and P.W. S.W. ASSY M6X16				2			2
50	80-1020-980-00	Cramp 22				2			2
51	89-1557-060003	F-Nut M6				4			4
52	80-1020-969-00	Change Return Spring		1	1	1	1	1	1

Fig. 6 Blade, Bag

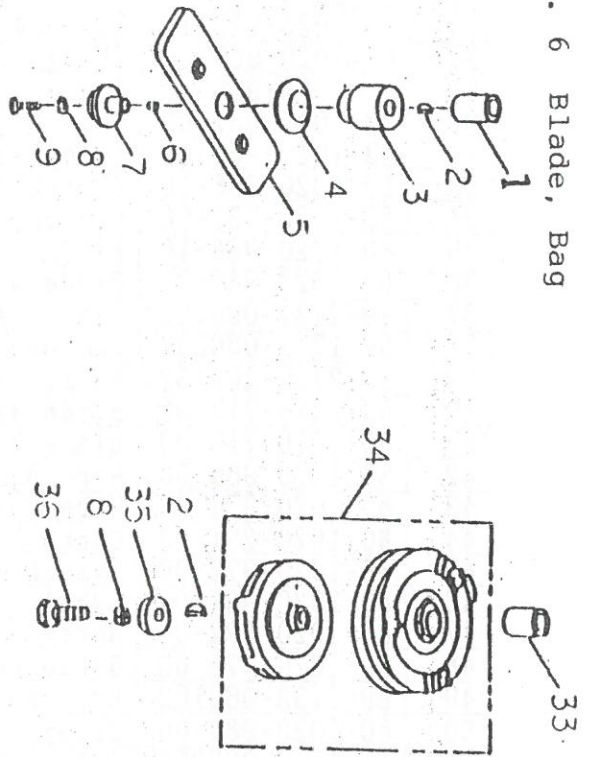


TYPE A.

TYPE B (FC150V)

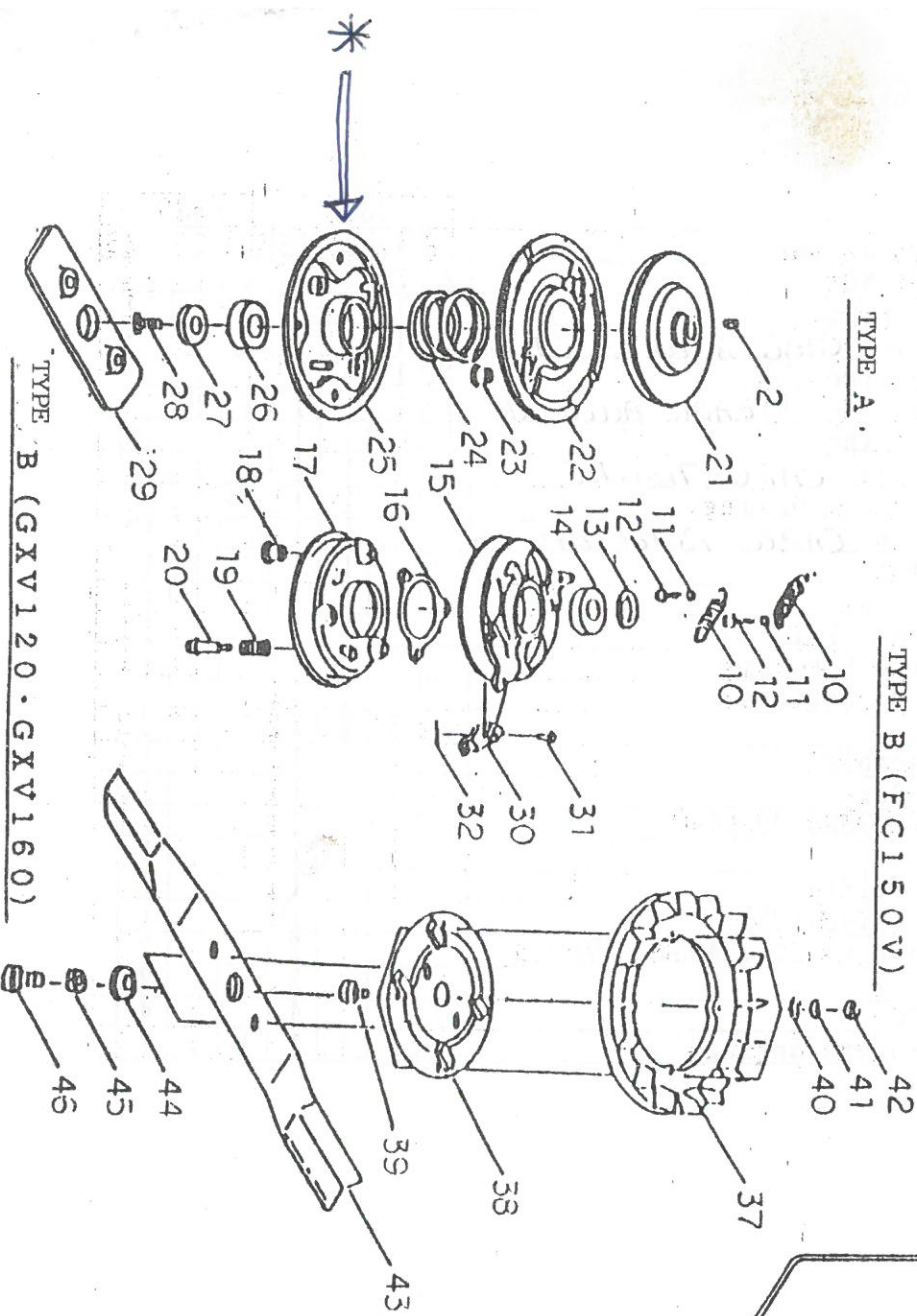

TYPE B (GXV120·GXV160)

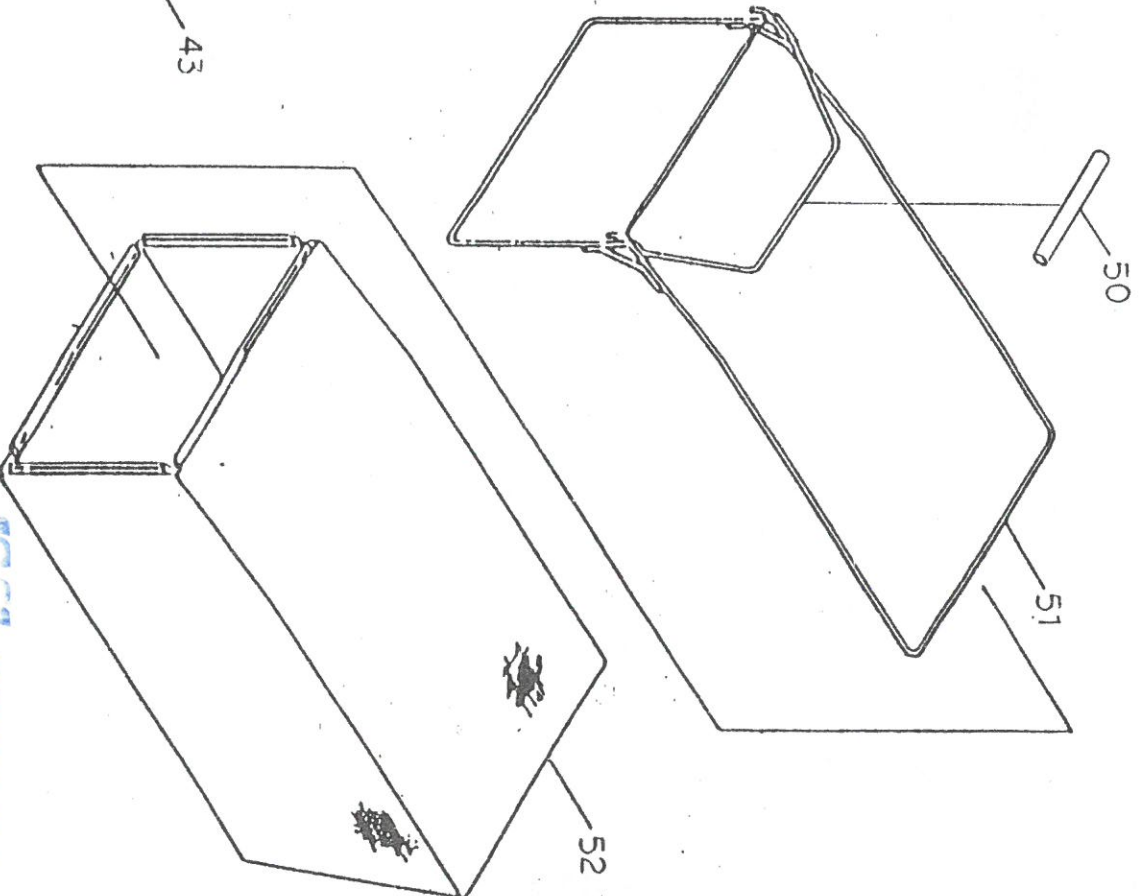

SAINT-JACQUES S.A.

B.P. 103

3521 SAINT-JACQUES CEDEX

Tél. 76 75 48 86

Fax 76 75 69 65


F BLADE AND BAG

No.	Parts No.	Parts Name	480				530		
			P	A	B	BS	A	B	BS
1	80-1020-808-10	Blade Bracket Spacer (K) 30L	1	1			1		
	80-1020-816-00	Blade Bracket Spacer (H) 20L	1	1			1		
2	80-1020-892-00	Woodruff Key 4X16	1	1	1	1	1	1	1
3	80-1020-833-00	Blade Bracket Reciver (K)	1	1			1		
	80-1020-837-00	Blade Bracket Reciver (H)	1	1			1		
4	89-1852-280001	Belleville Spring H28	1	1			1		
5	80-1020-807-10	Blade Bracket	1	1			1		
6	89-2151-040150	Key 4X15 (K)	1	1			1		
	89-2151-040090	Key 4X9 (H)	1	1			1		
7	80-1020-835-00	Blade Bracket Stopper (K)	1	1			1		
	80-1020-836-00	Blade Bracket Stopper (H)	1	1			1		
8	89-1750-100003	Spring Washer 10	1	1	1	1	1	1	1
9	83-1020-115-00	Bolt 3/8-24X50UNF (K)	1	1			1		
	89-1254-100402	Flange Bolt M10X1.25X40 (H)	1	1			1		
10	80-1020-871-00	Clutch Return Spring (H)			2	2		2	2
11	80-1020-872-00	Collar (H)			2	2		2	2
12	80-1020-873-00	Flange Bolt (H)			2	2		2	2
13	80-1020-874-00	Thrust Washer (H)			1	1		1	1
14	80-1020-875-00	Ball Bearing (H) 6204 LU			1	1		1	1
15	80-1020-876-00	Blade (H)			1	1		1	1
16	80-1020-877-00	Ball Retainer (H)			1	1		1	1
17	80-1020-878-00	Blade Disc (H)			1	1		1	1
18	80-1020-879-00	Bush (H)			3	3		3	3
19	80-1020-881-00	Spring (H)			3	3		3	3
20	80-1020-882-00	Blade Setting Bolt (H)			3	3		3	3
21	80-1020-883-00	Drive Disc (H)			1	1		1	1
22	80-1020-884-00	Driven Disc (H)			1	1		1	1
23	80-1020-885-00	Bush (H)			2	2		2	2
24	80-1020-886-00	Clutch Spring (H)			1	1		1	1
25	80-1020-887-00	Ball Control Plate (H)			1	1		1	1
26	89-3115-062044	Ball Bearing 6204 2RS (H)			1	1		1	1
27	83-1020-323-00	Washer 10X30t4.5 (H)			1	1		1	1
28	89-1254-100252	Flange Bolt M10X1.25X25 (H)			1	1		1	1
29	80-1020-843-00	Blade Spacer (H)			1	1		1	1

Roulement Ref. 80.1020.875.00


= 91103-VA4-003

Fig. 6 Blade, Bag

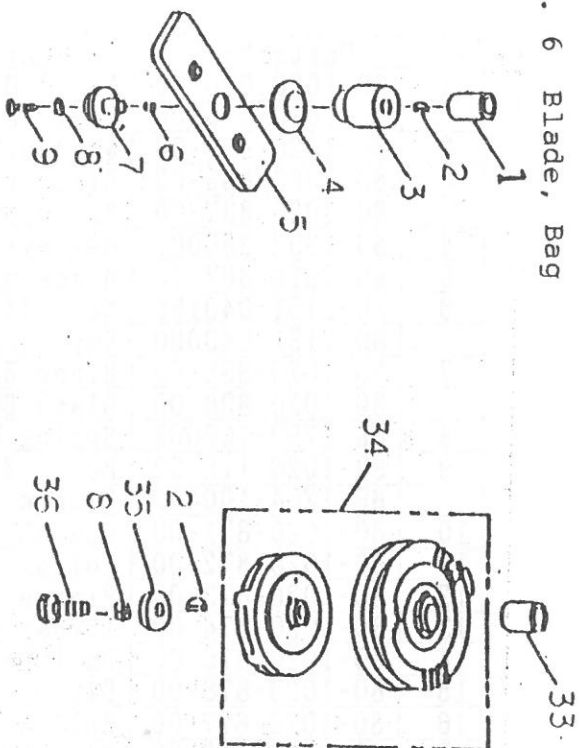

TYPE A.

TYPE B (FC150V)

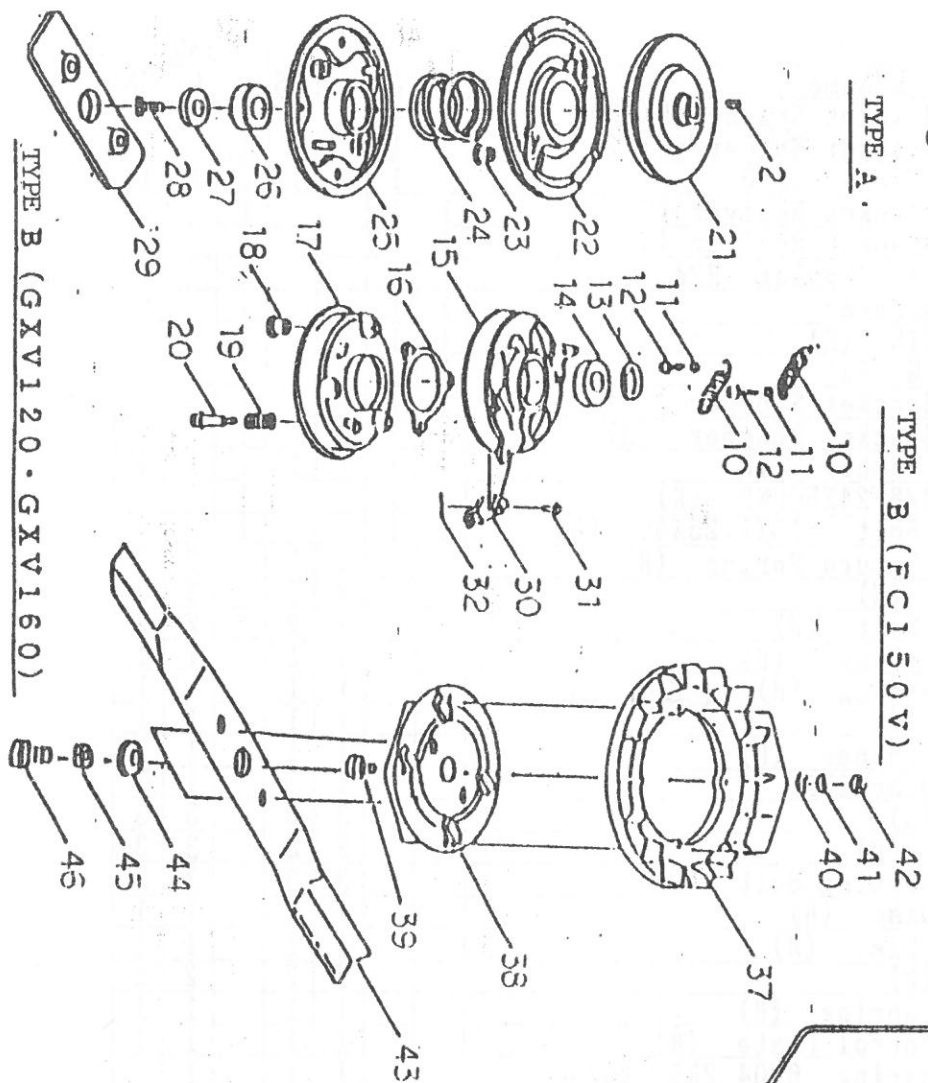

TYPE B (GXV120·GXV160)

